

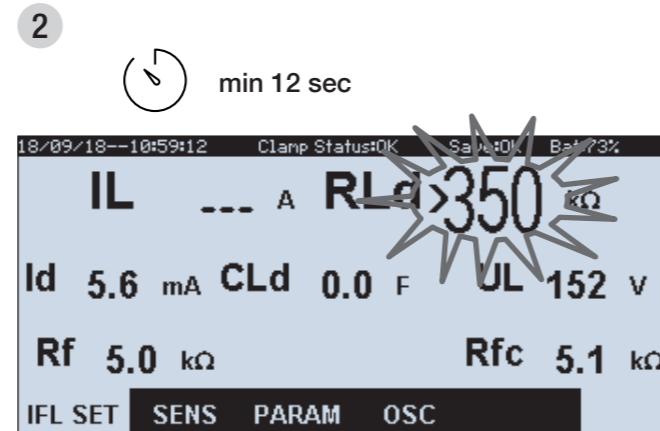
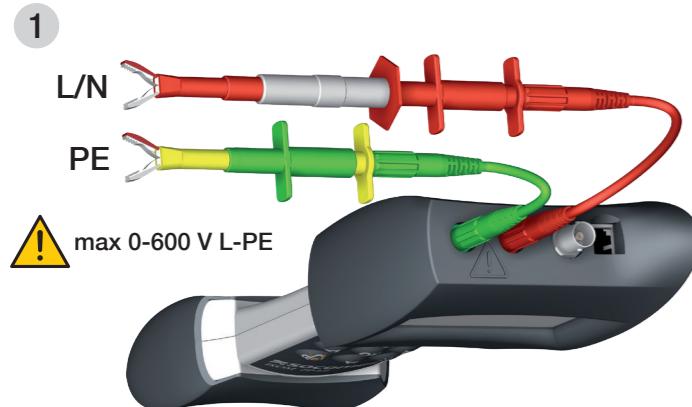


5 ISOM FP-60 R_{Ld} value


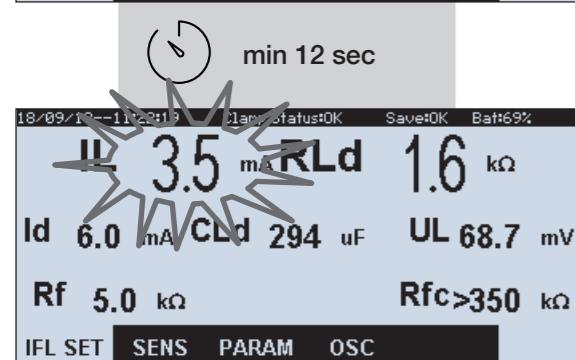


6 ISOM FP-60 I_L Alarm

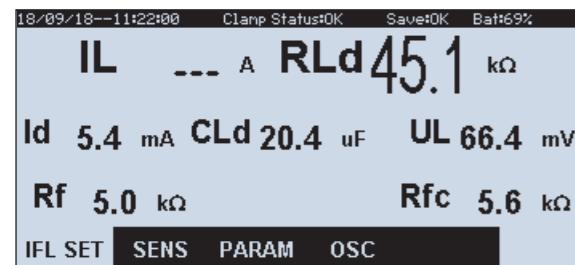

OK !

7 ISOM FP-60 menus

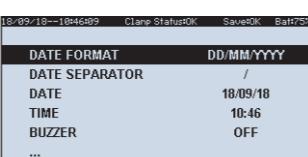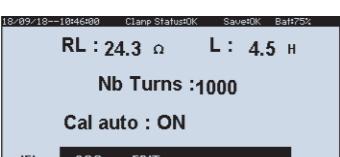

IFL SET

SENS

PARAM

OSC

551166B

ISOM PS-62

PORTABLE INSULATION FAULT
LOCATION SYSTEM



Portable Insulation
Fault Location System
ISOM PS-62
4725 0211



Portable Locating
Current Injector
ISOM JP-62
4725 0221
Cables kit for
ISOM JP-62
4725 0293



Portable Insulation
Fault Locator ISOM
FP-60
4725 0230
Cables kit for
ISOM FP-60
4725 0291



Full user
manual:
www.socomec.com/operating-instructions
www.socomec.com




Portable sensor
ISOM P-20
4794 1020



Optional :
Portable sensor
ISOM P-52
4794 1052



Optional :
Portable sensor
ISOM P-120
4794 1120

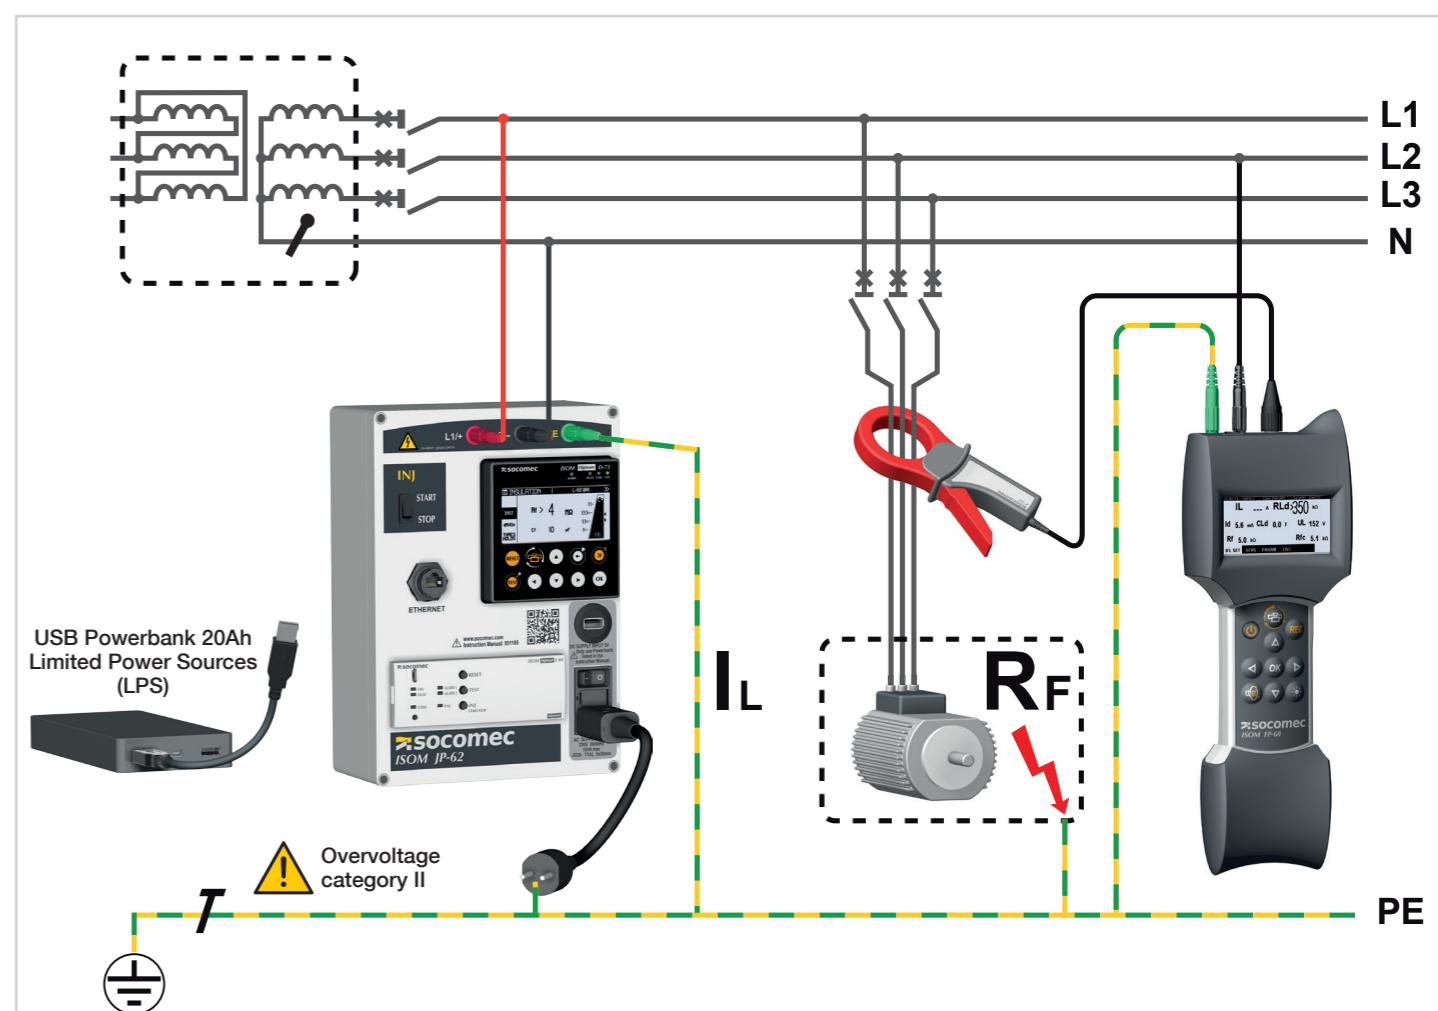

USB Powerbank 20Ah
Limited Power Sources
(LPS)



Overvoltage
category II




Technical characteristics:

- Overvoltage category III
- pollution degree 2
- altitude ≤2000m
- temperature -5°C to +45°C


Disconnect existing IMD and LCI before operation
Handle FP-60 with protection bumpers

1 ISOM JP-62 Network connection

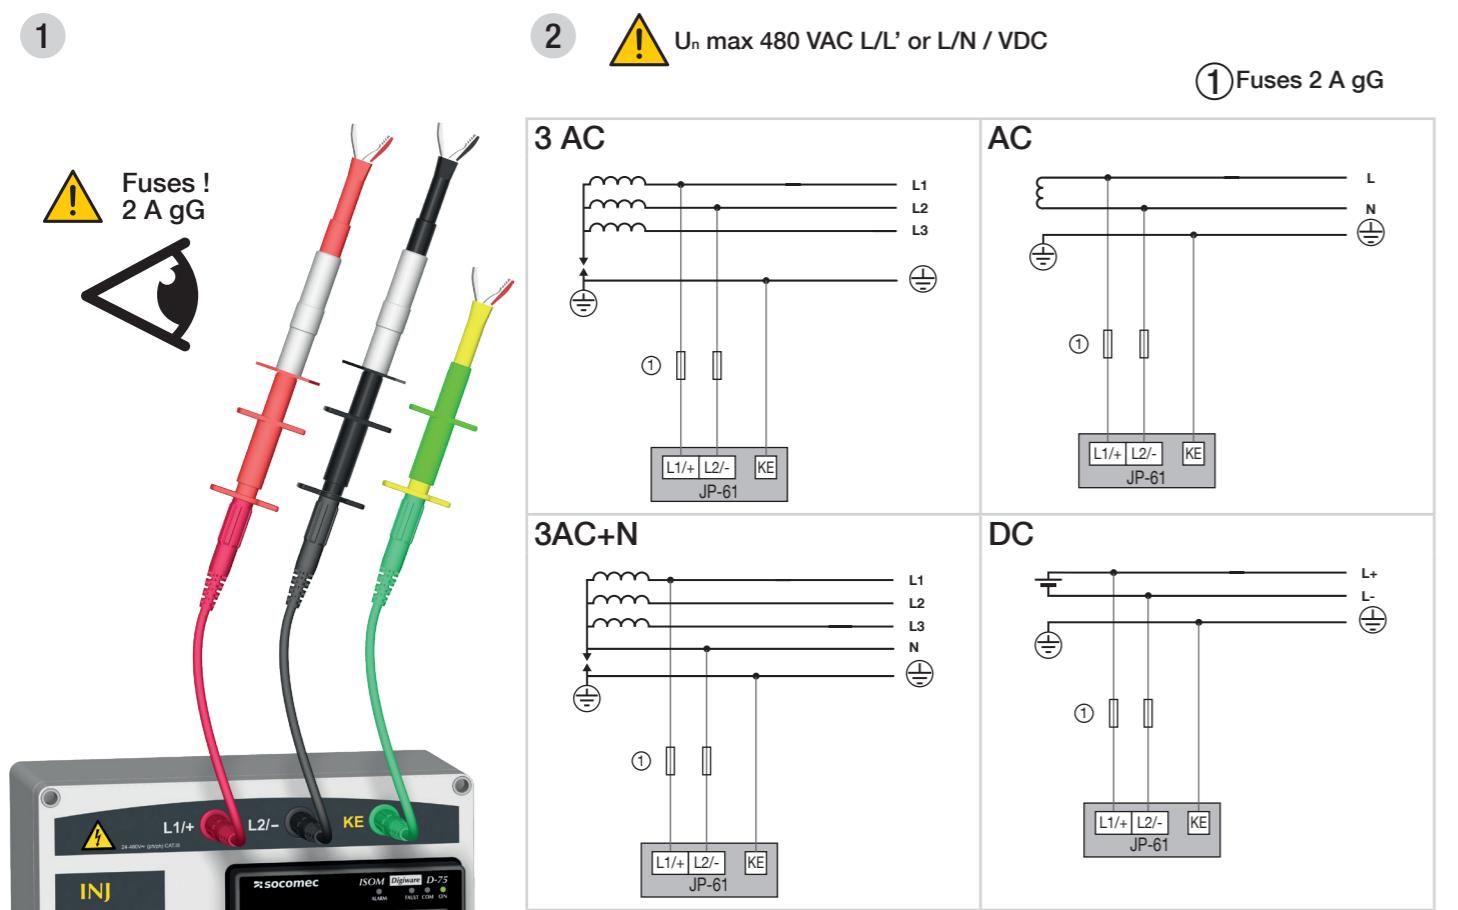


2 ISOM JP-62 Configuration & Operation

1 Profile configuration

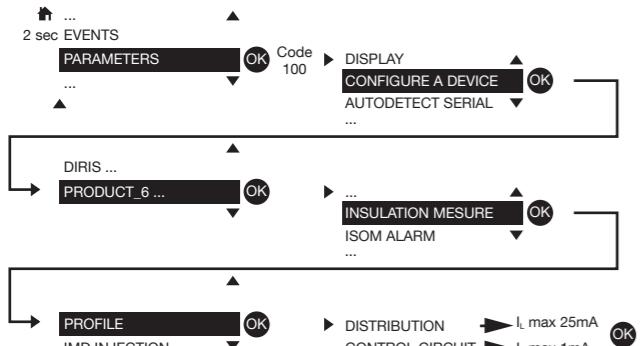


2 Voltage U_n configuration

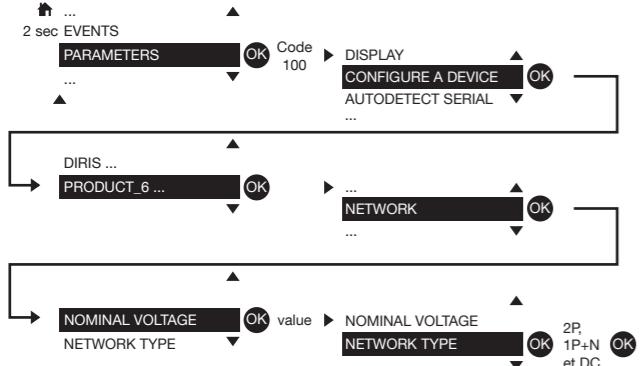

3 Injection activation



3 ISOM P-xx Sensor connection

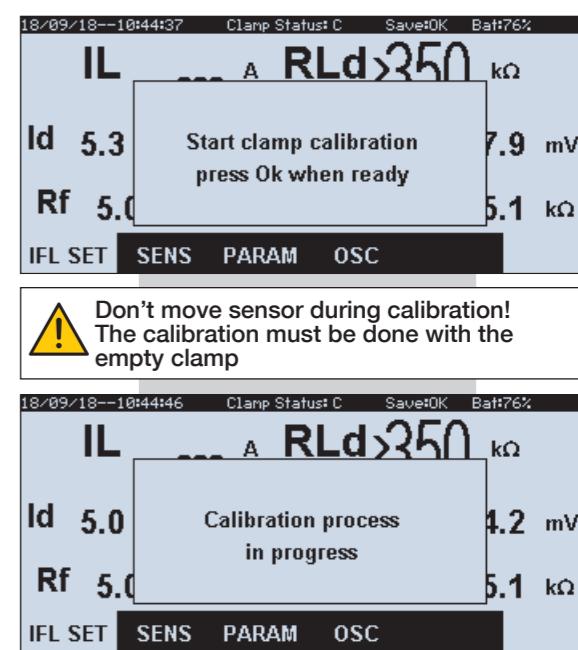

- ✓ Clamp Status:OK
- ✗ Clamp Status:D

4 ISOM P-xx Sensor handling

