


3 Current sensors

Current sensors TE / TR / TF

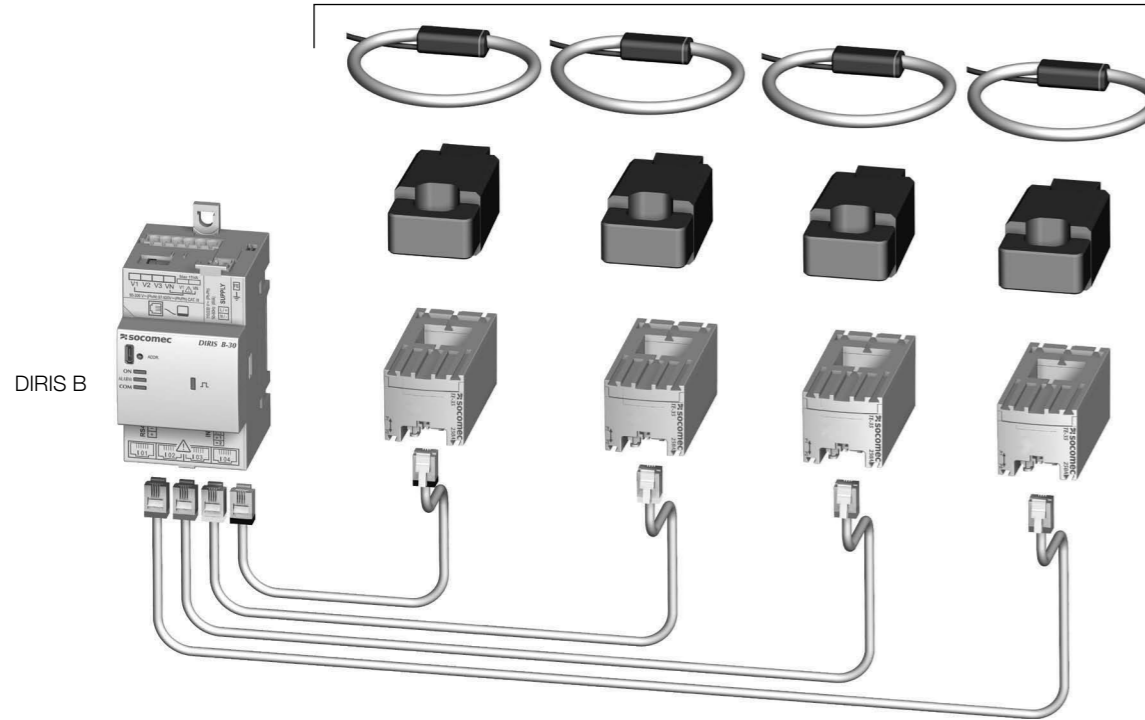


- Recommendations:**
- Use Socomec Current Sensors cables type RJ12 straight, twisted pairs, non-shielded, 300V cat.III. rated, -20 / +70 °C.
 - It is recommended to mount all the current sensors with the same orientation.
 - Always start with current sensor input 1.


6 Main network connections and loads

(1) See step 4


CT = Current sensor $\text{3}\sim$ = Balanced load $\text{1}\sim$ = Unbalanced load
Fuse 0.5 A gG / BS 88 2A gG / 0.5 A class CC

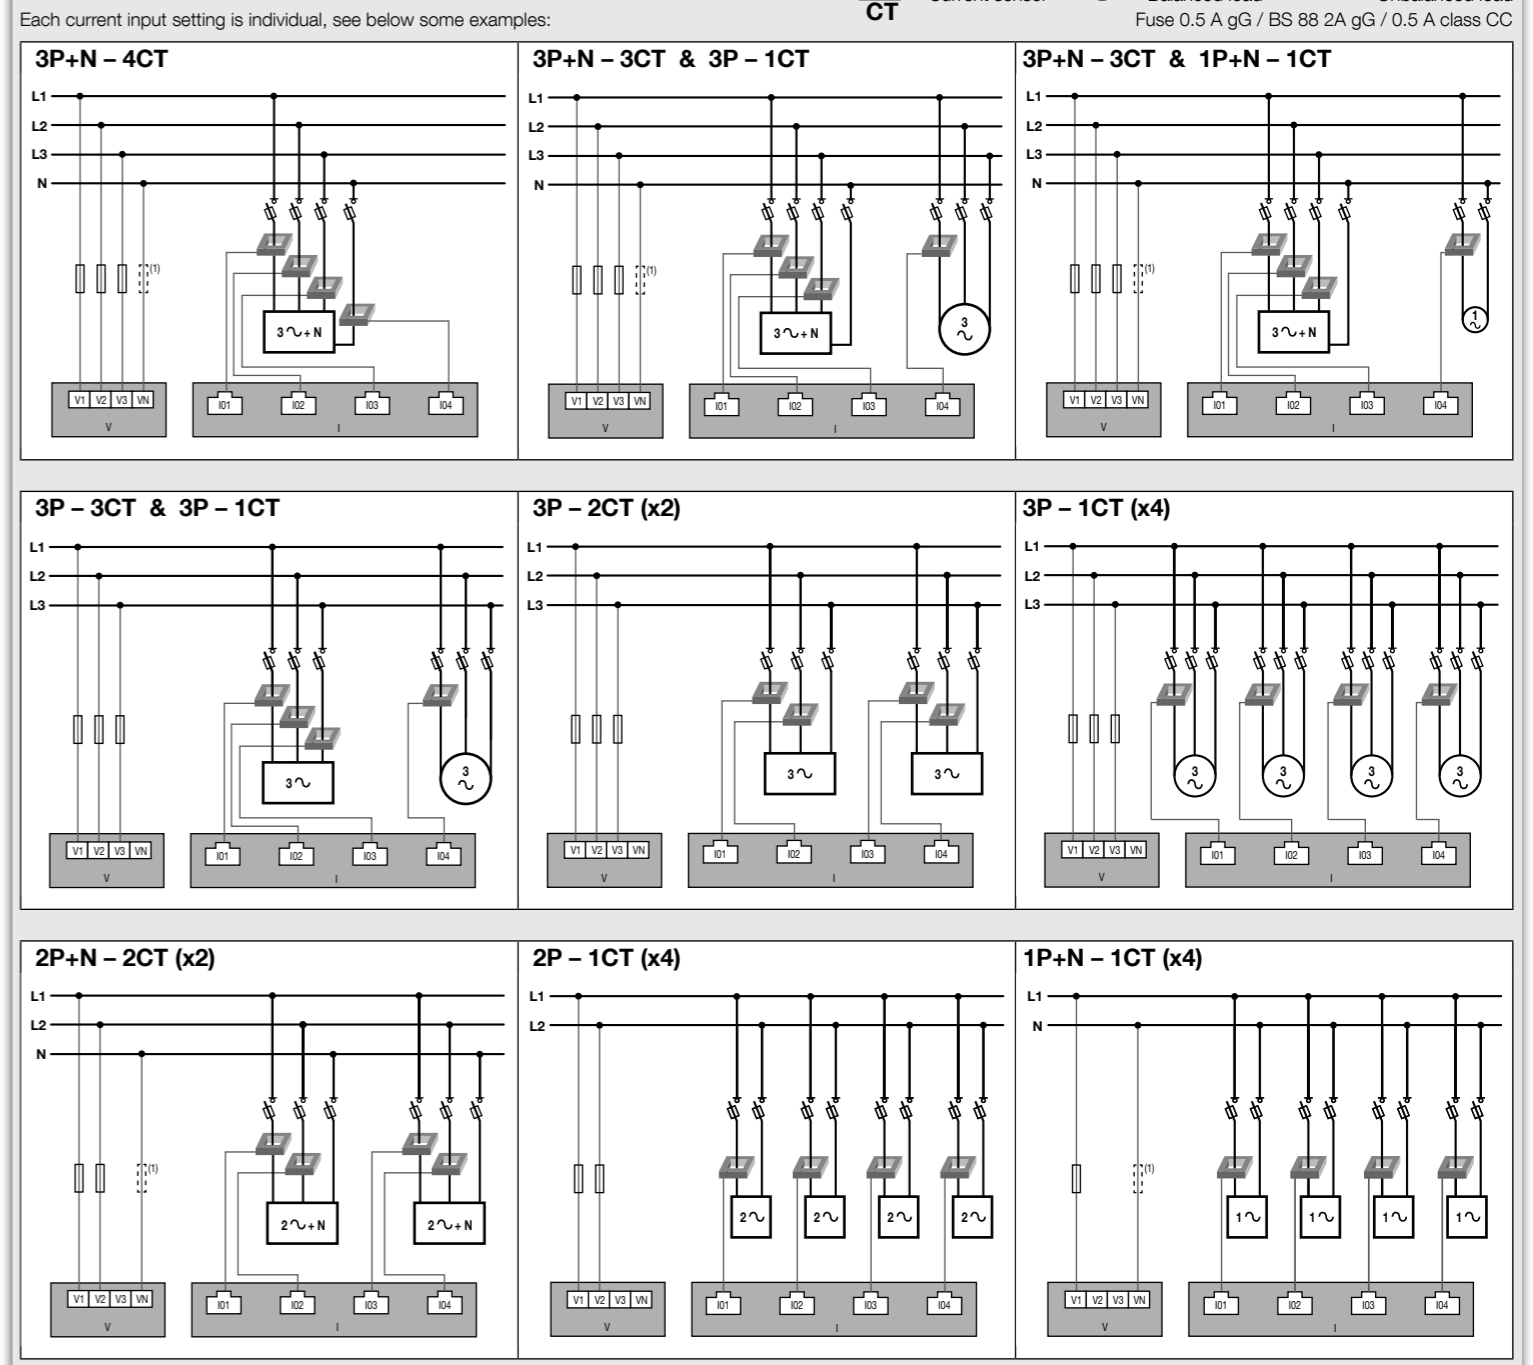

4 Auxiliary supply

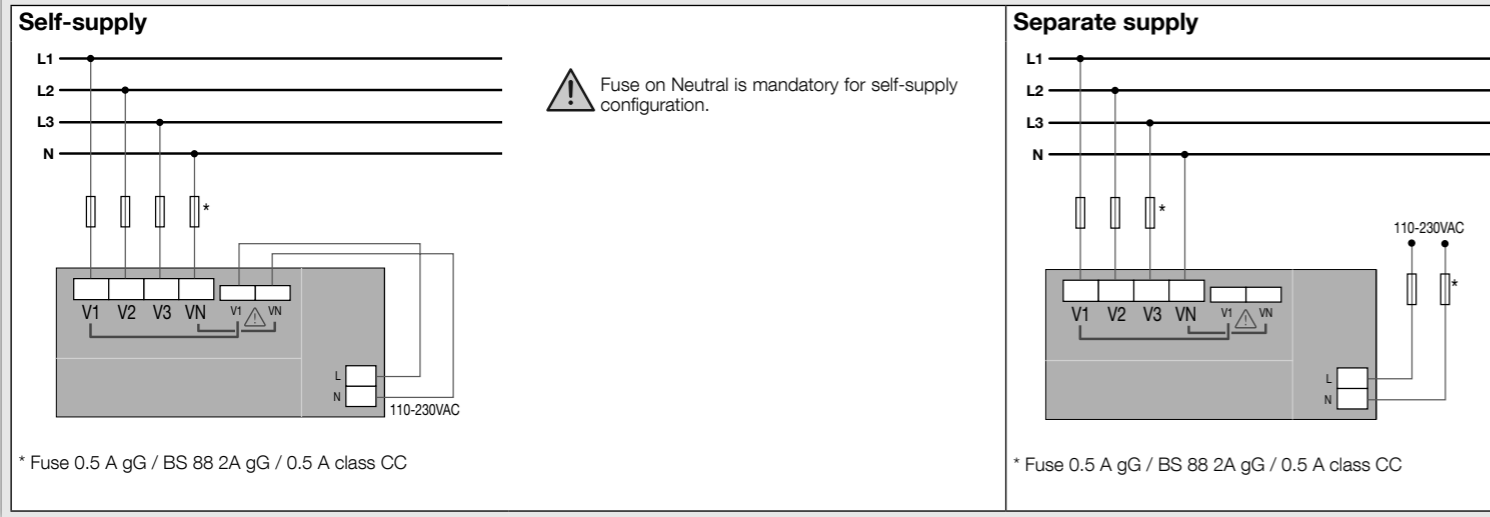

5 Inputs

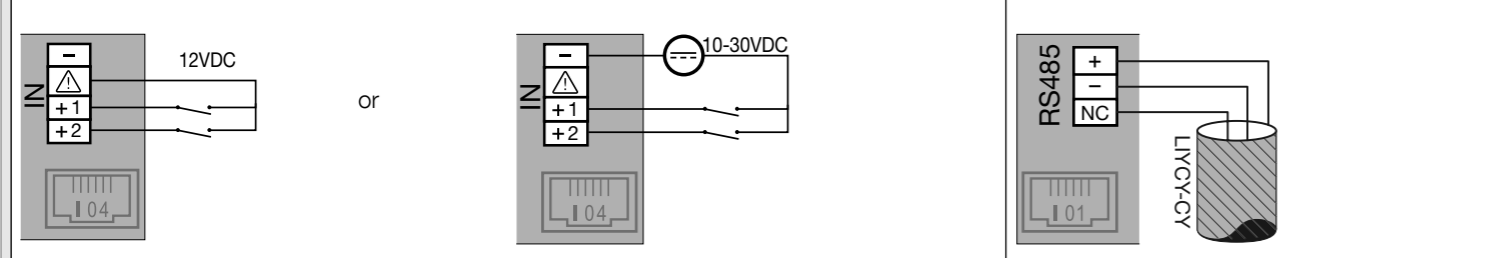

7 Configuration

