



## 4 Dimensions (in/mm)

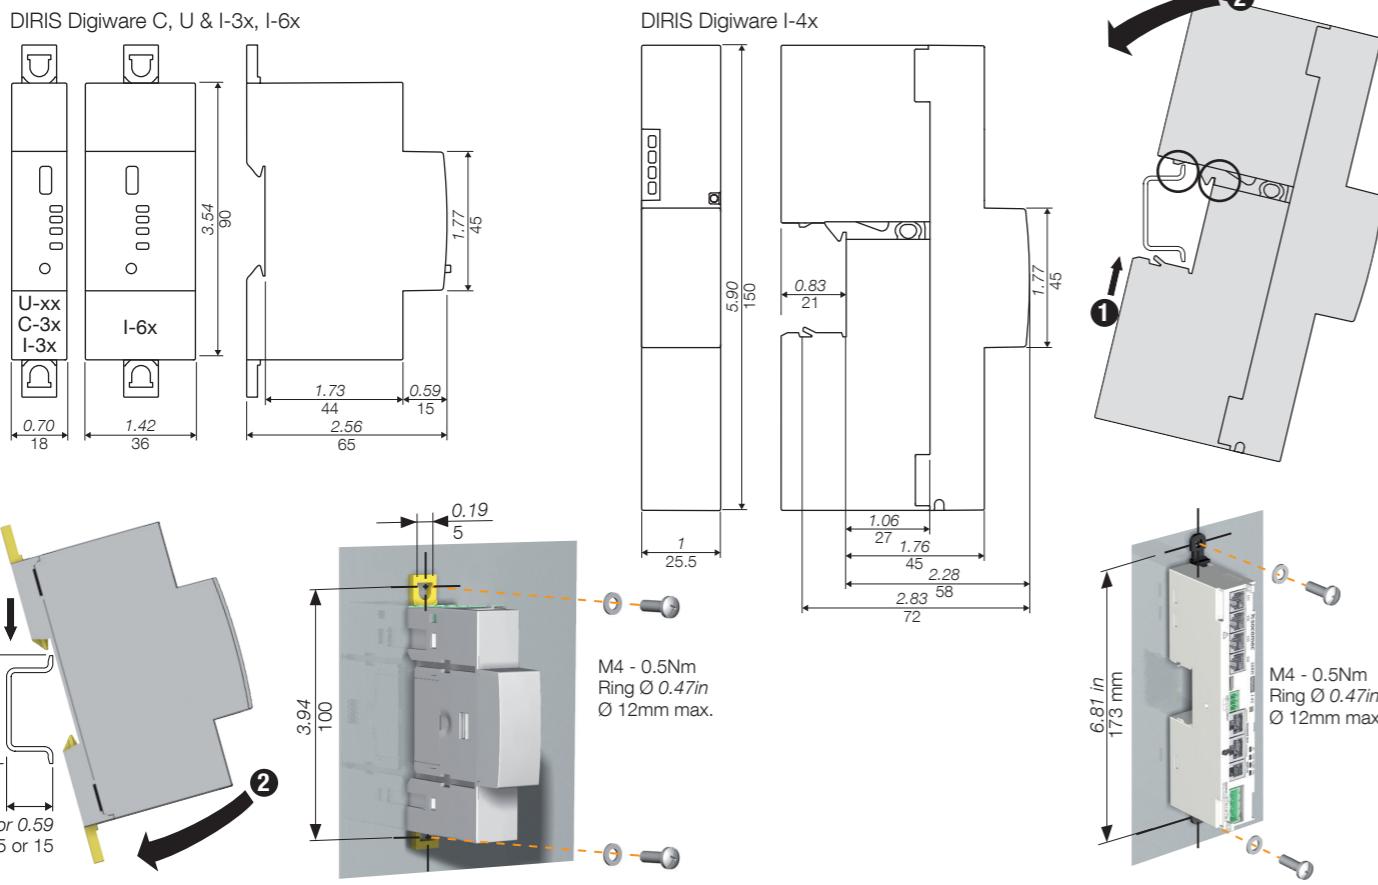


## 5 Current sensors

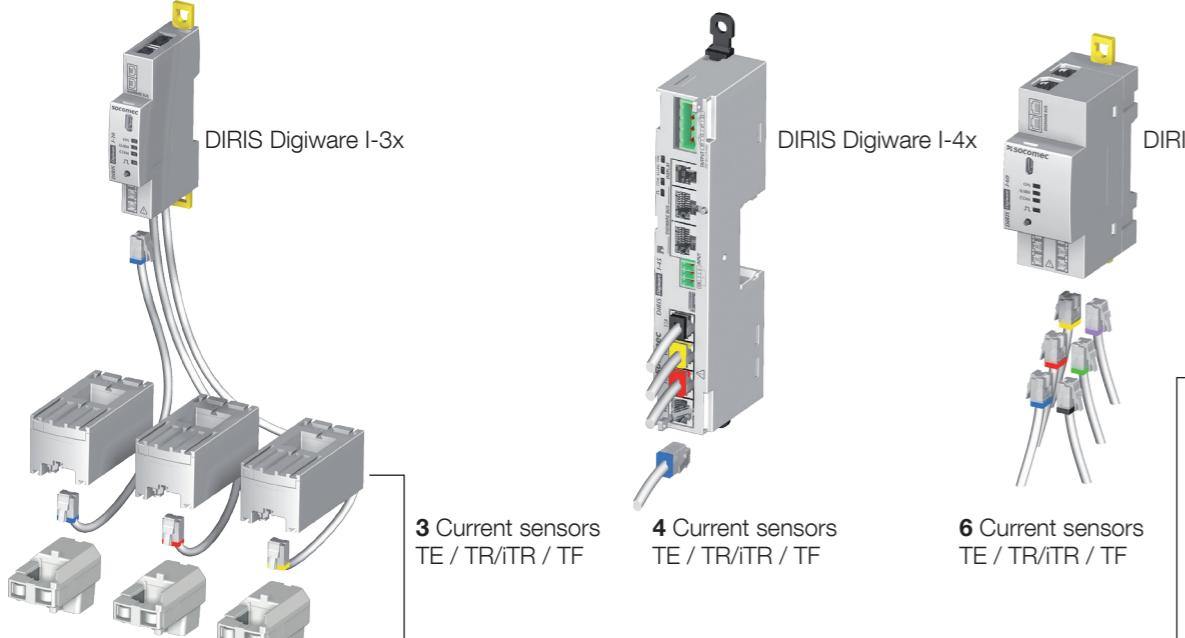

**Recommendations:**

- Use only **RJ12 Socomec Current Sensors cables** (type RJ12 straight, twisted pairs, unshielded, 600V cat. III, rated, -10 / +70 °C).
- It is recommended to mount all the current sensors with the same orientation.
- Always start with current sensor input I01.

## 6

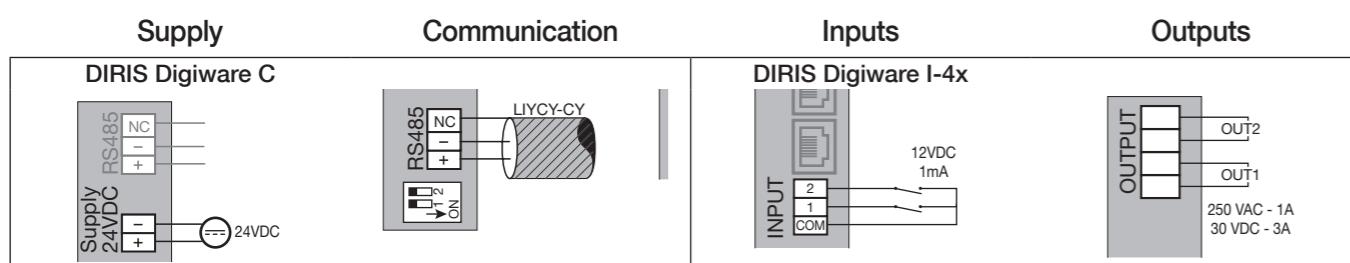

## QUICK START GUIDE

EN




## Power Monitoring System for electrical installations

### DIRIS Digiware




## 1 System wiring – exploded view

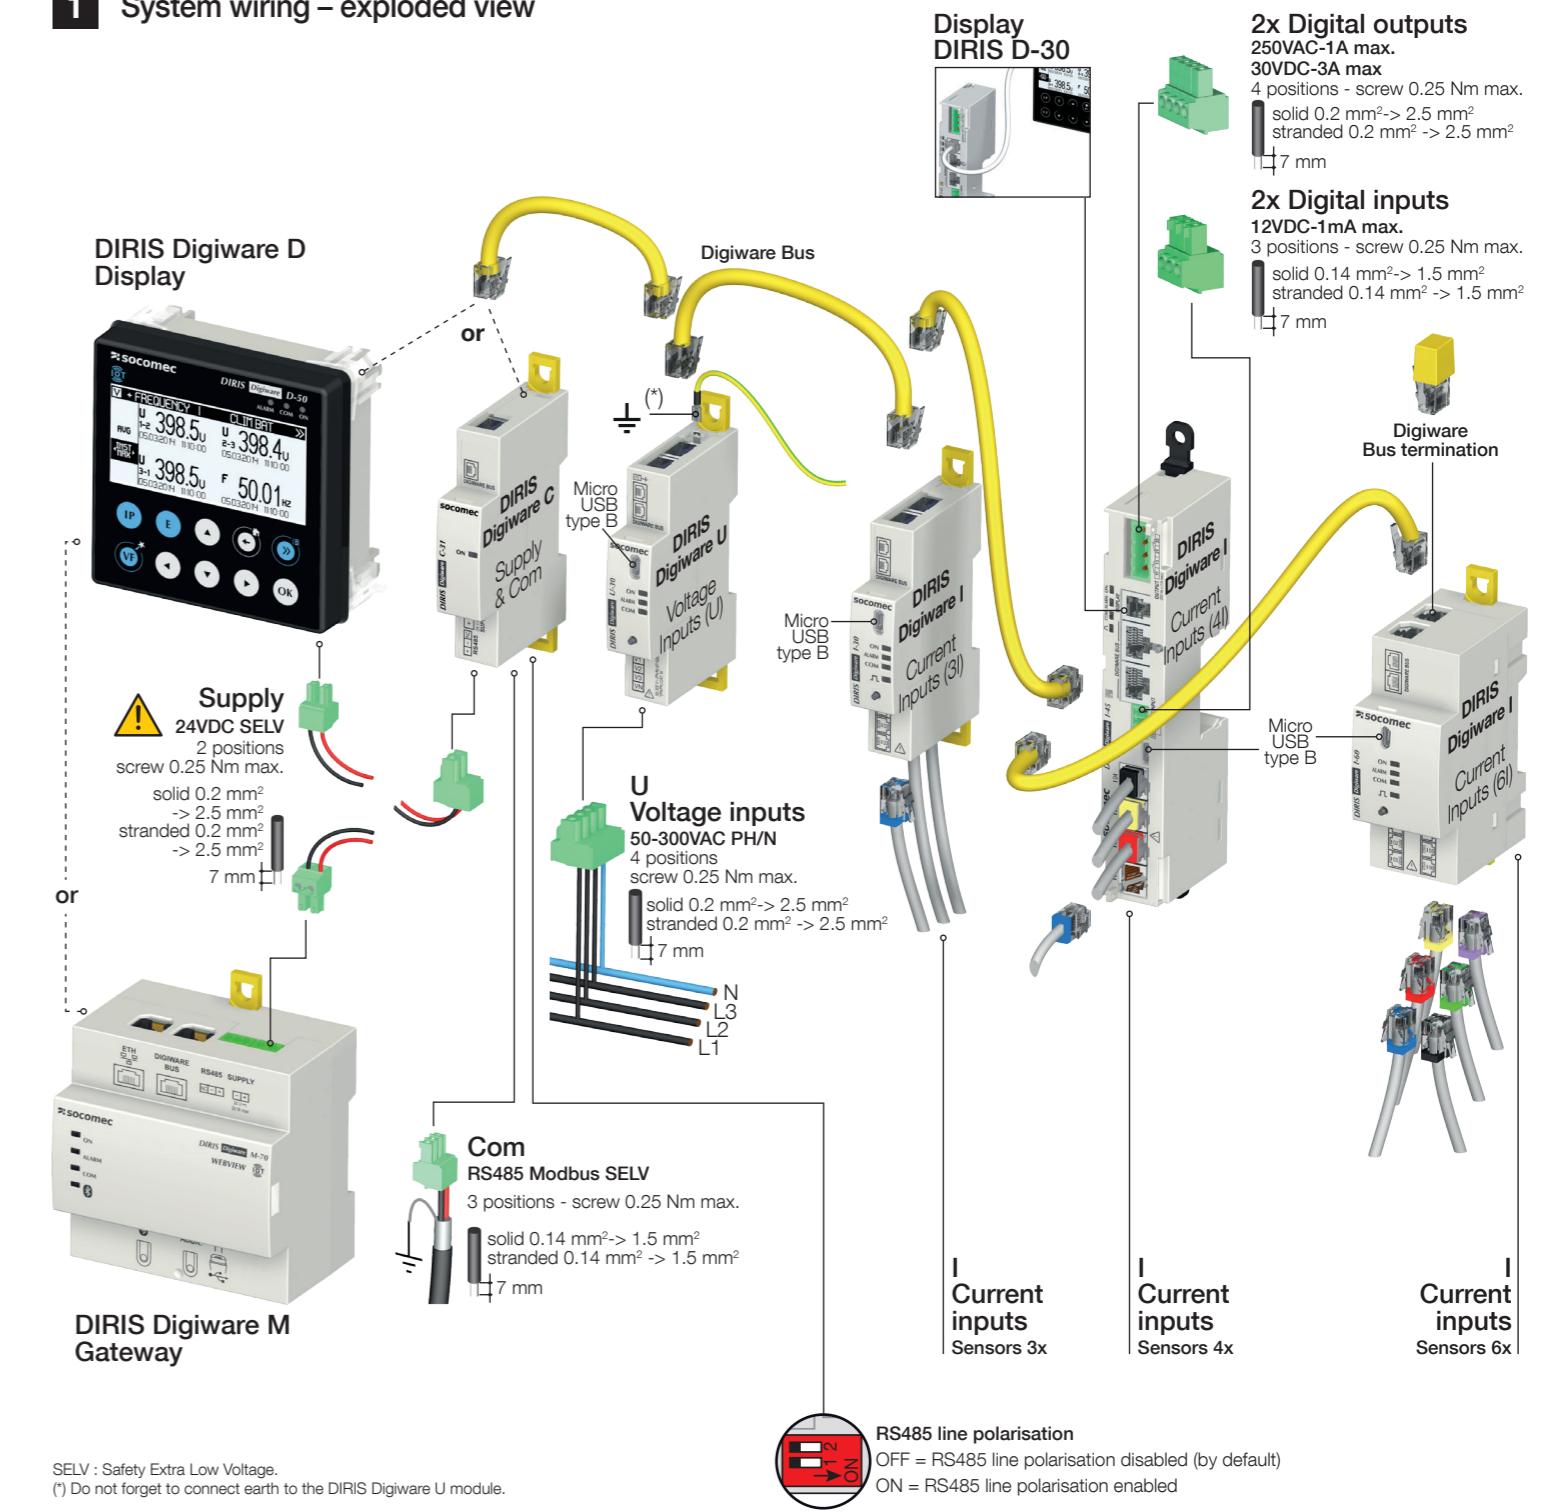

## Main network connections and loads

**DIRIS Digiware I-3x**


Each current input setting is individual, see below some examples:

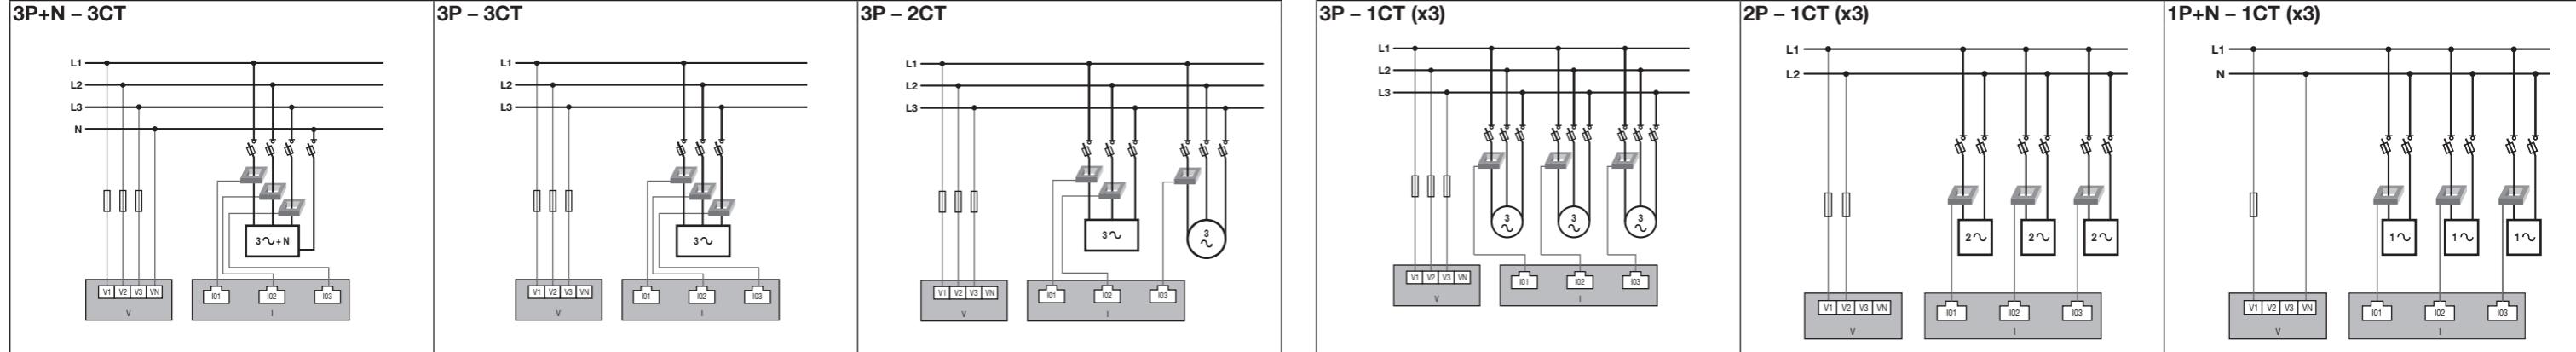

## Main network connections and loads

**DIRIS Digiware I-4x**


Each current input setting is individual, see below some examples:

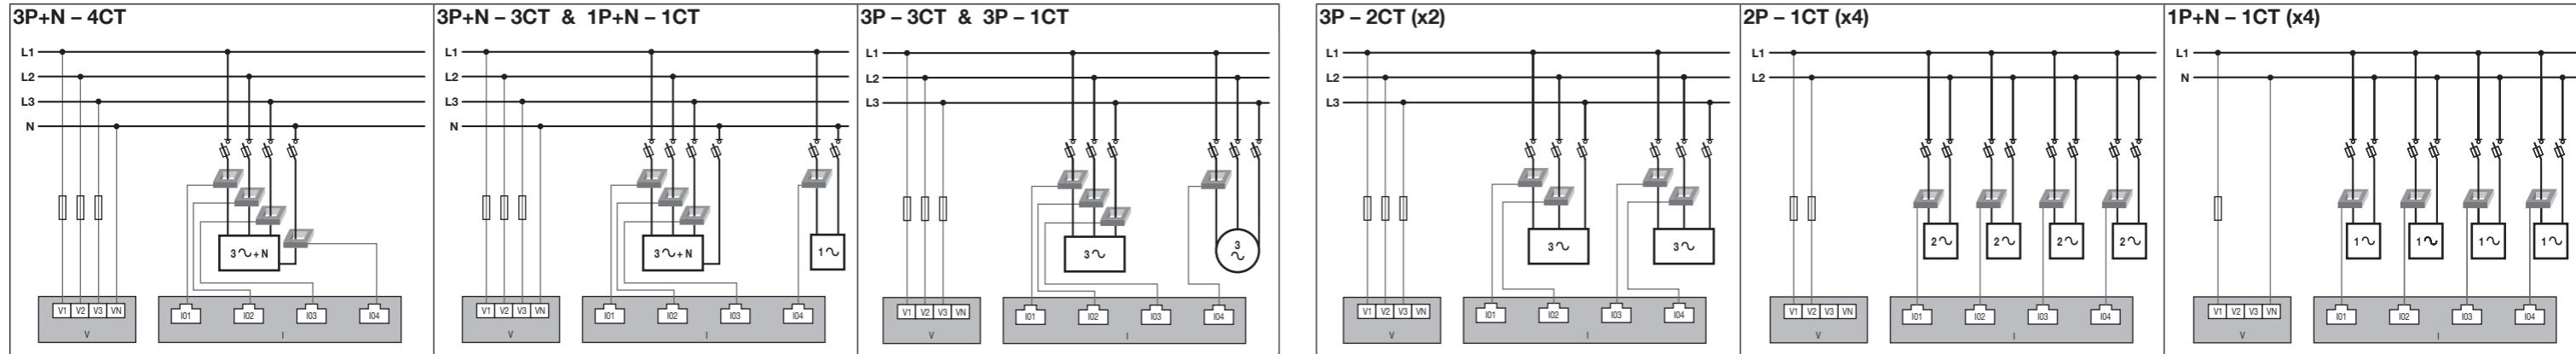

## Main network connections and loads

**DIRIS Digiware I-6x**


Each current input setting is individual, see below some examples:

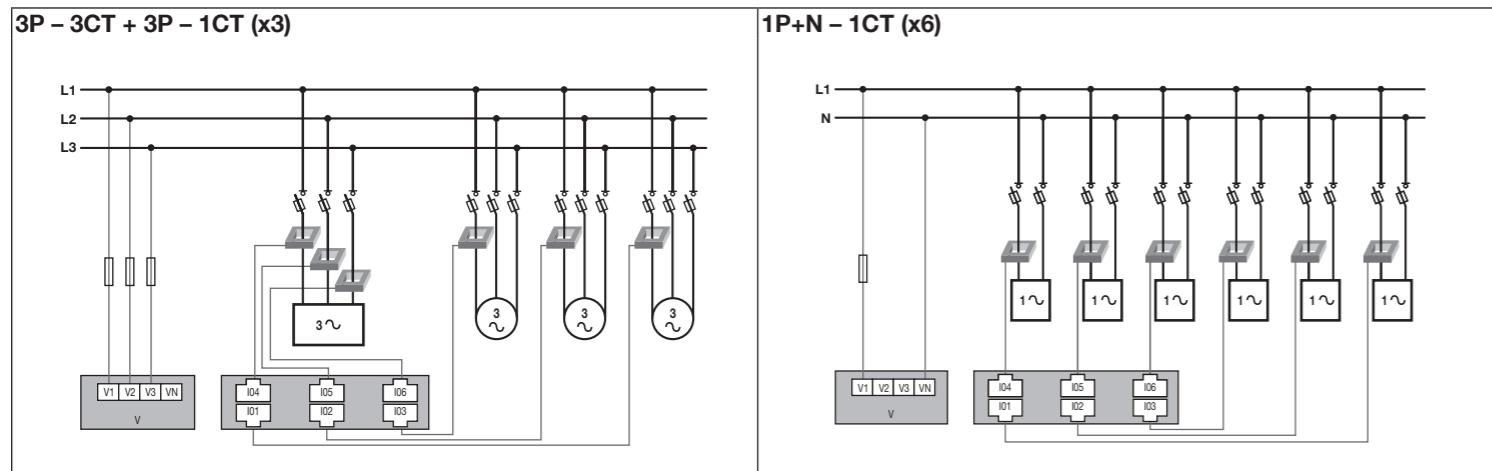

## 3 Configuration

Easy Config System Software

Ethernet

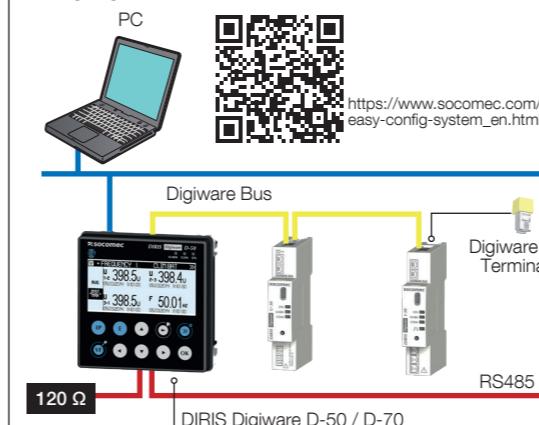

Display DIRIS Digiware D  
Digiware Bus

