


MODULYS XM

100 to 500 kW for parallel architecture
Redundant Modular UPS

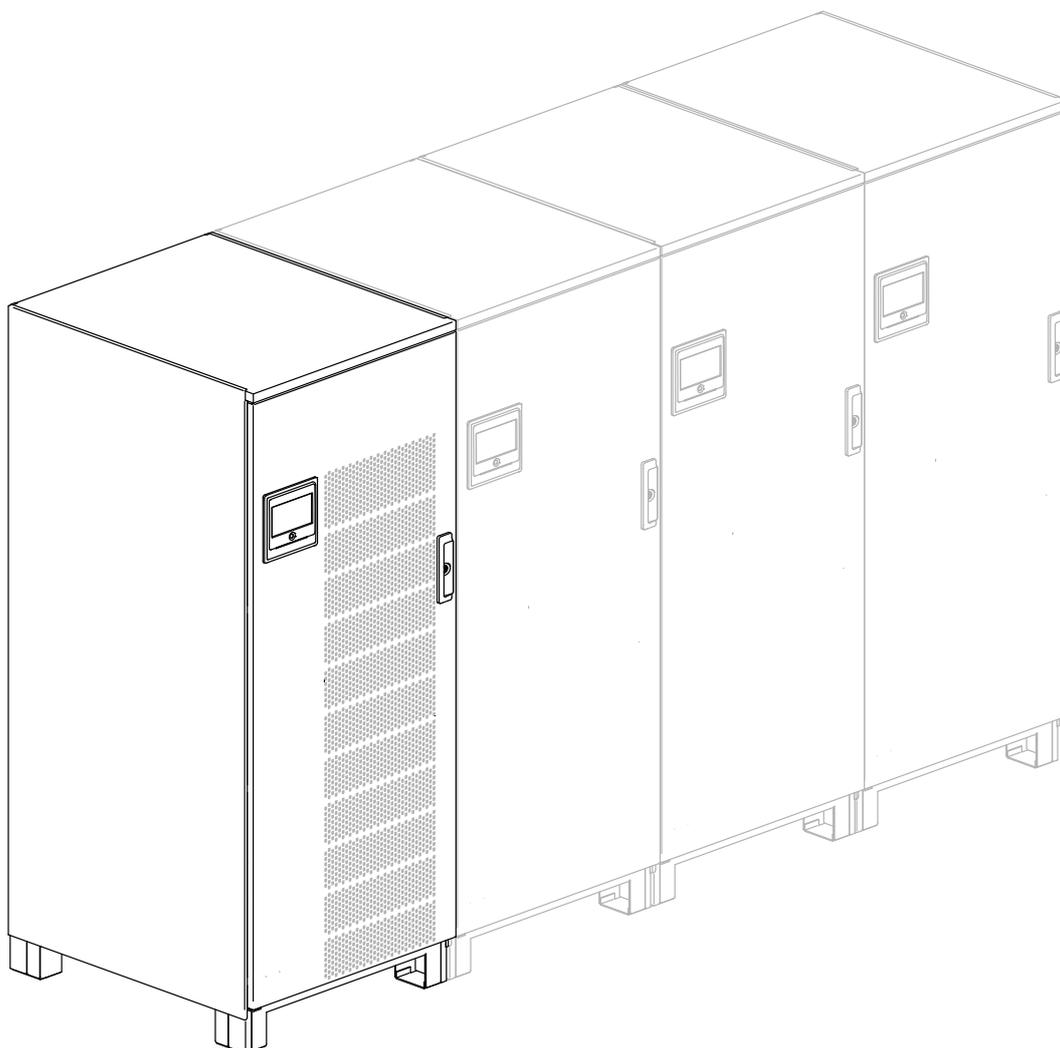

Socomec Resources Center
To download, brochures, catalogues
and technical manuals

CONTENTS

| | |
|--|----|
| 1. CERTIFICATE AND CONDITIONS OF WARRANTY | 4 |
| 2. SAFETY STANDARDS | 5 |
| 2.1. Description of symbols | 6 |
| 2.2. Abbreviations | 7 |
| 3.1. Environmental requirements | 8 |
| 3.2. Handling | 10 |
| 3.3. UPS fixing | 11 |
| 3.4. Top connection w/o box (extra extension optional) | 12 |
| 4. ELECTRICAL INSTALLATION | 14 |
| 4.1. UPS configuration - single unit | 14 |
| 4.1.1. Mains and Auxiliary mains connected separately (with external batteries) | 14 |
| 4.1.2. Electrical requirements - single unit | 14 |
| 4.2. UPS Configuration - parallel | 16 |
| 4.2.1. Parallel system with common upstream architecture | 16 |
| 4.2.2. Electrical requirements - Parallel system with common upstream architecture | 17 |
| 4.2.3. Parallel system with distributed upstream architecture | 18 |
| 4.3. Backfeed protection | 20 |
| 4.4. Cable positioning | 21 |
| 5. OVERVIEW | 22 |
| 5.1. Overview - Single Unit | 22 |
| 5.2. Overview - Parallel Configuration | 23 |
| 5.3. Single Unit internal wiring diagram | 24 |
| 6. CONNECTIONS | 25 |
| 6.1. Mains and auxiliary mains connected separately | 25 |
| 6.2. Mains and auxiliary mains connected together | 26 |
| 6.3. Protective earth and neutrals connected together | 26 |
| 6.4. External battery connection | 27 |
| 7. MODULE REPLACEMENT | 28 |
| 7.1. Power module insertion | 28 |
| 7.2. Power module removal | 29 |
| 7.3. Bypass module replacement | 30 |
| 8. UPS STATUS INDICATION - LED, CONTROL PANEL AND DISPLAY | 31 |
| 8.1. Led Indication | 31 |
| 8.2. Control panel | 32 |
| 8.2.1. Control panel Description | 32 |
| 8.2.2. Display description | 33 |
| 8.2.3. Menu architecture | 34 |
| 8.3. Functioning mode | 38 |
| 8.4. Status | 38 |
| 8.4.1. Status page | 38 |
| 8.5. Alarms management | 39 |
| 8.5.1. Alarm report | 39 |
| 8.5.2. Alarm popup | 39 |
| 8.5.3. Alarm page | 39 |
| 8.6. Synoptic animation | 40 |
| 8.6.1. Additional icons | 44 |

| | |
|---|-----------|
| 8.7. Event log page | 44 |
| 8.8. Menu function descriptions | 45 |
| 8.8.1. Entering passwords | 45 |
| 8.8.2. MONITORING menu | 45 |
| 8.8.3. EVENTS LOG menu | 45 |
| 8.8.4. MEASUREMENTS menu. | 45 |
| 8.8.5. CONTROLS menu | 45 |
| 8.8.6. UPS CONFIGURATION menu | 46 |
| 8.8.7. USER PARAMETERS menu | 46 |
| 8.8.8. SERVICE menu. | 46 |
| 8.9. Additional user functions | 46 |
| 8.9.1. Phase colour modification | 46 |
| 9. OPERATING PROCEDURES | 47 |
| 9.1. Switching on | 47 |
| 9.2. Switching off | 47 |
| 9.3. Bypass operations | 47 |
| 9.4. Extended out of service | 48 |
| 9.5. Emergency shutdown | 48 |
| 10. OPERATING MODES | 49 |
| 10.1. On line mode | 49 |
| 10.2. High efficiency mode. | 49 |
| 10.3. Converter mode | 50 |
| 10.4. Operation with maintenance bypass | 50 |
| 10.5. Operation with motor generator (GENSET) | 50 |
| 11. STANDARD FEATURES AND OPTION | 51 |
| 11.1. ADC+SL card | 52 |
| 11.1.1. Temperature sensor | 54 |
| 11.2. LIB-ADC card | 55 |
| 11.3. Net Vision card | 55 |
| 11.3.1. EMD | 56 |
| 11.4. ACS card | 56 |
| 11.5. Remote touchscreen display | 56 |
| 11.6. Kit for common mains (CBAR) | 56 |
| 11.7. Kit for TN-C / Neutral-Ground connection. | 56 |
| 11.8. Cold Start | 56 |
| 12. TROUBLESHOOTING | 57 |
| 12.1. System alarms | 57 |
| 12.2. System status | 58 |
| 13. PREVENTIVE MAINTENANCE | 59 |
| 13.1. Batteries | 59 |
| 13.2. Fans & capacitors | 59 |
| 14. SAFEGUARDING THE ENVIRONMENT | 60 |
| 15. TECHNICAL SPECIFICATIONS. | 61 |
| 15.1. Unit system | 61 |
| 15.2. Parallel system | 62 |

1. CERTIFICATE AND CONDITIONS OF WARRANTY

This SOCOMEC continuous power system is guaranteed against any manufacturing or material defects.

The warranty is valid for 12 (twelve) months from the commission date, provided activation is carried out by SOCOMEC personnel or personnel from a support centre authorised by SOCOMEC, and no more than 15 (fifteen) months from being shipped from SOCOMEC.

The warranty is valid throughout national territory. If the UPS is exported abroad, the warranty will only cover the parts used to repair faults.

The warranty is valid ex-works and covers labour and parts used to repair the faults.

The warranty shall not apply in the following cases:

- Failure due to unforeseen circumstances or force majeure (lightning, floods, etc.);
- Failure due to negligence or improper use (use outside limits: temperature, humidity, ventilation, electric power supply, applied load, batteries);
- Insufficient or inappropriate maintenance;
- When maintenance, repairs or modifications have not been carried out by SOCOMEC personnel, or personnel from a support centre authorised by SOCOMEC.
- If the battery has not been recharged in accordance with the terms indicated on the packaging and in the manual, in the event of long periods of storage or UPS inactivity.

SOCOMEC may, at its own discretion, opt for the repair of the product or the replacement of faulty or defective parts with new parts, or with used parts of equivalent quality to new parts with regard to function and performance.

Defective or faulty parts replaced free of charge must be made available to SOCOMEC, which becomes the sole owner.

Replacement or repair of parts, or any modifications to the product during the warranty period, will not extend the duration of the warranty.

SOCOMEC will not be responsible for damages under any circumstances (including, without limitations, damage for loss of earnings, interruption of activity, loss of information or other financial losses) arising from the use of the product.

SOCOMEC retains the full and exclusive ownership rights to this document. Only a personal entitlement to use the document for the application indicated by SOCOMEC is granted to the recipient of this document. The reproduction, modification, distribution of this document, either partially or wholly and in any manner, is strictly prohibited except upon Socomec's express prior written consent.

This document is not a specification. SOCOMEC reserves the right to make any changes to the information provided without prior notice.

2. SAFETY STANDARDS

This user manual specifies installation and maintenance procedures, technical data and safety instructions for SOCOMEC. For further information visit the Socomec website: www.socomec.com.

| | |
|---|---|
|  | NOTE! Any work carried out on the equipment must be performed by skilled, qualified technicians. |
|  | NOTE! Before carrying out any operations on the unit read the installation and operating manual carefully. Keep this manual safe for future reference. |
|  | DANGER! Failure to observe safety standards could result in fatal accidents or serious injury, and damage equipment or the environment. |
|  | CAUTION! If the unit is found to be damaged externally or internally, or any of the accessories are damaged or missing, contact SOCOMEC. Do not operate the unit if it has suffered a violent mechanical shock of any kind. |
|  | NOTE! Install the unit in accordance with clearances in order to allow access to handling devices and guarantee sufficient ventilation (refer to 'Electrical requirements' chapter). |
|  | NOTE! Only use accessories recommended or sold by the manufacturer. |
|  | NOTE! When the equipment is transferred from a cold to a warm place wait approx. two hours before putting the unit into operation. |
|  | NOTE! When carrying out electrical installation, all standards applicable specified by the IEC, in particular IEC 60364, and the electricity supplier must be observed. All national standards applicable to batteries must be observed. For further information refer to 'Technical specifications' chapter. |
|  | WARNING! Connect the protective earth (PE) conductor before making any other connections. |
|  | NOTE! The installer is responsible for implementing the backfeed protection with the use of AC input line isolation devices external to the UPS. Refer to 'Electrical requirements' chapter. |
|  | DANGER! RISK OF ELECTRIC SHOCK! Before carrying out any operations on the unit (cleaning and maintenance performances, connection of appliances, etc.) disconnect all power sources. |
|  | DANGER! RISK OF ELECTRIC SHOCK! After disconnecting all power sources wait approx. 5 minutes for the complete discharge of the unit. |
|  | NOTE! The UPS may be powered from an IT distribution system with a neutral conductor. |
|  | NOTE! Any use other than the specified purpose will be considered improper. The manufacturer/supplier shall not be held responsible for damage resulting from this. Risk and responsibility lies with the system manager. |

NOTE! The product you have chosen is designed for commercial and industrial use only. Products may have to be adapted if used for particular critical applications such as life support systems, medical applications, commercial transportation, nuclear facilities or any other application or system where product failure is likely to cause substantial harm to people or property. For such uses we would advise you to contact SOCOMEC beforehand to confirm the ability of these products to meet the required level of safety, performance, reliability and compliance with applicable laws, regulations and specifications.

| | |
|--|--|
|  | NOTE! This is a product for commercial and industrial application – installation restrictions or additional measures may be needed to prevent disturbances. |
|  | WARNING! This is a category C3 UPS product. In a residential environment, this product may cause radio interference, in which case the user may be required to take additional measures. |

Safety requirements for secondary batteries and battery installations.

| | |
|--|--|
|  | The installer is responsible for ensuring that the battery installation and their operating environment conform to national and international codes and safety standards. |
|--|--|

2.1. Description of symbols

| Symbols | Description |
|--|--|
|  | Protective earth terminal (PE). |
|  | Authorised personnel only. Only qualified personnel are permitted to work on the batteries. |
|  | Do not use naked flames or cause sparks in the vicinity of the accumulators. |
|  | No smoking. |
|  | Batteries charging! Batteries and related parts contain lead which is dangerous to health if ingested. Wash hands after handling! |
|  | Accumulators are heavy! Use suitable transport and lifting equipment to work safely. |
|  | Risk of electric shock! Connecting accumulators in series creates hazardous voltages. |
|  | Risk of explosion! Avoid short circuits! Never place tools or metal objects on the accumulators. |
|  | Corrosive liquids (electrolyte). |
|  | Read the user instructions carefully. Read the user manual before performing any operations. |
|  | Wear protective gloves |

| Symbols | Description |
|---|---|
|  | Wear safety shoes. |
|  | Wear protective goggles. |
|  | In the event of accidents, improper use, failure or electrolyte leakage wear a protective apron. |
|  | In the event of accidents, improper use, failure or electrolyte leakage wear a gas mask. |
|  | In the event of contact with the eyes, wash immediately with plenty of water and call a doctor. Call a doctor immediately in the event of accidents or illness. |
|  | Do not dispose of in normal waste stream (symbol WEEE). |

2.2. Abbreviations

For the purpose of this document, the following abbreviations are used:

| | |
|-------------|---|
| BMS | Battery Management System |
| EMC | Electro Magnetic Compatibility |
| HMI | Human Machine Interface |
| IEC | International Electrotechnical Commission |
| IMD | Insulation Monitoring Device |
| LIB | Li-Ion battery |
| MBMS | Master BMS |
| PE | Protective Earth |
| SOC | State of Charge |
| SOH | State of Health |
| SPD | Surge Protection Device |
| THDI | Total Harmonic Distortion in Current |
| THDV | Total Harmonic Distortion in Voltage |
| UPS | Uninterruptible Power Supply |

3. ENVIRONMENTAL REQUIREMENTS AND HANDLING


| | |
|--|---|
|  | NOTE! Before carrying out any operations on the unit read the 'Safety standards' chapter carefully. |
|--|---|

3.1. Environmental requirements for stock and installation area



| | |
|---|--|
|  | The area must be of a suitable size, not exposed directly to sunlight. The floor must support the weight of the unit and guarantee its stability. |
|  | Factory packaging, wrapping and debris shields of the equipment should not be removed until the equipment is ready to be installed in the dedicated installation area. |
|  | Equipment should be placed in an indoor, dry, clean, ventilated area, in a temperature and humidity-controlled environment. The area must be protected from dampness, water, changes in temperature, dust, dirt, rubble, paint, conductive particles, corrosive atmosphere, chemical agents and gases. |
|  | The area should have a plan for condensation and environmental control and mitigation prior to the equipment's arrival. |
|  | Avoid any presence of mechanically active substances, that cause mechanical wear and abrasion in electronic boards, cooling reduction and short circuits. |
|  | The combination of high humidity, pollution and chemical gases could trigger failure mechanisms related to corrosion, short circuits, and intermittent connections. Air-side economizers increase the reliability risk in the airconditioned area, in which supplemental real-time monitoring is recommended to enable quick reaction to outdoor events. |
|  | The gases that react with silver and copper are extremely dangerous for electronic components, causing a fast reduction of the UPS lifetime and reliability. When the gas presence is unknown, reactive monitoring or real time monitoring is suggested. |
|  | Exceeding the maximum admitted ambient temperature condition of the UPS will result in over-temperature alarms, transfers to bypass, and possible product lifetime reduction. A safe humidity level of 50% is recommended in the warehouse and in the installation area, especially when the load is variable and drops below 15%. |

ROOM POSITIONING - SINGLE UNIT



Top view: rear air outlet

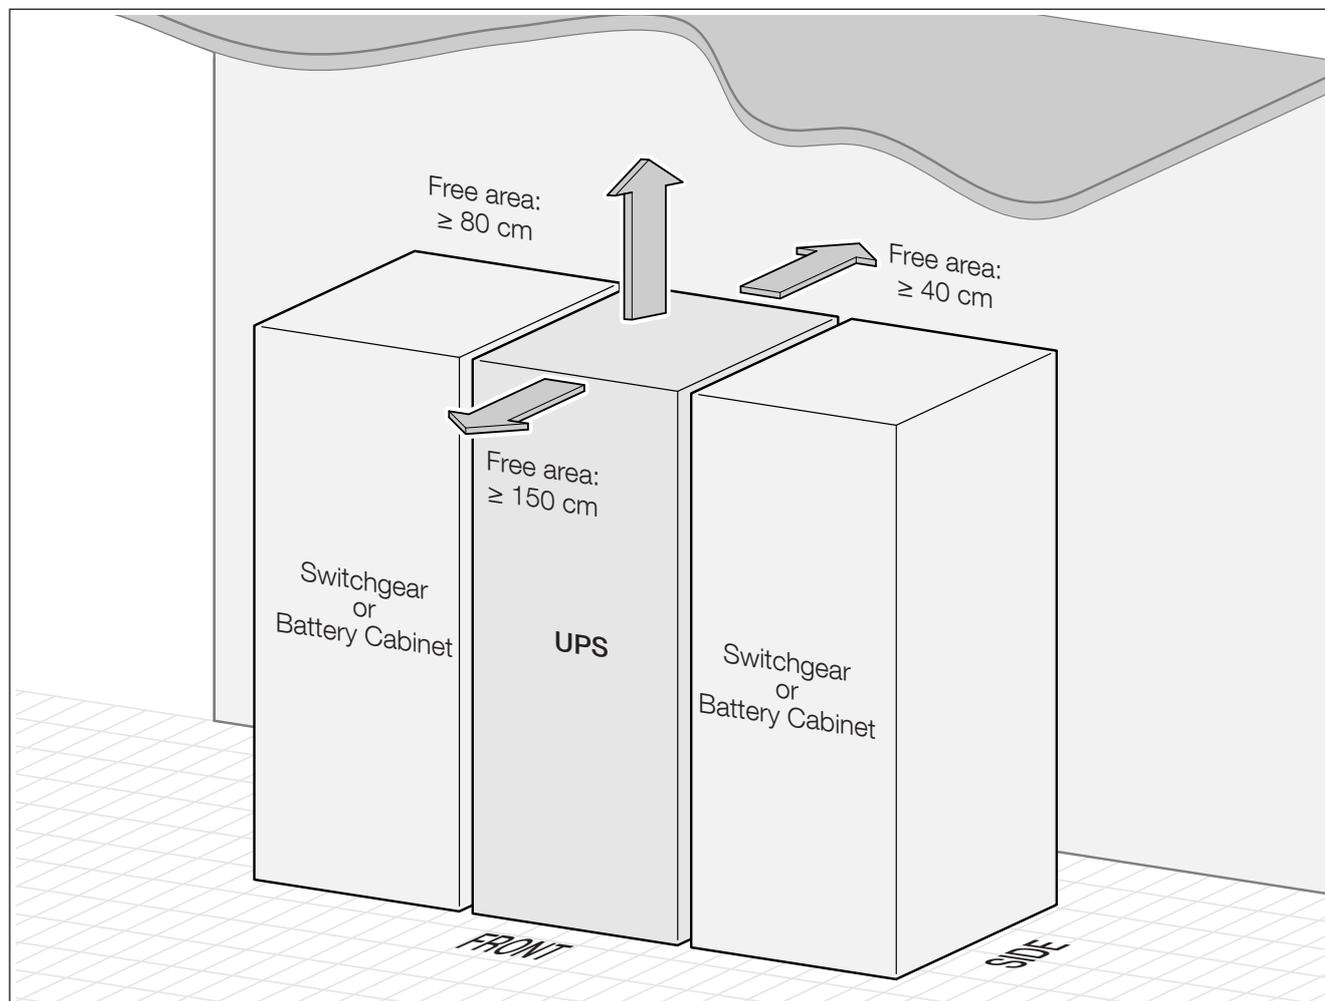

ROOM POSITIONING - SYSTEM - SHARED BATTERY

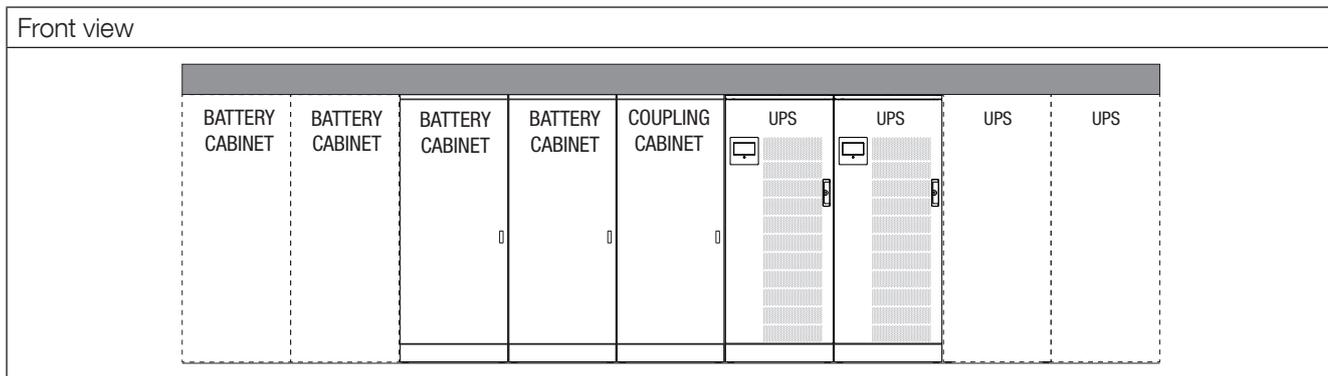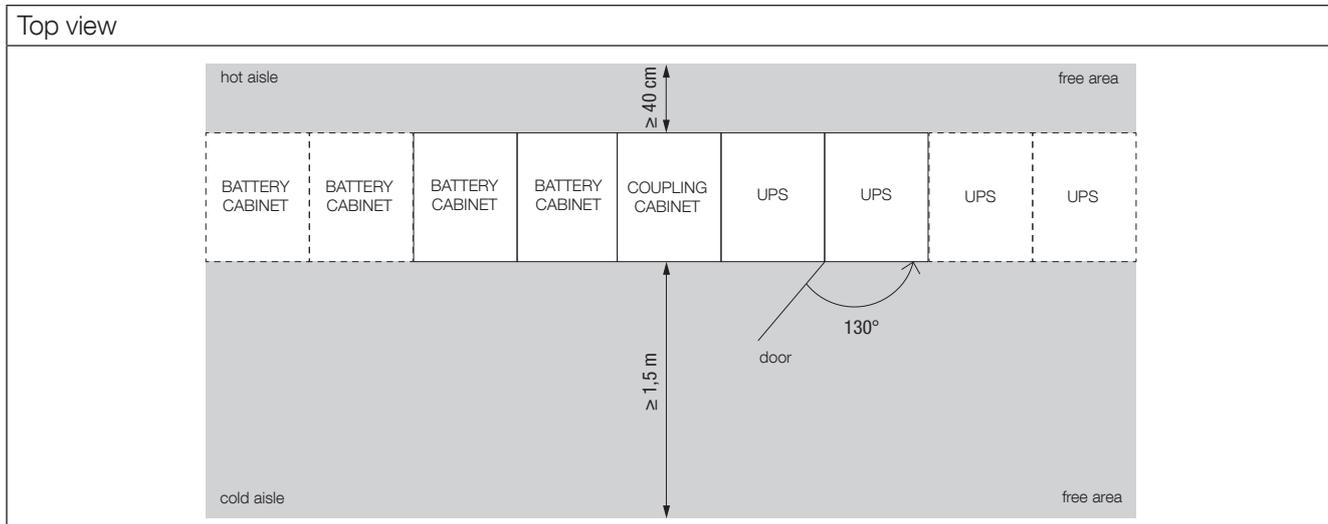

ROOM POSITIONING - SYSTEM - DISTRIBUTED BATTERY

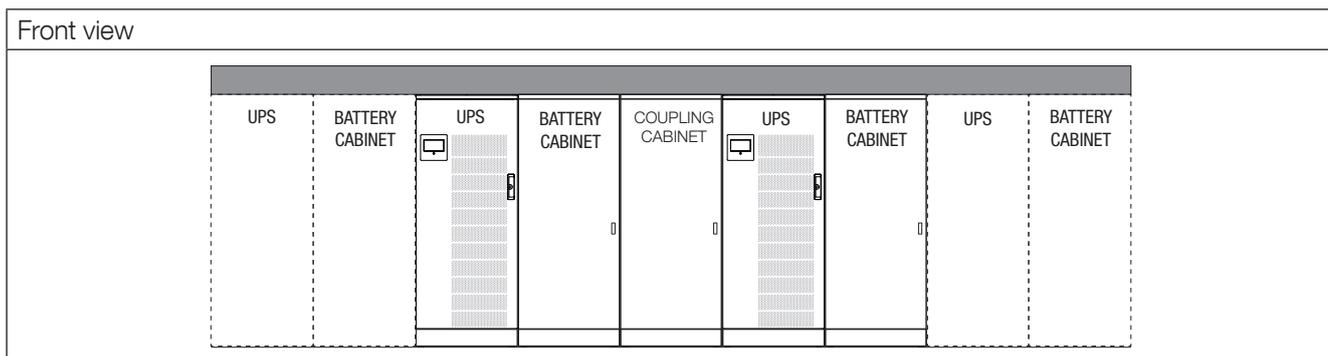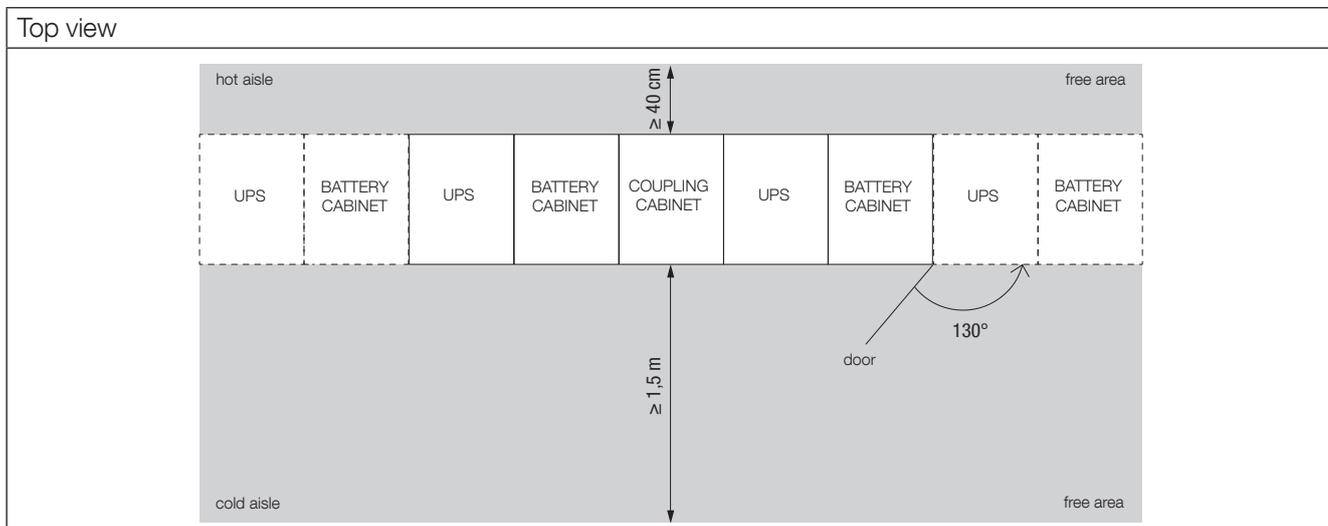

3.2. Handling


- The packaging guarantees the stability of the unit during shipping and physical transfer.
- The unit must remain in a vertical position during all shipping and handling operations.
- Ensure that the floor is strong enough to support the weight of the unit.
- Carry the packaged unit as close as possible to the installation site.

| | |
|---|--|
|  | WARNING! HEAVY WEIGHT! Move the unit using a fork lift truck taking the utmost caution at all times. |
|  | The unit MUST be handled by at least two people. The people MUST take position at the sides of the UPS with respect to the direction of movement. |
|  | Do not move the unit by putting pressure on the front door. |
|  | When moving the unit on even slightly sloping surfaces, use the locking equipment and braking devices to ensure that the unit does not fall over. |
|  | WARNING! The following instructions must be carried out prior to moving the unit (after initial positioning). Failure to heed this warning could result in the unit falling over, equipment damage, injury and even death. |
|  | WARNING! RISK OF TIPPING OVER! The four feet must be secured evenly to ensure the unit is stable. |
|  | NOTE! Before carrying out any operations on the unit read the "Safety standards" chapter carefully. |


3.3. UPS fixing

UPS can be fixed with or without seismic kit to meet the standard for seismic installations.








UPS standard installation

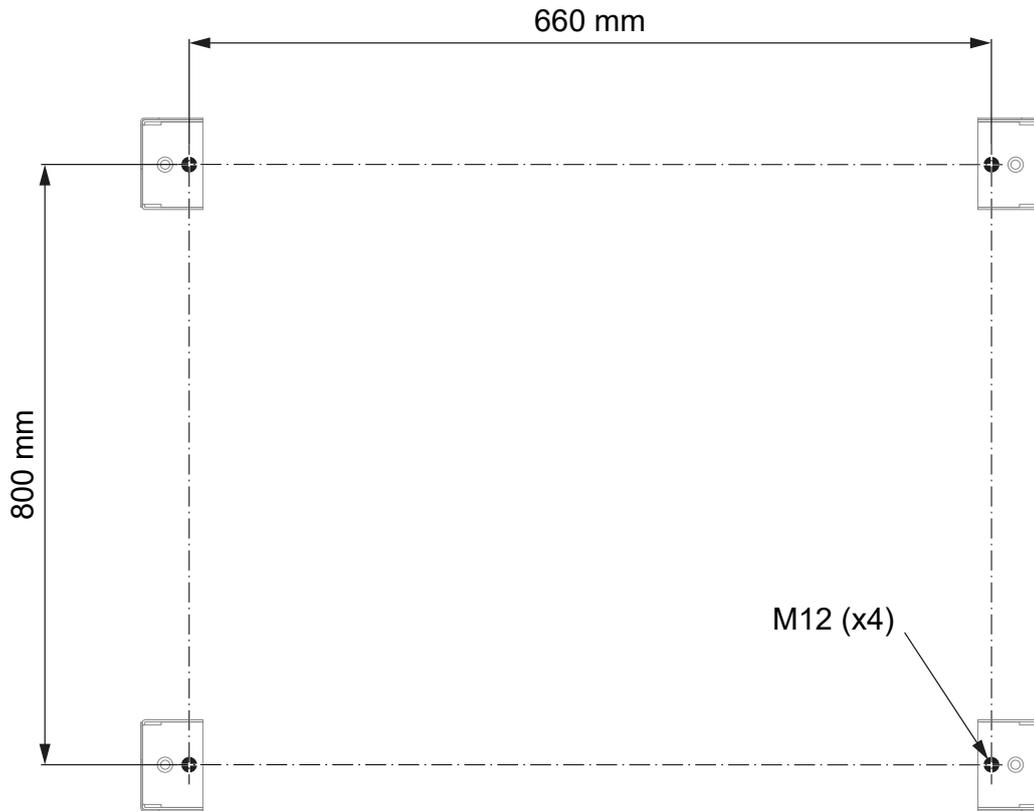


UPS installation for Zone 4 seismic areas

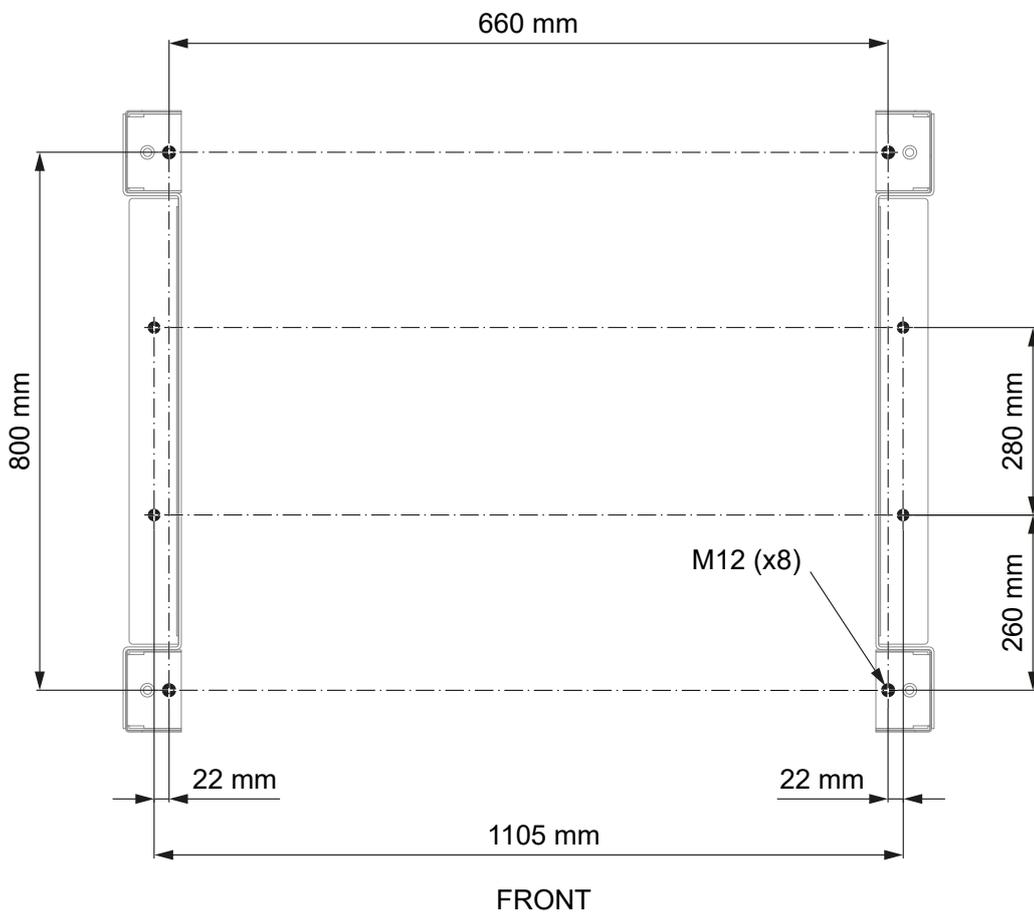


3.4. Top connection w/o box (extra extension optional)

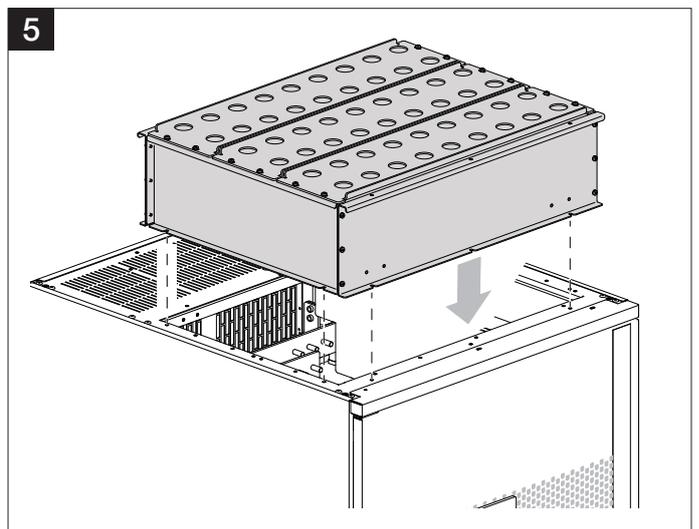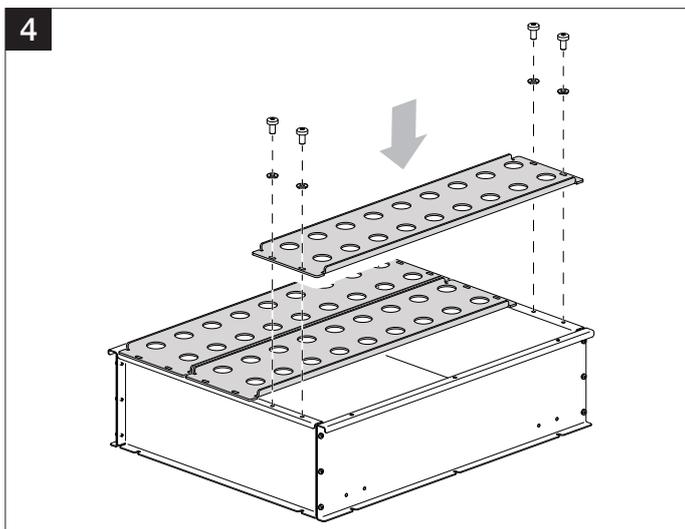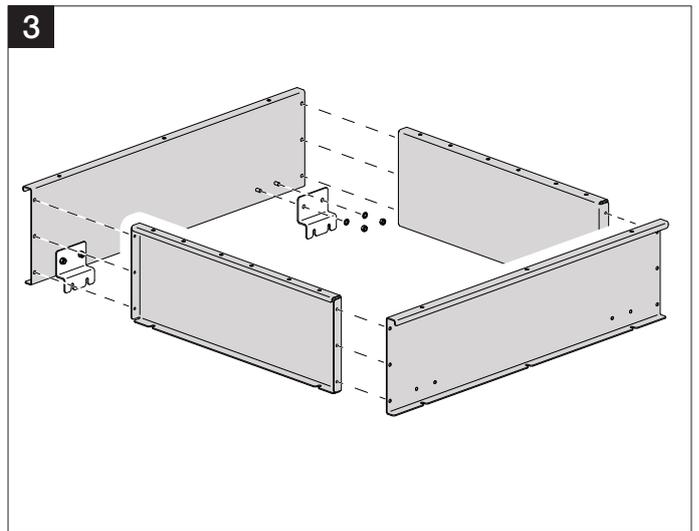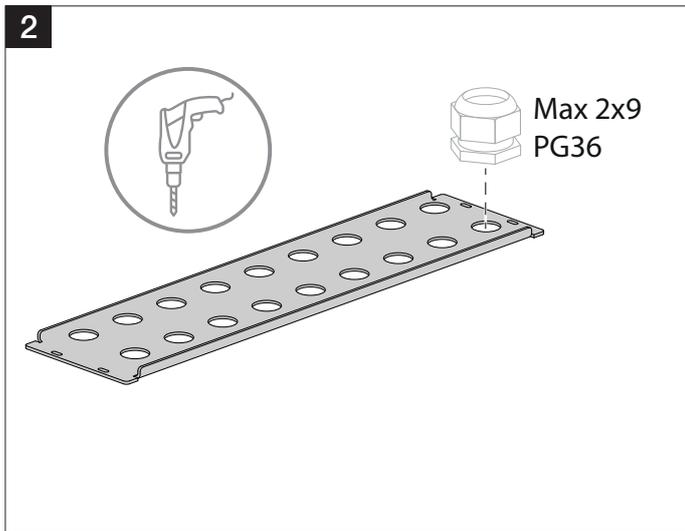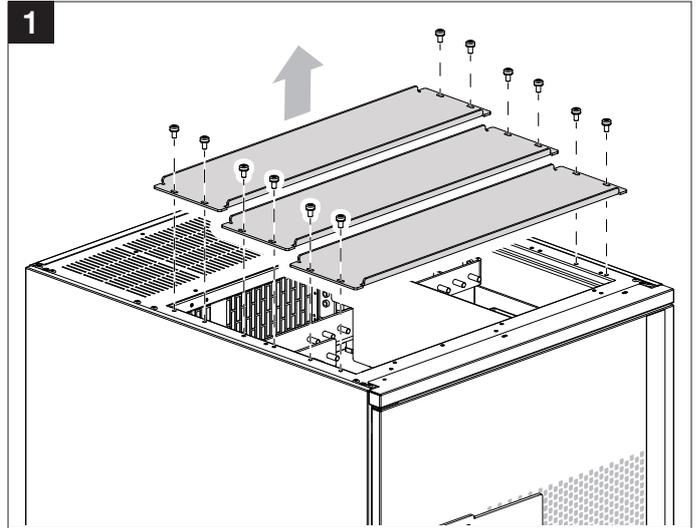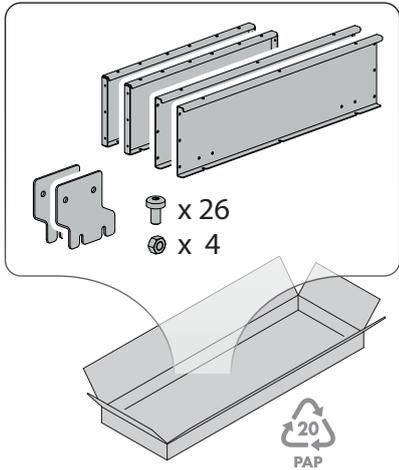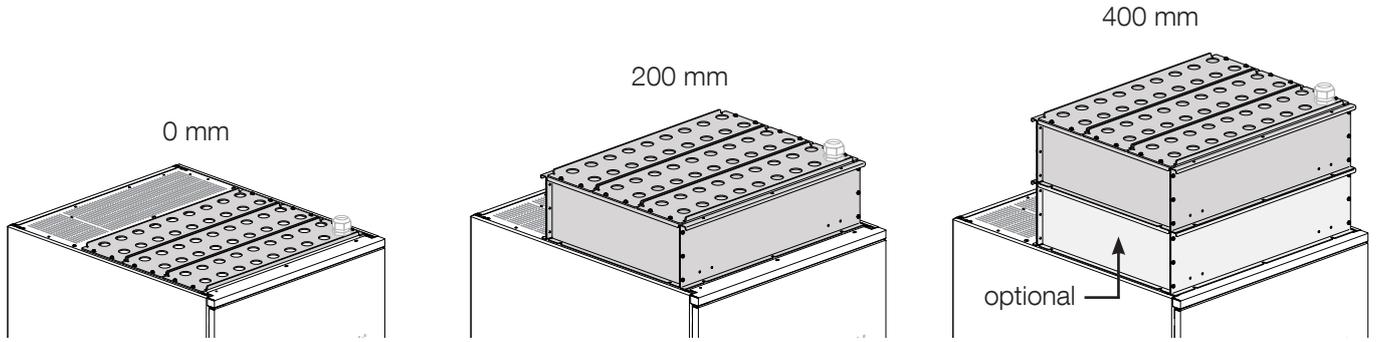

6

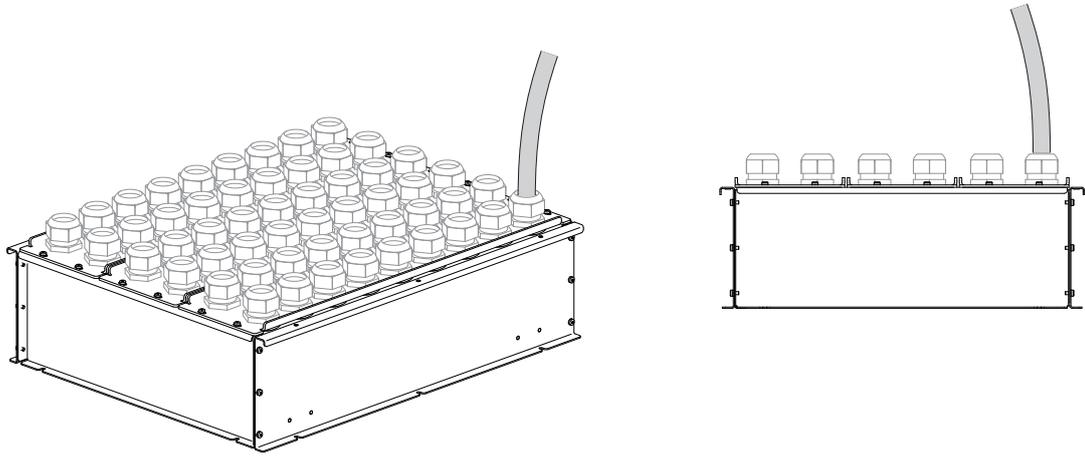

7

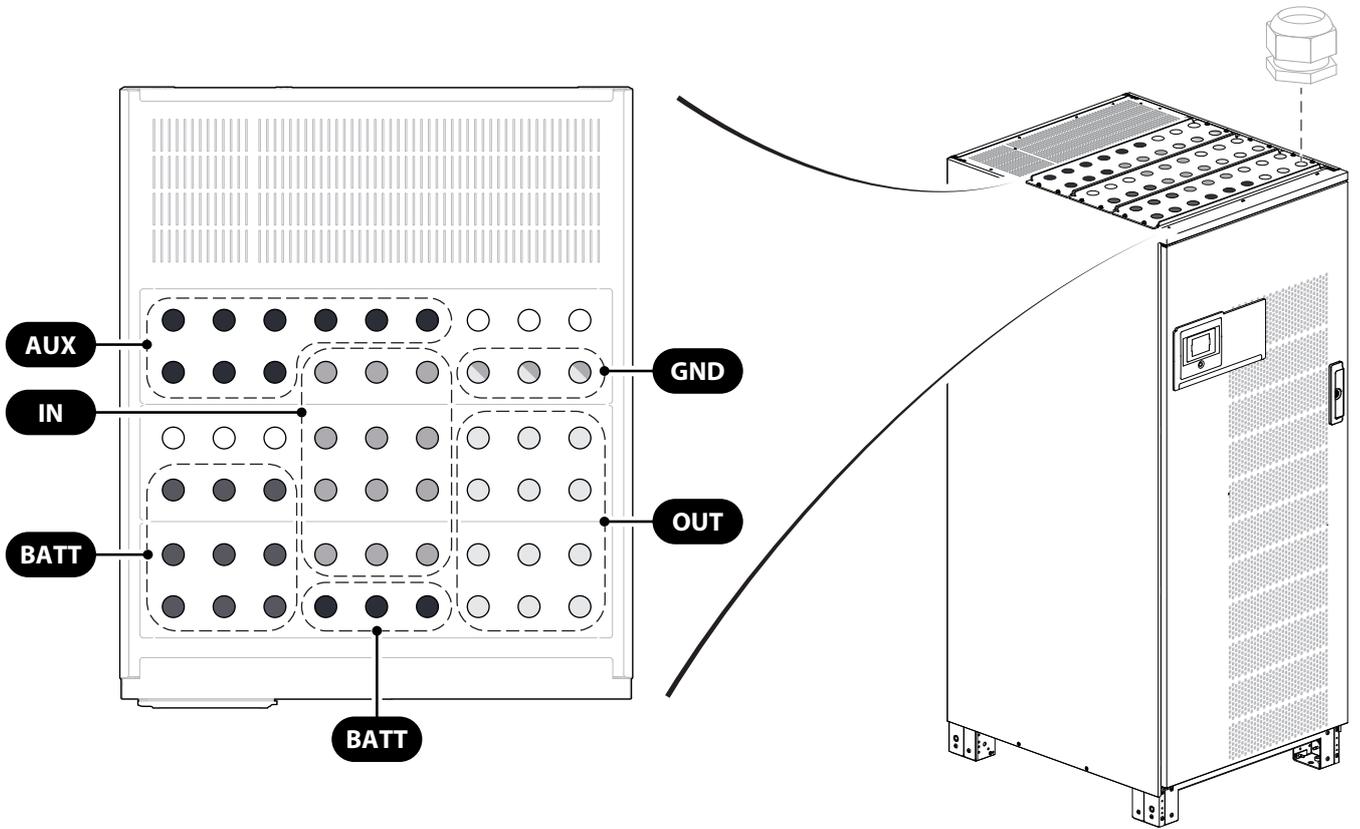


4. ELECTRICAL INSTALLATION

| | |
|--|---|
|  | NOTE! Before carrying out any operations on the unit read the 'Safety standards' chapter carefully. |
|  | NOTE! Before powering on the unit, install modules in the two open slots and make sure the others are closed. |

4.1. UPS configuration - single unit

4.1.1. Mains and Auxiliary mains connected separately (with external batteries)

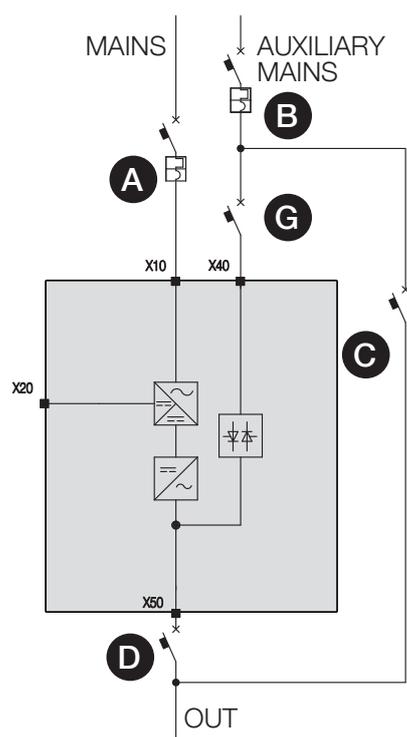

KEY

- A** Input mains thermal-magnetic circuit breaker.
- B** Auxiliary mains thermal-magnetic circuit breaker.
- C** External maintenance bypass switch⁽¹⁾.
- D** Unit output switch⁽²⁾.
- G** Unit Auxiliary mains switch.
-  UPS

(1) Connect a normally-closed early make contact from the External Maintenance bypass switch to the dedicated connector.

(2) Not monitored when single unit.

4.1.2. Electrical requirements - single unit

The installation and system must comply with national plant regulations. The electrical distribution panel must have a sectioning and protection system installed for input and auxiliary mains. RCD is not necessary when the UPS is installed in a TN-S system. RCD is not allowed on TN-C systems. If a RCD is required a B-type should be used.

| SYSTEM CABLE - MAX SELECTION | | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
|--|----------|--|---|---|---|---|---|---|---|----|
| Rectifiers terminals (mm ²) ⁽¹⁾ | Flexible | 3 x 240 - M10 | | | | | | | | |
| | Rigid | 3 x 240 - M10 | | | | | | | | |
| Bypass terminals (mm ²) ⁽¹⁾ | Flexible | 3 x 240 - M10 | | | | | | | | |
| | Rigid | 3 x 240 - M10 | | | | | | | | |
| Battery terminals (mm ²) | Flexible | (3+3) x 150 - M10 or (2+2) x 240 - M12 | | | | | | | | |
| | Rigid | 3 x 240 - M10 | | | | | | | | |
| Output terminals (mm ²) ⁽¹⁾ | Flexible | 3 x 240 - M10 | | | | | | | | |
| | Rigid | 3 x 240 - M10 | | | | | | | | |

Tightening torque 40 Nm

Max. section is determined by the size of the terminals.

(1) Neutral conductor has to be sized not less than the phase conductor.

| RECOMMENDED PROTECTION DEVICES - Rectifier | | | | | | | | | | |
|--|------|------|------|------|------|------|------|------|------|------|
| Number of Modules | | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
| System Power (kW) | | 100 | 150 | 200 | 250 | 300 | 350 | 400 | 450 | 500 |
| C Curve circuit breaker (A) | min. | 200 | 320 | 400 | 630 | 630 | 630 | 800 | 1000 | 1000 |
| | max. | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 |

Circuit breaker switch recommended with magnetic intervention threshold $\geq 10 I_n$ (curve C). It is necessary to use a D curve selective breaker if an optional external transformer is used. The min value depends on the size of the power cables in the installation, while the max value is limited by the UPS cabinet.

| RECOMMENDED PROTECTION DEVICES - Auxiliary mains | | | | | | | | | | |
|--|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Number of Modules | | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
| System Power (kW) | | 100 | 150 | 200 | 250 | 300 | 350 | 400 | 450 | 500 |
| C Curve circuit breaker (A) | min. | 200 | 320 | 400 | 630 | 630 | 630 | 800 | 800 | 800 |
| | max. | 800 | 800 | 800 | 800 | 800 | 800 | 800 | 800 | 800 |

Circuit breaker switch recommended with magnetic intervention threshold $\geq 10 I_n$ (curve C). It is necessary to use a D curve selective breaker if an optional external transformer is used. The min value depends on the size of the power cables in the installation, while the max value is limited by the UPS cabinet.

The conditional short circuit current (I_{cc}) according to IEC 62040-1 is 65 kArms, provided that the UPS is protected by a MCCB with adequate breaking capability and current limiting capability under short circuit conditions. Contact SOCOMEC for detailed information.

| RECOMMENDED PROTECTION DEVICES - Upstream Residual Current Detection Circuit Breaker | | | | | | | | | | | |
|--|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|--|
| Number of Modules | | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | |
| System Power (kW) | | 100 | 150 | 200 | 250 | 300 | 350 | 400 | 450 | 500 | |
| Differential input ⁽¹⁾ (A) | min. | 0.5 | | | | | | | | | |

(1) Caution! Residual Current Detection (RCD) can only be used with a common input and auxiliary mains (configuration not recommended). It must be placed upstream of the connection between input mains and auxiliary mains. Use type B fourpole selective (S) residual current detectors. Load leakage currents are to be added to those generated by the UPS and during transitory phases (power failures and power returns) short current peaks may occur. If loads with high leakage current are present, adjust the residual current protection. It is advisable in all cases to carry out a preliminary check on the earth current leakage with the UPS installed and operational with the definitive load, so as to prevent the RCD tripping over.


4.2. UPS Configuration - parallel



NOTE!

Before carrying out any operations on the unit read the 'Safety standards' chapter carefully.

4.2.1. Parallel system with common upstream architecture

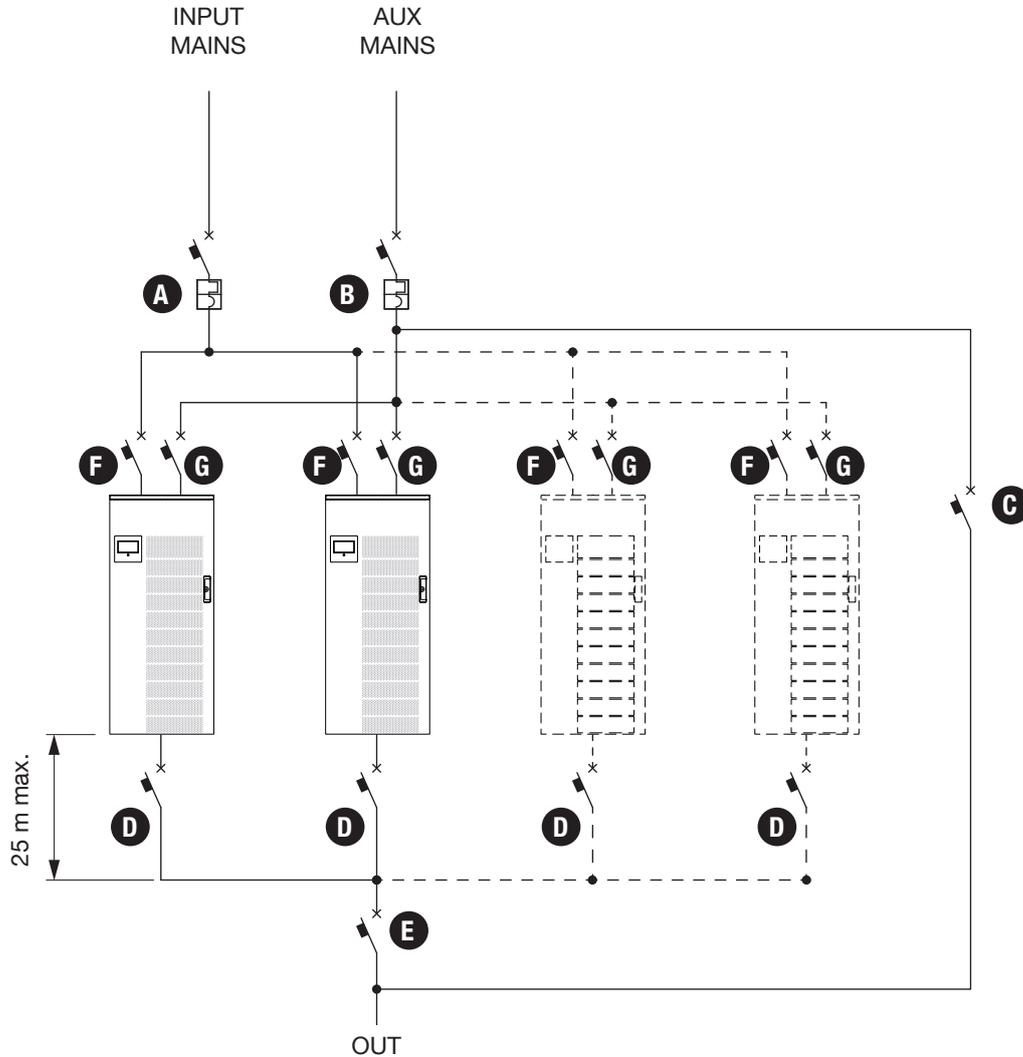

KEY

- A System input mains thermal-magnetic circuit breaker.
- B System auxiliary mains thermal-magnetic circuit breaker.
- C System external maintenance by pass switch⁽¹⁾
- D Unit output switch⁽¹⁾
- E System shutdown switch⁽¹⁾
- F Unit input mains switch
- G Unit auxiliary mains switch

(1) connect signal status to the parallel board.

4.2.2. Electrical requirements - Parallel system with common upstream architecture


| RECOMMENDED PROTECTION DEVICES - Rectifier | | | | | |
|--|------|------|------|------|------|
| Number of Units | | 1 | 2 | 3 | 4 |
| System Power (kW) | | 500 | 1000 | 1500 | 2000 |
| C Curve circuit breaker (A) | min. | 1000 | 2000 | 3200 | 4000 |
| | max. | 4000 | 4000 | 4000 | 4000 |

| RECOMMENDED PROTECTION DEVICES - Auxiliary mains | | | | | |
|--|------|------|------|------|------|
| Number of Units | | 1 | 2 | 3 | 4 |
| System Power (kW) | | 500 | 1000 | 1500 | 2000 |
| C Curve circuit breaker (A) | min. | 800 | 1600 | 2500 | 3200 |
| | max. | 3200 | 3200 | 3200 | 3200 |

The conditional short circuit current (I_{cc}) according to IEC 62040-1 is 65 kArms, provided that the UPS is protected by a MCCB with adequate breaking capability and current limiting capability under short circuit conditions. Contact SOCOMEC for detailed information.

| | |
|---|--|
|  | <p>NOTE! For single unit breaker sizing please refer to the tables at chapter 4.1.2</p> |
|---|--|

4.2.3. Parallel system with distributed upstream architecture

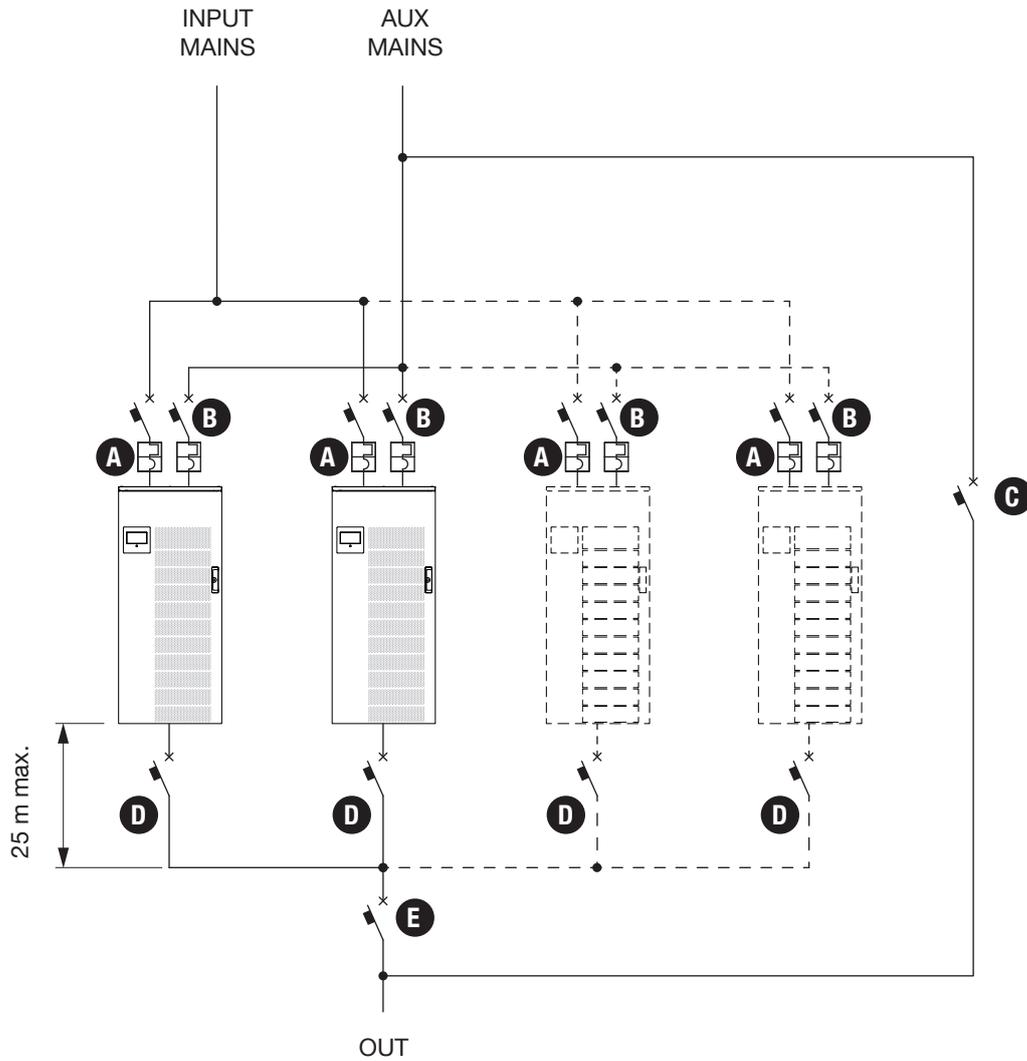

KEY

- A Unit input mains thermal-magnetic circuit breaker.
- B Unit auxiliary mains thermal-magnetic circuit breaker.
- C System external maintenance by pass switch⁽¹⁾
- D Unit output switch⁽¹⁾
- E System shutdown switch⁽¹⁾

(1) connect signal status to the parallel board.



NOTE!
For single unit breaker sizing please refer to the tables at chapter 4.1.2

| | |
|---|--|
|  | NOTE! To ensure the integrity of the bypass thyristors: - I^2t must be lower than 500 kA ² s and peak current must be lower than 10 kA for 20 ms. |
|  | The UPS is designed for transient overvoltages in category II installations. If the UPS is part of the building's electrical circuit, or is likely to be subject to transient overvoltages in category III installations, additional external protection must be provided, either on the UPS or in the AC power supply network powering the UPS. |
|  | WARNING! Protective earthing conductor (PE) must have sufficient current-carrying capacity. The PE cable core size must be chosen according to the PROTECTIVE CURRENT RATING of the earth circuit which depends on the provision and location of protective overcurrent devices. |
|  | NOTE! 3-Phase 4-Wire Input Power is required. The unit can be installed in TN, TT and IT AC distribution systems (IEC 60364-3). |
|  | The UPS is designed for indoor use according to IEC 60721-3-3, with a pollution degree lower than or equal to 2 (non-conductive pollution) |
|  | System shutdown switch E should always be installed in the external distribution cabinet and recognised as an emergency shutdown switch (red handle). If this switch is far from the UPS or in another room a remote shutdown button shall be installed near the UPS. |
|  | The phase rotation of aux mains and output cables must be the same for each unit. |
|  | Before turning on an individual unit ensure that the relevant unit output switch D is closed. |
|  | Before opening unit output switch D ensure that the relevant unit is turned off. |
|  | If unit output switches D are present it is advisable to connect an auxiliary pre-opening contact from the switch to the parallel board (connector XB2/XC2). |
|  | If external manual bypass switch C is present it is advisable to connect an auxiliary pre-closing contact from the switch to the parallel board (connector XB1/XC1). |
|  | The UPS is designed for indoor environmental service conditions according to IEC 60721-3-3 with pollution degree lower or equal to 2 (non-conductive pollution). |
|  | WARNING! In the event of three-phase non-linear loads connected downstream of the UPS, the neutral current on the load can be 1.5 - 2 times higher than the phase current. This must be considered when estimating the correct size of the output and the auxiliary neutral cables. |

4.3. Backfeed protection

The UPS is set up for the installation of external protection devices against the backfeed of dangerous voltages on the auxiliary backup mains power supply line (AUX MAINS SUPPLY). The current rating of the switching device has to follow the instruction outlined in 'Electrical requirements' chapter.



DANGER! RISK OF ELECTRIC SHOCK!
The installer must attach the warning label in order to warn electrical technicians about dangerous backfeed situations (not caused by the UPS).


Warning label (supplied with the equipment)

Before working on this circuit

- Isolate the Uninterruptible Power System (UPS)
- Then check for Hazardous Voltage between all terminals including the protective earth

 **Risk of Voltage Backfeed**


Backfeed electrical diagram

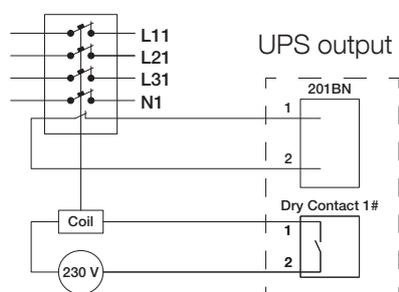

UPS output voltage

Backfeed Card
Dry Contact

Backfeed card

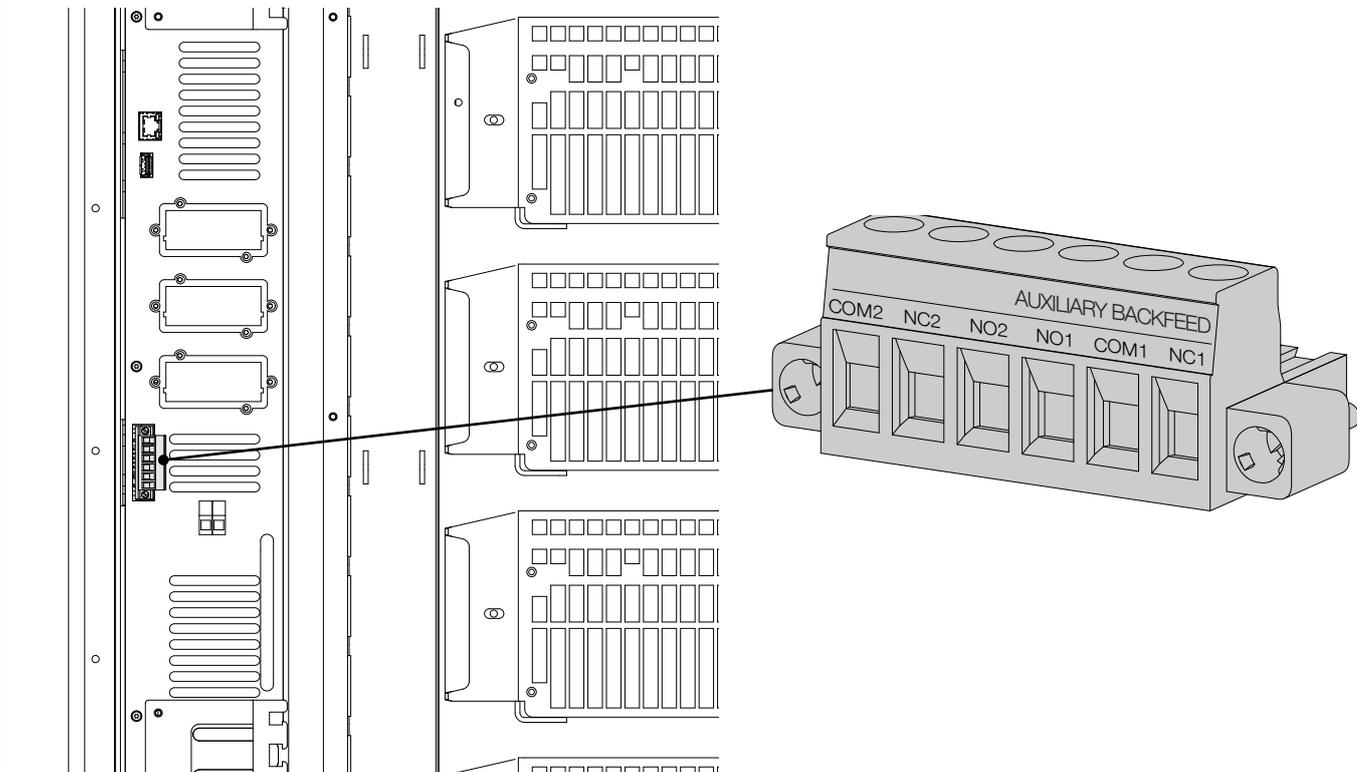



NOTE!
Use a 220-240 V release coil with integrated travel limit contact to pilot the input protection systems. If a trip coil without an integrated end-of-travel contact is used, an early auxiliary contact must be added (see figure). Electrical data of the contacts: 2 A 250 Vac.

| Function | Detail <small>(Connector name)</small> | V OUT | Internal fuse |
|----------|--|-----------|----------------|
| BKF AUX | COM1 _(XB1) - NO1 _(XB3) | 230 V RMS | 2 A time delay |




The backfeed protection for the input mains supply (MAINS SUPPLY) is incorporated inside the UPS modules as standard.


4.4. Cable positioning

| | |
|---|--|
|  | <p>WARNING! The cables must be installed on trays according to the following diagrams. The trays must be positioned near the UPS.</p> |
|  | <p>WARNING! All metal and suspended ducts or those in raised flooring MUST be connected to earth and to the various cabinets</p> |
|  | <p>WARNING! Power cables and control cables MUST NEVER be installed in the same duct.</p> |
|  | <p>WARNING! Risk of electromagnetic interference between battery cables and output cables.</p> |

Correct installation

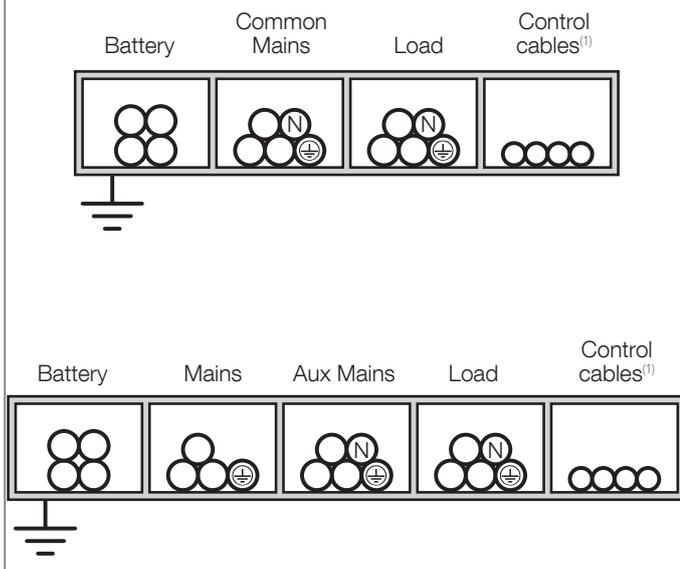

Acceptable installation

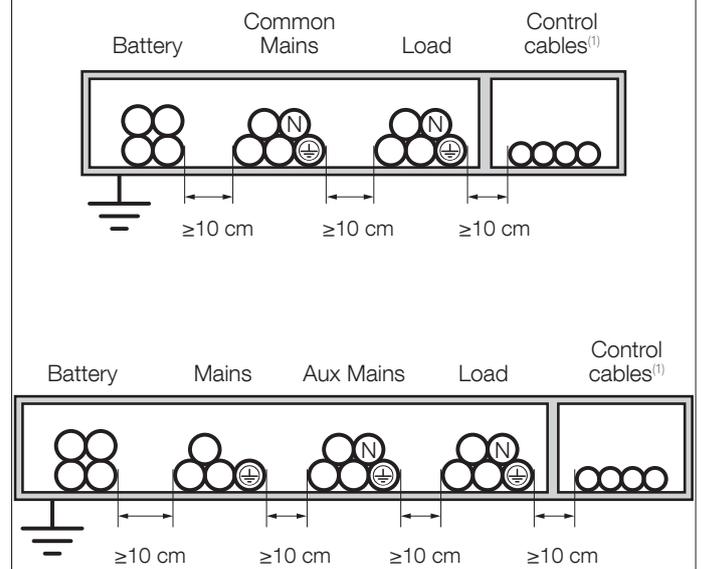


(1) Control cables: connections between the cabinets and each unit, alarm signals, remote mimic panel, connection to the BMS (Building Management System), emergency stop, connection to generator.

5. OVERVIEW





WARNING!
The UPS is provided without any input, aux mains, output and maintenance bypass switch. These should be installed in an external distribution cabinet.


5.1. Overview - Single Unit

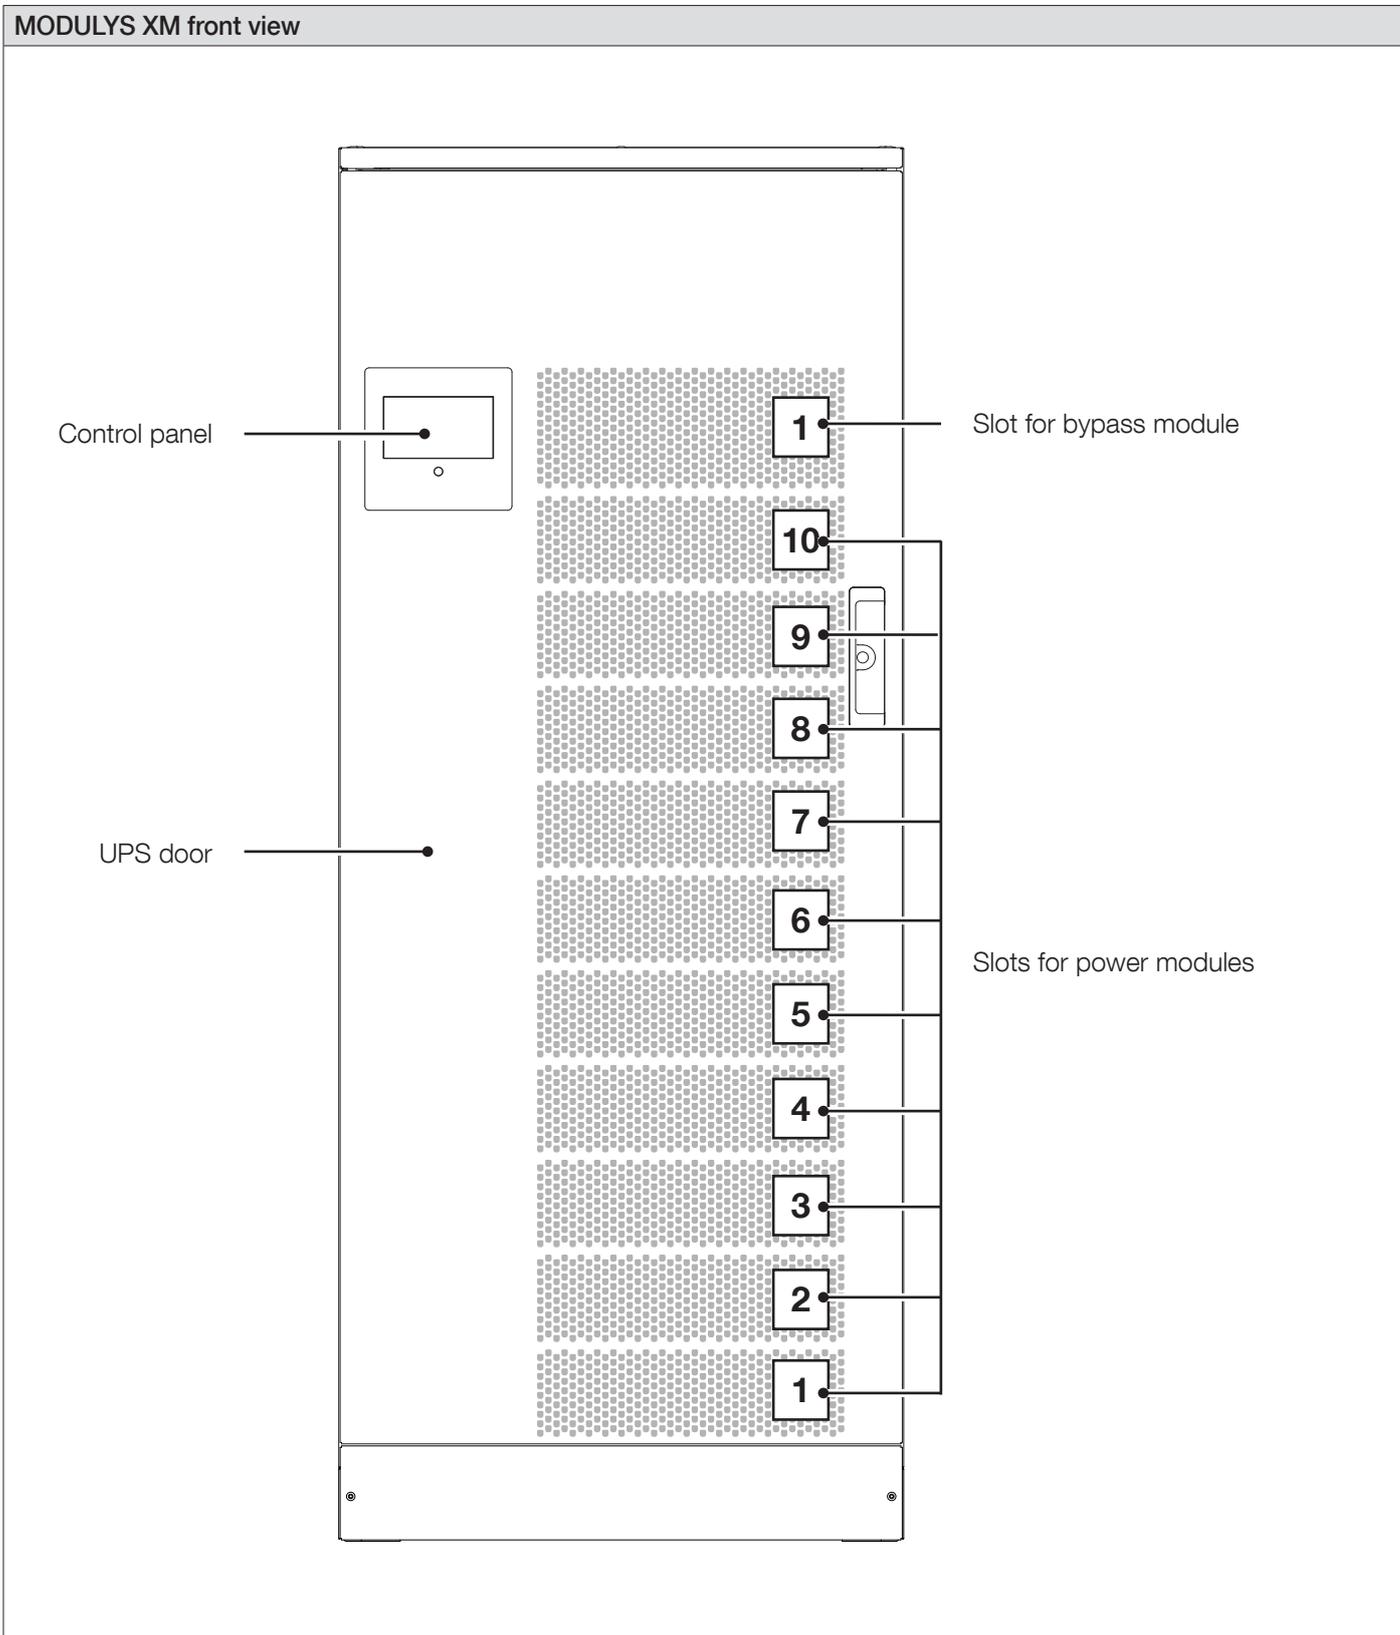

5.2. Overview - Parallel Configuration

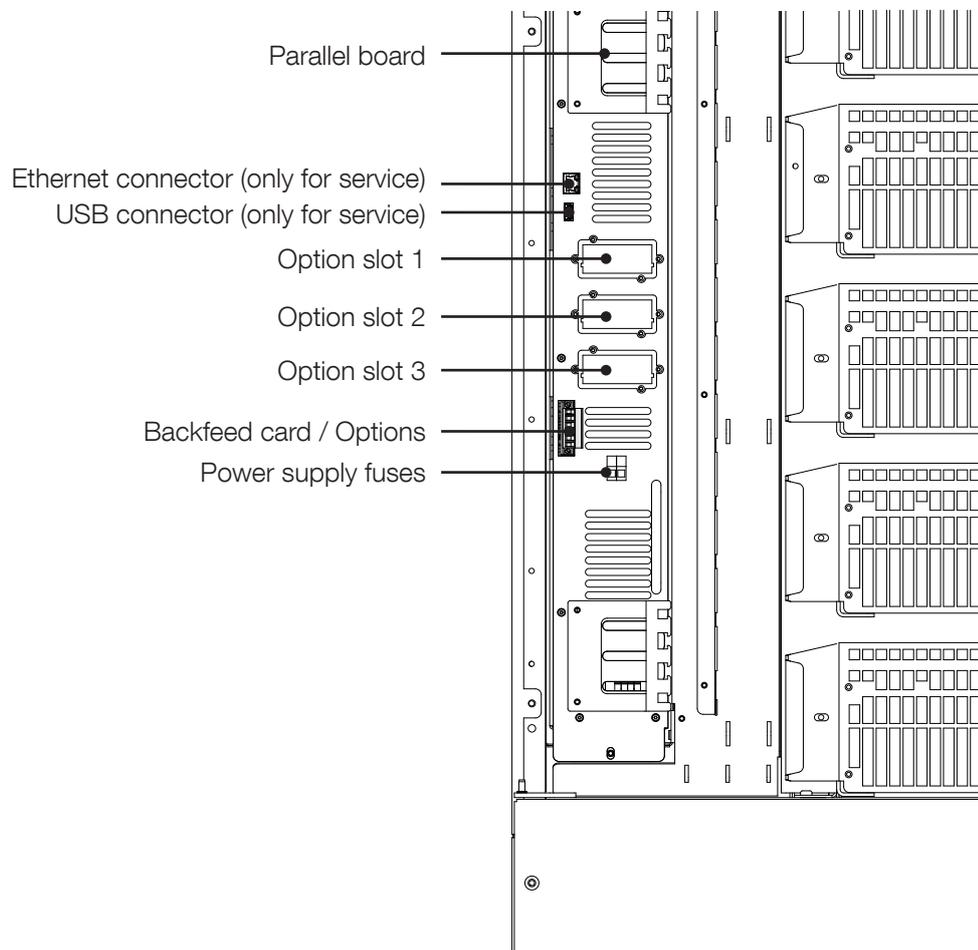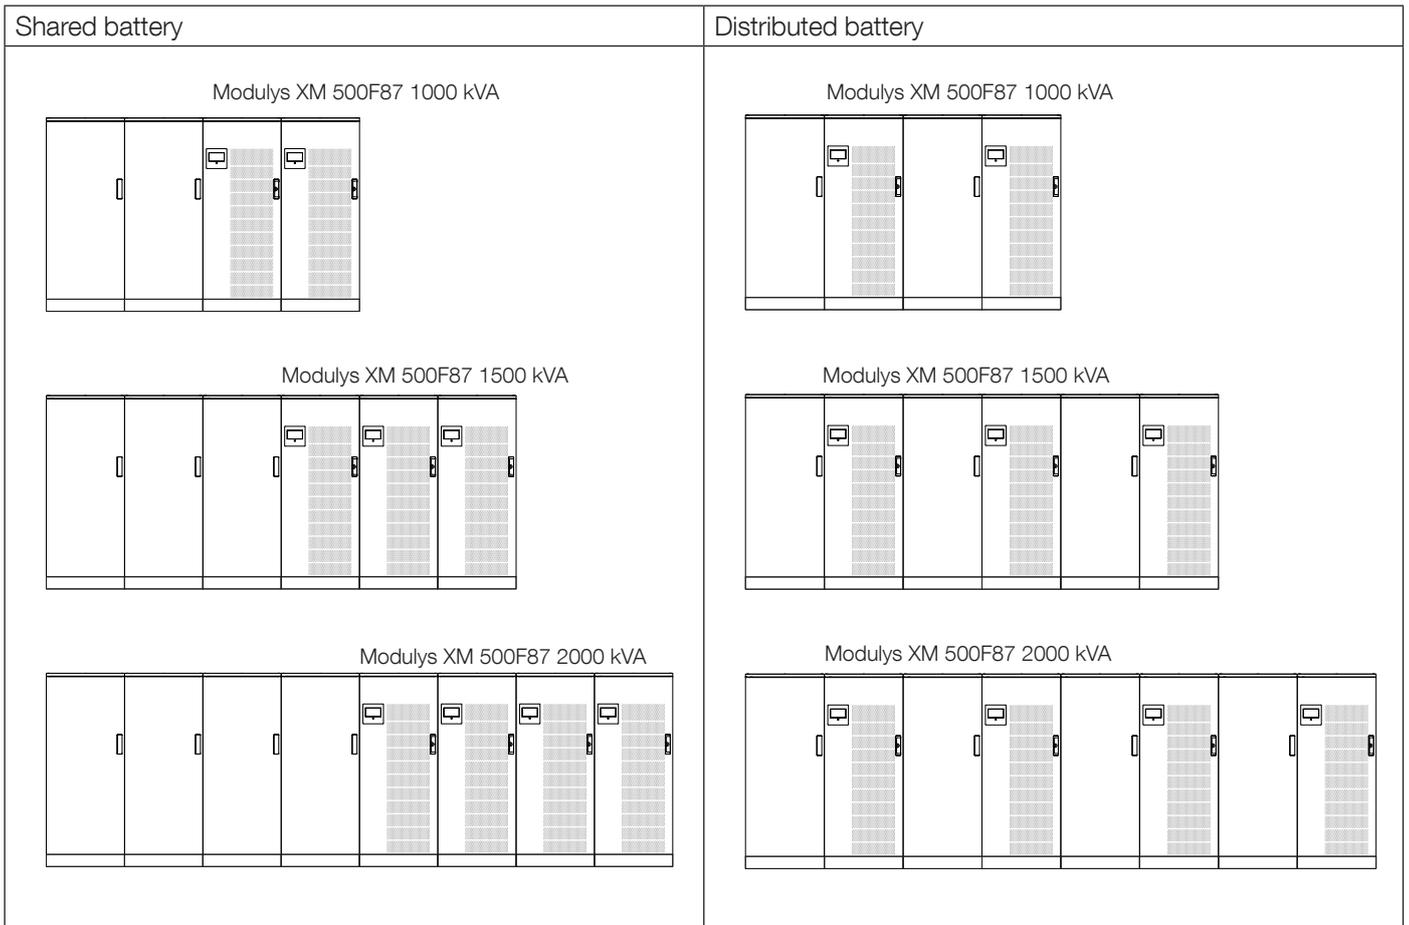

5.3. Single Unit internal wiring diagram

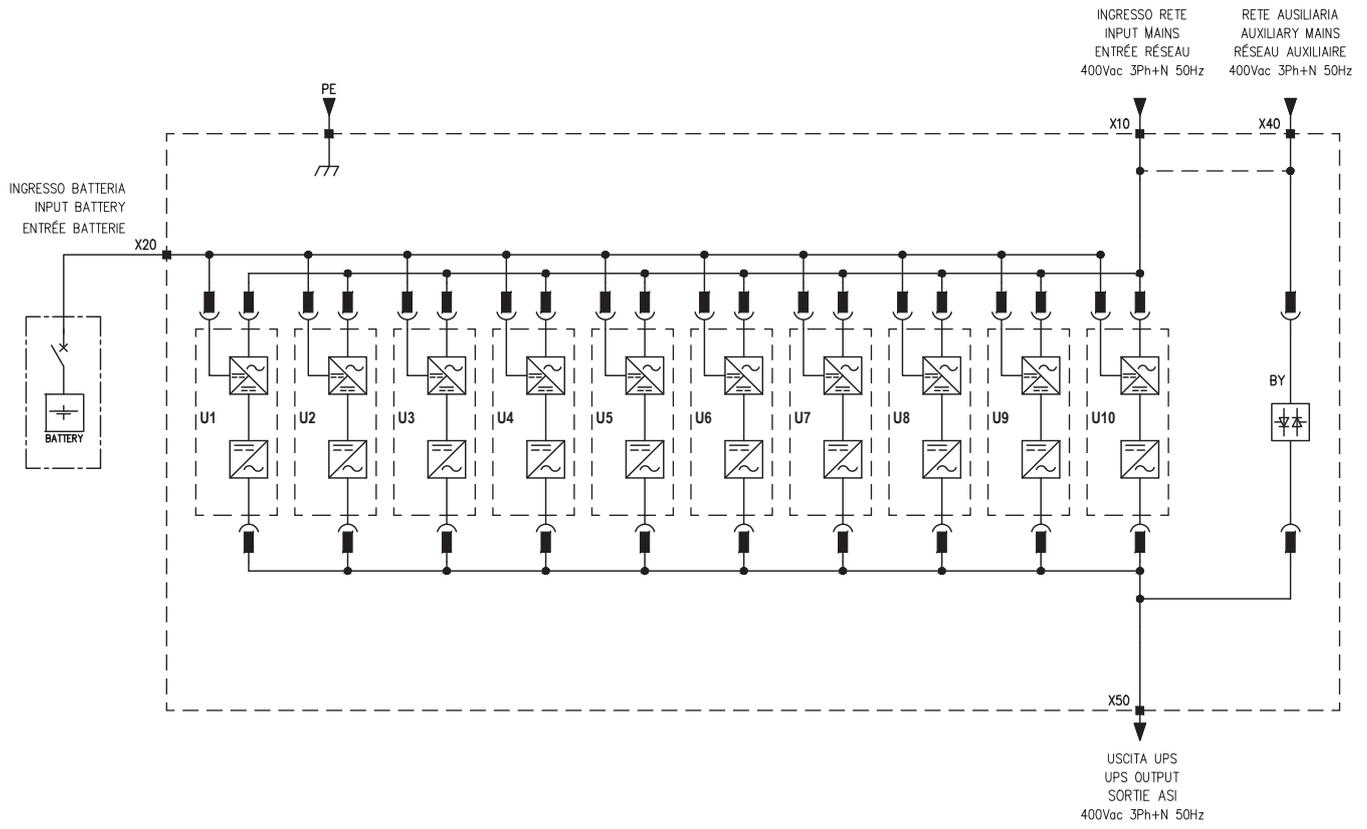

6. CONNECTIONS



NOTE!
Before carrying out any operations on the unit read the 'Safety standards' chapter carefully.



WARNING!
Battery power terminals can be supplied by:


- external battery cabinet;
- UPS power modules.

Before working on this circuit ensure that:

- all the external battery cabinet switches are in OFF position;
- the UPS is in external maintenance bypass mode (refer to 'Operating modes' chapter);
- all UPS power modules are disconnected;

Check the absence of voltage before carrying out any operation.

6.1. Mains and auxiliary mains connected separately

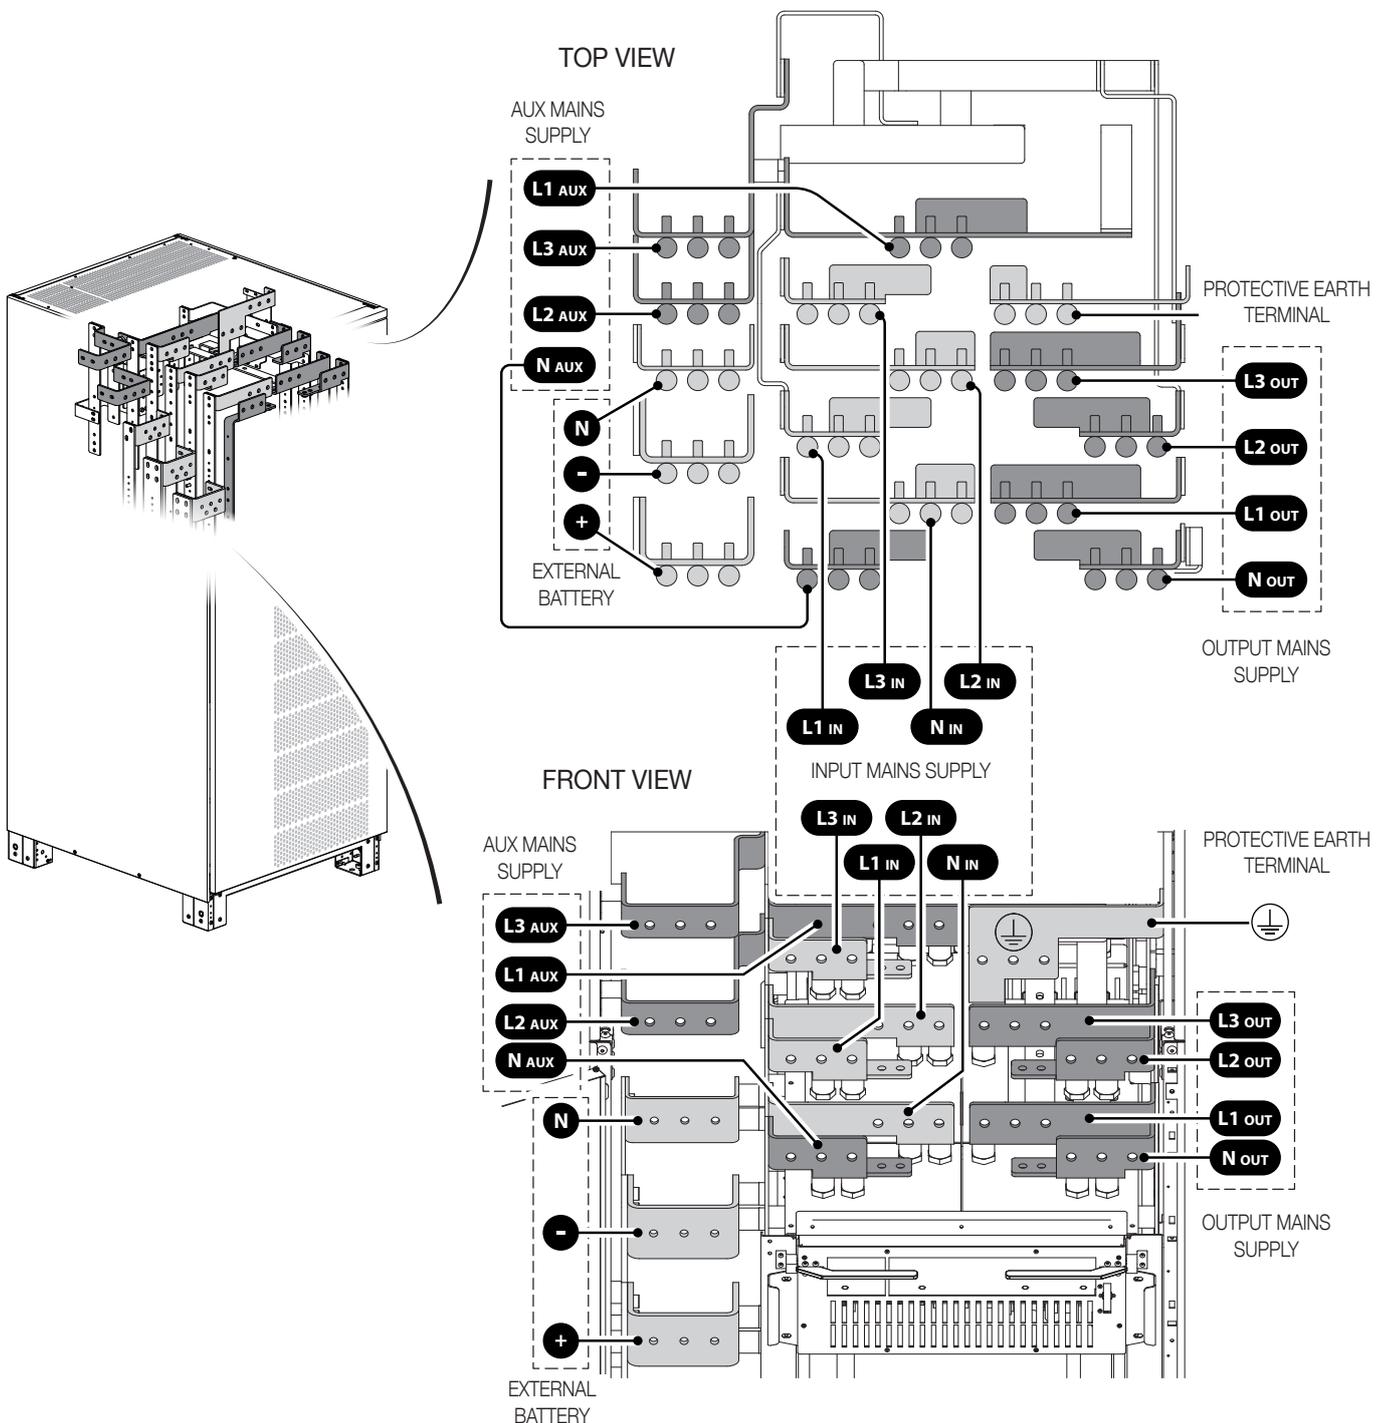


6.2. Mains and auxiliary mains connected together



This configuration is possible only with kit for common mains option.
See 'Standard features and option' chapter.




The kit has been designed to be installed with front access.

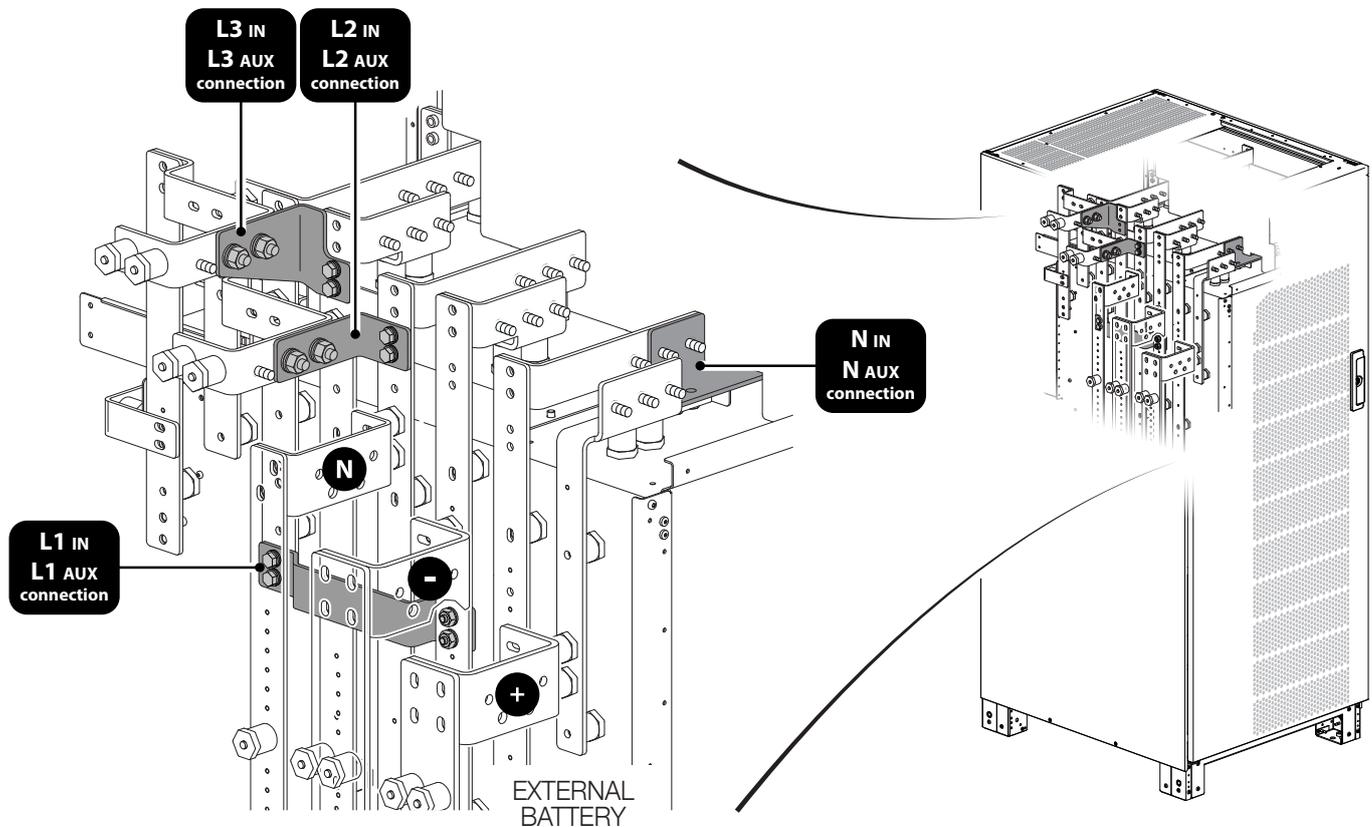

6.3. Protective earth and neutrals connected together



This configuration is possible only with kit for TN-C / Neutral-Ground connection.
See 'Standard features and option' chapter.

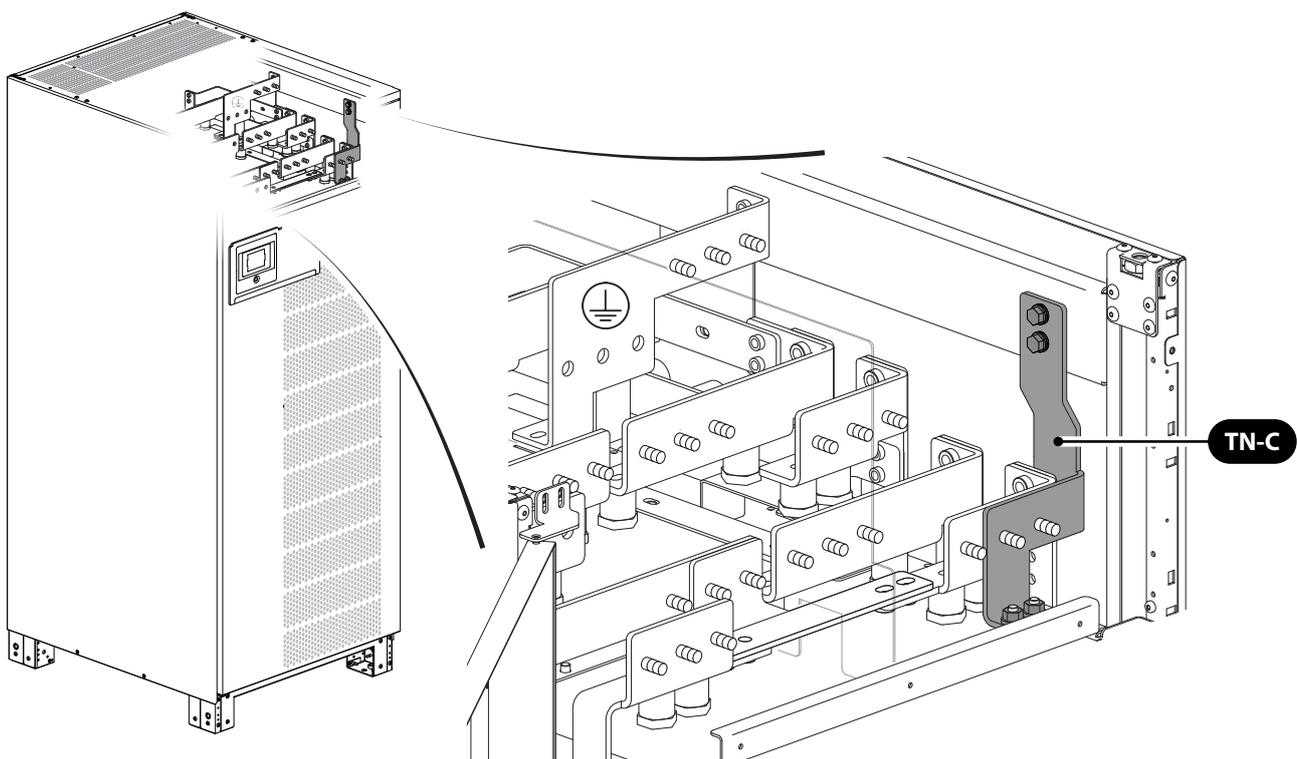

6.4. External battery connection



NOTE!
For further information refer to the battery cabinet manual.

- Remove the plastic terminal block protection.
- Connect the protective earth (PE) cable.
- Connect the cables between the UPS terminals and the battery cabinet terminals.



WARNING!
Strictly observe:

- the polarity of each individual string (refer to the figure below);
- the cable cross section (refer to 'Electrical requirements' chapter).




WARNING!
Cabling errors with inversion of battery polarity may cause permanent damage to the equipment.




Reassemble the plastic terminal block protection.

Connection example - shared battery

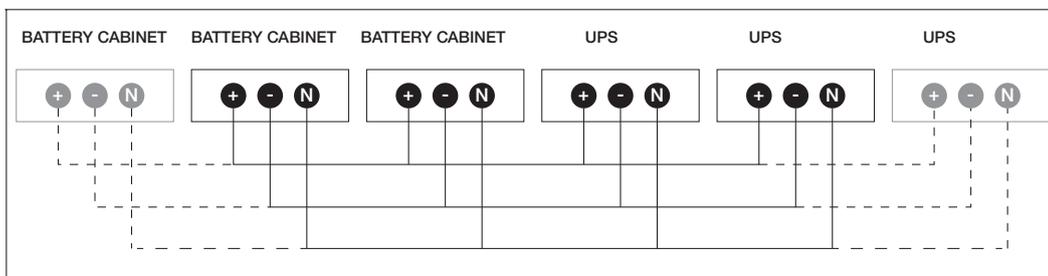

Connection example - distributed battery

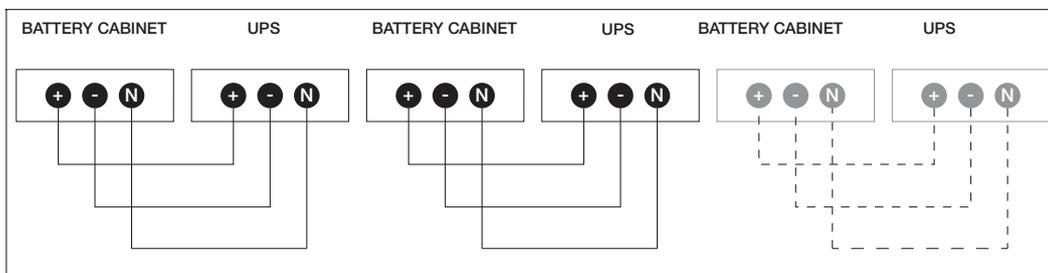

Note!
When battery cabinets not supplied by Socomec are used, the installer is responsible for:

- checking electrical compatibility;
- checking the presence of appropriate protective devices (fuses and switches that ensure the cables are protected from the UPS to the battery cabinet).

Once the UPS is switched on – before closing the battery switches – check the battery parameters on the control panel menu. For further information, refer to 'Display operation' chapter.




Note!
Not all battery/capacity combinations are available.





Note for Li-ion batteries (LIB):
The UPS interface to the Li-ion batteries (LIB), which could be based on a communication protocol or on dry contacts, monitors battery operation for the sole purpose of ensuring overall system service. This UPS battery interface cannot in any way replace safety systems to protect the battery against abuse or improper use, which requires an independent system in compliance with the relevant standards.

7. MODULE REPLACEMENT

7.1. Power module insertion

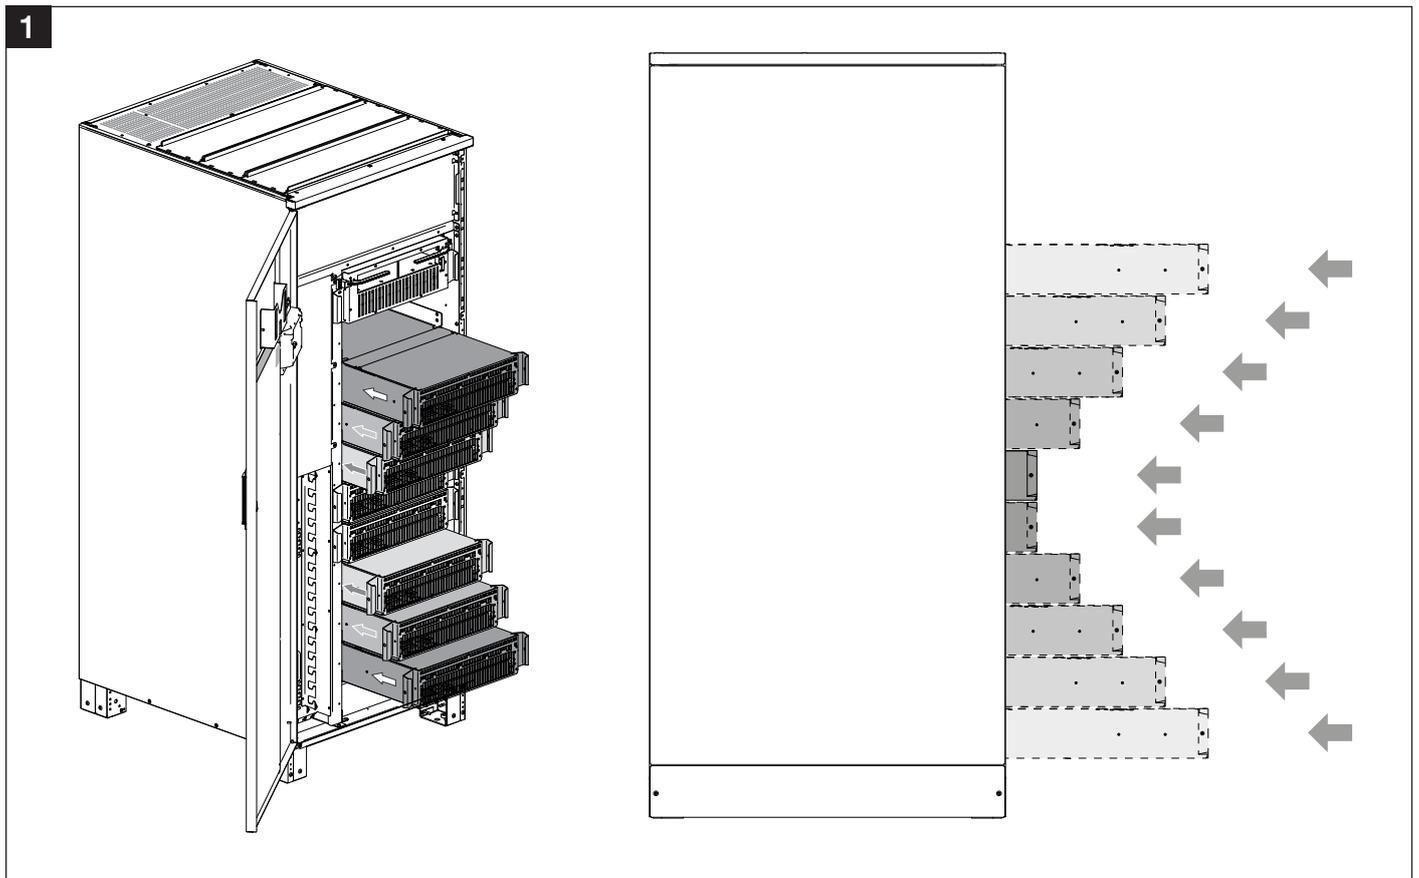





 **WARNING!**
Ensure the module is installed in the correct position.

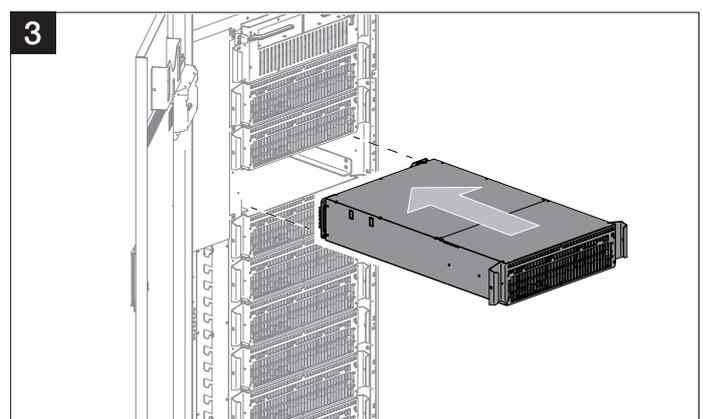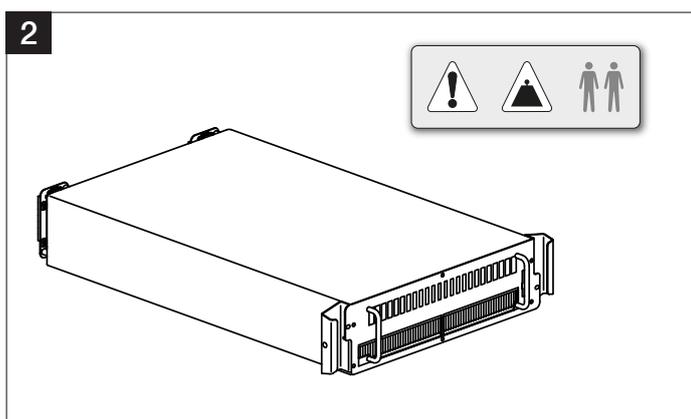

7.2. Power module removal



WARNING!
Before removing any module, ensure that the remaining power modules can support the load.

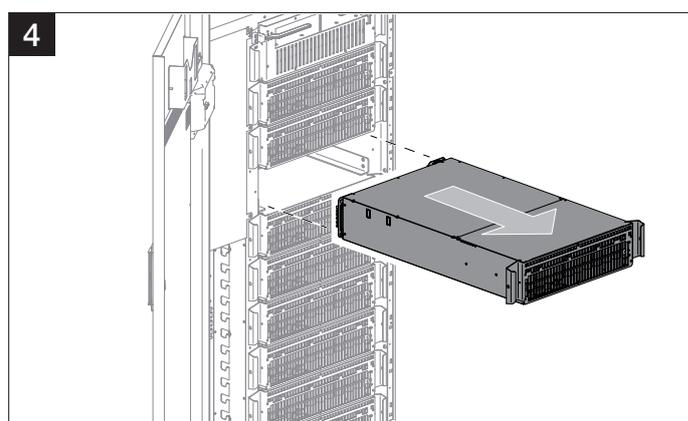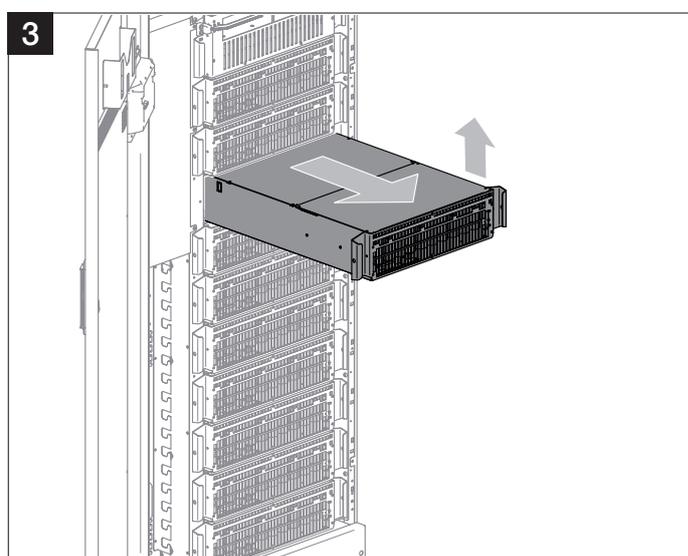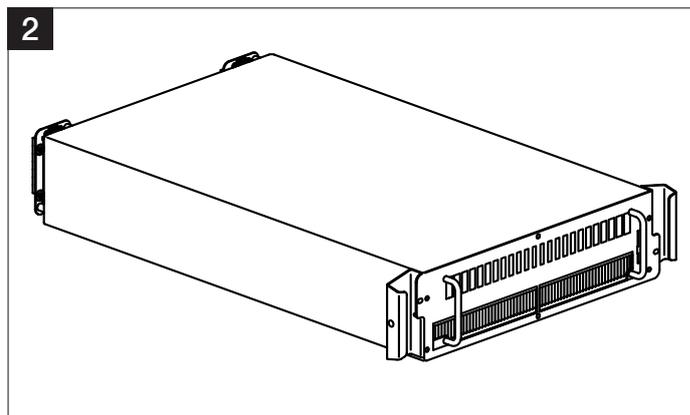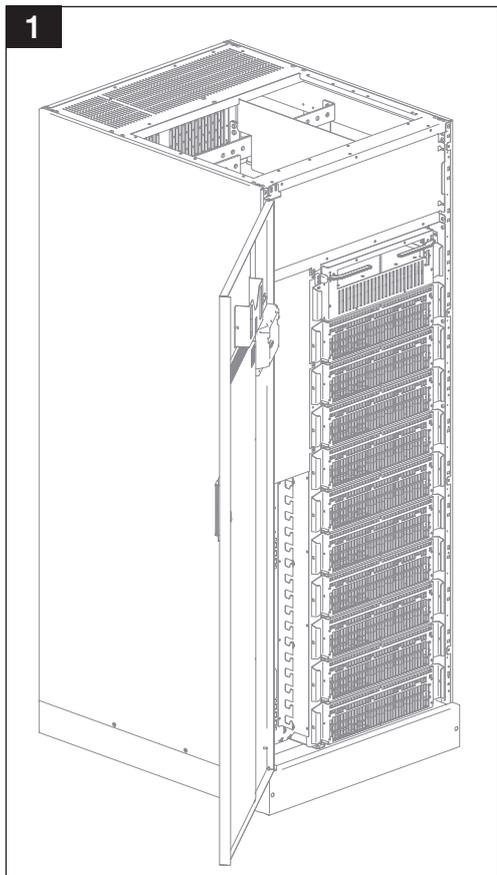

7.3. Bypass module replacement



WARNING!

The bypass module replacement can be performed by service personnel only.



WARNING!

The screws provide protective bonding and avoid unauthorised bypass removal.
Tighten the screws to ensure the bonding protection.




DANGER!

Failure to observe this safety instruction could result in fatal accident or serious injury, and damage equipment or the environment.

8. UPS STATUS INDICATION - LED, CONTROL PANEL AND DISPLAY

8.1. Led Indication

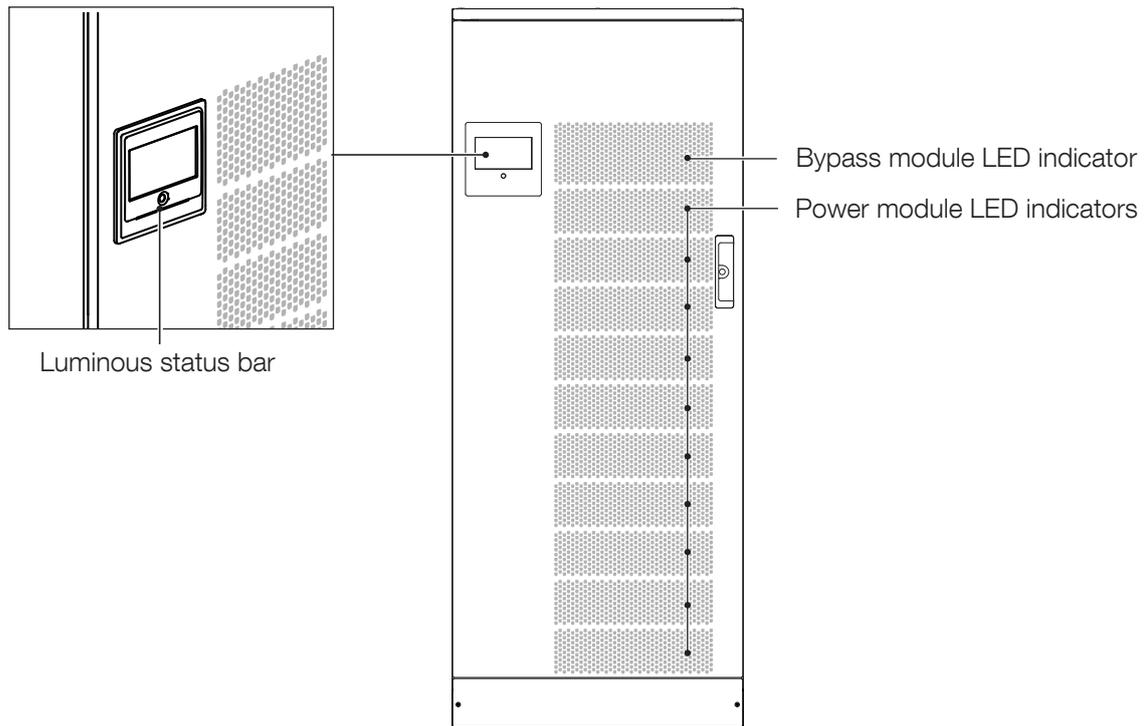


| LED indicator | | |
|-------------------------------|-----------------------------|---|
| Colour | Power module | Bypass module |
| Green | Module on inverter | Bypass ready to start |
| Flashing green | - | Load on bypass |
| Yellow | Module ready to start | Maintenance bypass |
| Flashing yellow | Module initialising | Load on inverter or bypass and transfer impossible/locked |
| Red | Module stopped due to alert | Bypass alert present |
| Flashing red | Initialising failure | Bypass blocked with alert |
| Flashing green yellow and red | No communication | No communication |

| Control panel luminous status bar indicator | |
|---|--|
| Colour | Status |
| Flashing red-yellow-green-red | No communication. The data is no longer updated or not present. Load status cannot be given. |
| Flashing red | Load supplied, but the output will stop in few minutes. |
| Red | Load not supplied: Output switched OFF due to an alarm. |
| Flashing yellow-red | Load supplied, but no longer protected. A critical alarm occurs. |
| Flashing yellow | Maintenance request / in progress. |
| Yellow | Load supplied with warning. |
| Flashing green-yellow-green | Load supplied and preventive alarm present. |
| Flashing green | Load going to be supplied and testing. |
| Green | Load protected in inverter. |
| Grey (OFF) | Load not supplied output on standby / isolated / OFF. |

8.2. Control panel

8.2.1. Control panel Description

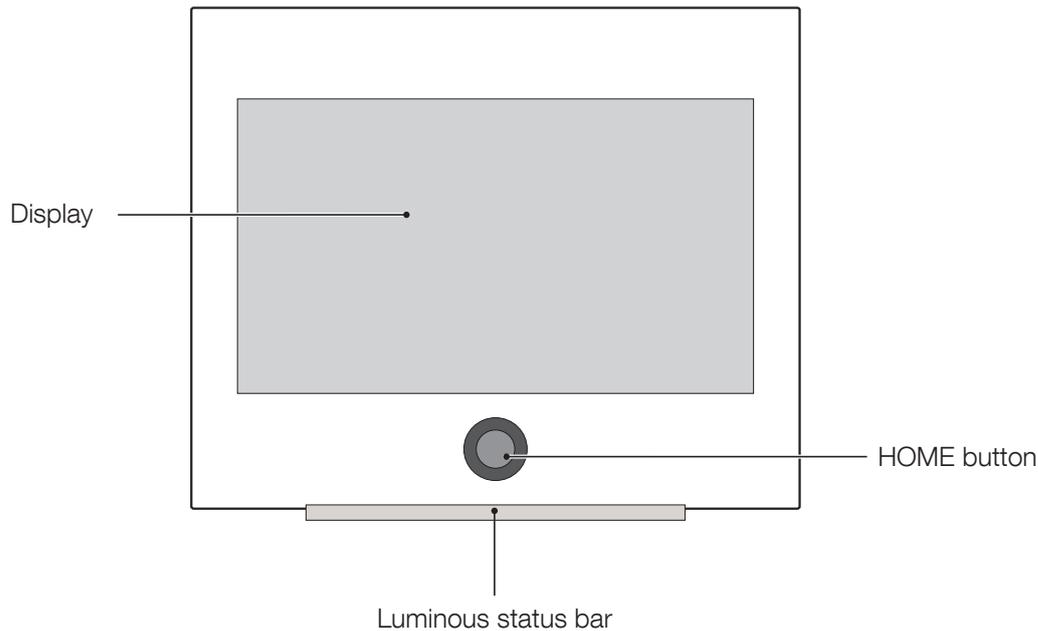

Only two elements are necessary to interact with the unit:

- HOME button: is a mono-stable button used to interact manually with the display especially in emergency situations. Logic behind the interaction is:
 - Single pressing (below 3 sec): HOME page return of graphic display
 - 3 sec < time < 6 sec: change the language to the default (English)
 - 6 sec < time < 8/9 sec: go to the calibration screen automatically
 - Above 8/9 sec: implement the hw reset of the micro controller and restart of the graphic
- Display: is the main active matrix of the display sensitive to touch pressure. The display is designed for rugged industrial applications. The display is single-touch only (no double touch effects). Depending on pressure, the navigation tree and various functions will be executed.

Two special functions are present on the control panel:


- Standby screen: for safety reasons, after a programmable amount of time, the display goes on standby. Display goes to the main screen and touch screen sensitivity is disabled. A label on the bottom of the main screen displays this status. To exit this status press the screen for the HOME button.
- OFF status: for power consumption and life enhancement, after a programmable amount of time display goes in "off". Display goes black and no interaction is possible. Touching the HOME button or screen resumes normal operations.




**Handle the control panel with care. It is made of metal, glass and plastic and contains delicate electronic components. The control panel may be damaged if dropped, pierced or broken or comes into contact with liquids.
Do not use the control panel with a cracked screen, as it may cause injury.**

8.2.2. Display description


- Stand alone UPS or unit view

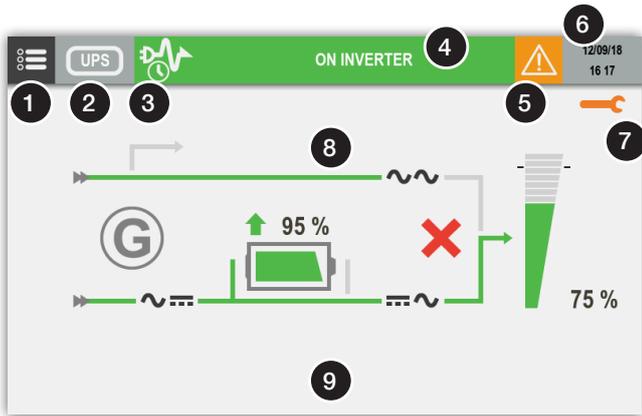


- Modules view:

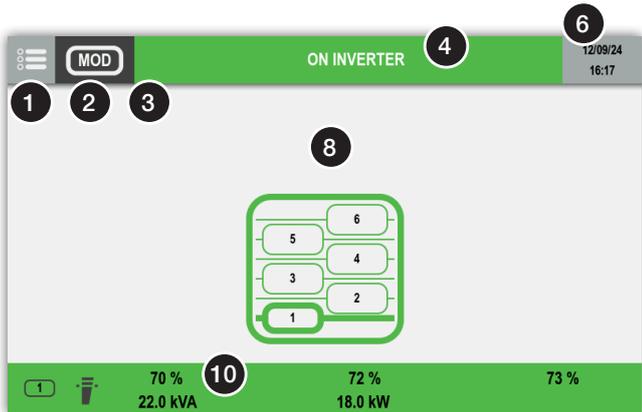

- UPS parallel system: System view

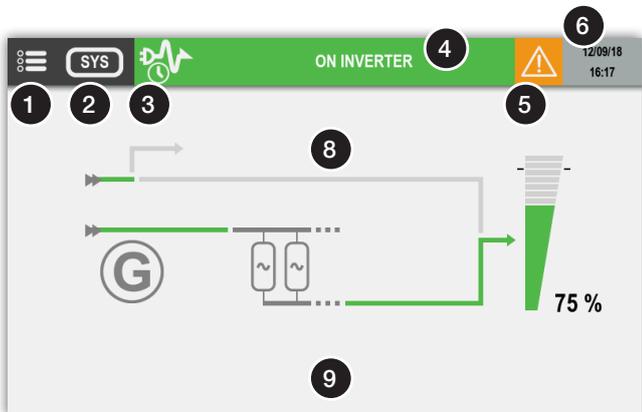

- UPS parallel system: Units overview

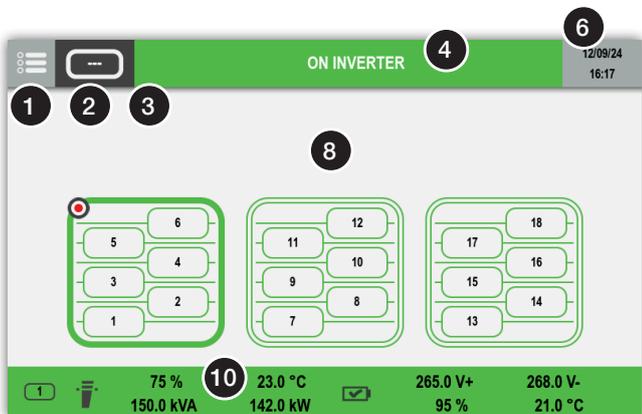

- 1 Menu access
- 2 Device reference
- 3 Functioning mode (see 'Functioning mode' chapter)
- 4 Status displaying / Status page access
Alarm present – access to alarm page
- 5 “Alarms” icon appears in case of preventive/critical alarm. A dedicated pop-up appears and can be cleared.
- 6 Clock
- 7 Maintenance alert
- 8 Synoptic area
Help message area
- 9 “Press Key to wake up” appears when the display goes on standby. Touch the display to wake it up.
- 10 Measures report

8.2.3. Menu architecture

MENU ITEMS

| | Modular Unit [UPS] | Modular Unit [1] to [4] | Modular System [SYS] |
|-------------------------|-----------------------|----------------------------|-------------------------|
| MONITORING | | | |
| ▶ ALARMS | • | • | • |
| ▶ STATUS | • | • | • |
| ▶ SYNOPTIC | • | | |
| ▶ UNIT | | • | • |
| ▶ SYSTEM | | • | • |
| ▶ MODULES OVERVIEW | | • | • |
| ▶ MODULE | • | • | • |
| EVENTS LOG | • | • | • |
| MEASUREMENTS | | | |
| ▶ OUTPUT MEASUREMENTS | • | • | • |
| ▶ BATTERY MEASUREMENTS | ^ | ^ | ^ |
| ▶ INPUT MEASUREMENTS | • | • | • |
| ▶ INVERTER MEASUREMENTS | • | | |
| ▶ BYPASS MEASUREMENTS | ^ | ^ | ^ |
| CONTROLS | | | |
| ▶ UPS PROCEDURE | | | |
| ▶ START | • ¹ | | • ¹ |
| ▶ STOP | • ¹ | | • |
| ▶ ON MAINTENANCE BYPASS | • ¹ | | • ¹ |
| ▶ MODE | | | |
| ▶ ECO MODE CONTROLS | | | |
| ▶ Eco Mode ON | ^ | | ^ |
| ▶ Eco Mode OFF | ^ | | ^ |
| ▶ ECO MODE SCHEDULE | ^ | | ^ |
| ▶ ENERGY SAVER CONTROLS | | | |
| ▶ Energy Saver ON | | | ^ |
| ▶ Energy Saver OFF | | | ^ |
| ▶ BATTERY | | | |
| ▶ BATTERY CONTROLS | | | |
| ▶ BATTERY TEST | ^ | ^ | ^ |
| ▶ BATTERY SCHEDULE | ^ | ^ | ^ |
| ▶ MAINTENANCE | | | |
| ▶ Alarms reset | • | • | • |
| ▶ LED test | • | • | • |

| | MENU ITEMS | | |
|------------------------|-----------------------|----------------------------|-------------------------|
| | Modular Unit [UPS] | Modular Unit [1] to [4] | Modular System [SYS] |
| CONFIGURATIONS | | | |
| ▶ CLOCK | • | | • |
| ▶ COM-SLOTS | | | |
| ▶ COM-Slot 1 | | ^ | |
| ▶ COM-Slot 2 | | ^ | |
| ▶ TEMPERATURE PROBE | ^ | ^ | ^ |
| ▶ REFERENCE | | | |
| ▶ SOCOMEC REFERENCE | | • | • |
| ▶ SERIAL NUMBER | | • | • |
| ▶ User Reference | | • | |
| ▶ Location | | • | |
| ▶ REMOTE | | | |
| ▶ Remote ON | • | | • |
| ▶ Remote OFF | • | | • |
| USER PARAMETERS | | | |
| ▶ LANGUAGE | • | | • |
| ▶ PASSWORD | • | | • |
| ▶ BUZZER | • | | • |
| ▶ DISPLAY | • | | • |
| ▶ PREFERENCES | • | | • |
| ▶ TOUCHSCREEN | • | • | • |

MENU ITEMS

| SERVICE | Modular Unit [UPS] | Modular Unit [1] to [4] | Modular System [SYS] |
|-------------------------|-----------------------|----------------------------|-------------------------|
| ▶ SERVICE REPORT | • | • | |
| ▶ FW VERSION | • | • | |
| ▶ UPS SETTINGS | | | |
| ▶ OUTPUT MENU | | | |
| ▶ Output voltage | • | | • |
| ▶ Output frequency | • | | • |
| ▶ Converter mode | • | | • |
| ▶ Automatic restart | • | | • |
| ▶ BATTERY MENU | | | |
| ▶ BATTERY INSTALLATION | | | |
| ▶ Battery available | ^ | ^ | ^ |
| ▶ Battery type | ^ | ^ | ^ |
| ▶ Battery connection | ^ | ^ | ^ |
| ▶ BATTERY DATA | | | |
| ▶ Capacity | ^ | ^ | ^ |
| ▶ N° of cells | ^ | ^ | ^ |
| ▶ N° of blocks | ^ | ^ | ^ |
| ▶ Recharge type | ^ | ^ | ^ |
| ▶ Premin. Voltage | ^ | ^ | ^ |
| ▶ Min. Voltage | ^ | ^ | ^ |
| ▶ Floating | ^ | ^ | ^ |
| ▶ Boost Voltage | ^ | ^ | ^ |
| ▶ BATTERY THRESHOLDS | | | |
| ▶ Rech. Curr. Limit | ^ | ^ | ^ |
| ▶ Float-Boost Threshold | ^ | ^ | ^ |
| ▶ Boost-Float Threshold | ^ | ^ | ^ |
| ▶ TEMP.COMPENSATION | | | |
| ▶ Temper.Compensation | ^ | ^ | ^ |

| | MENU ITEMS | | |
|--|-----------------------|----------------------------|-------------------------|
| | Modular Unit [UPS] | Modular Unit [1] to [4] | Modular System [SYS] |
| ▶ TRANSFORMER MENU | | | |
| ▶ Input transformer | • | | • |
| ▶ Output transformer | • | | • |
| ▶ Aux transformer | • | | • |
| ▶ Input trasfo Voltage | • | | • |
| ▶ Output trasfo Voltage | • | | • |
| ▶ Aux trasfo Voltage | • | | • |
| ▶ MAINS CONFIGURATION | | | |
| ▶ Mains configuration | • | | • |
| ▶ REDUNDANCY | | | |
| ▶ Nominal Number of Modules | | | • |
| ▶ Redundancy level | | | • |
| ▶ NETWORK PARAMETERS (Only for service) | | | |
| ▶ DHCP | • | • | |
| ▶ IP | • | • | |
| ▶ MASK | • | • | |
| ▶ GATEWAY | • | • | |
| ▶ MAC (ready only) | • | • | |
| ▶ COMMISSIONING | • | • | |

(^) Depending on setting

(1) Displayed depending on state

8.3. Functioning mode



Service



Isolated



Eco mode scheduling active



Eco Mode active



Standby active




Energy saver active



Autotest

8.4. Status

8.4.1. Status page

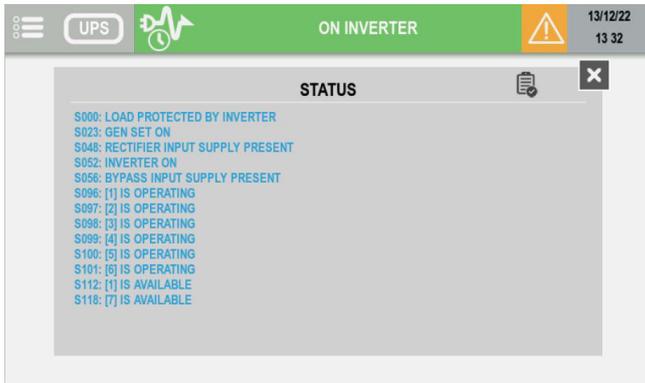

Filtering



List all active status



List all status



List all status not active

8.5. Alarms management

8.5.1. Alarm report


The alarm icon is present if at least one alarm is present.

Tap on the icon to open the alarm list.

8.5.2. Alarm popup


In case of critical alarm a popup message appears and the buzzer is running according its settings.

The highest priority alarm is displayed.

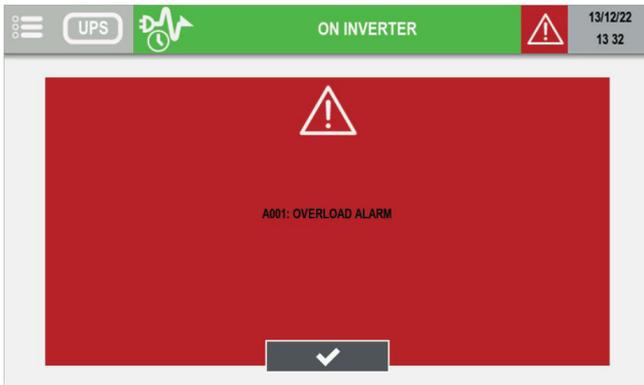

Tap on valid button to stop the buzzer and to close the popup message. The alarm page is automatically display after this action.

8.5.3. Alarm page

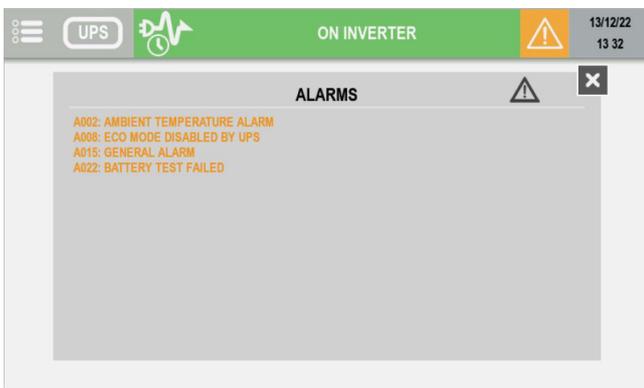

Filtering



List all active alarms



List all active preventive alarms



List all active critical alarms


POPUP ALARM FOR PREVENTIVE ALARM

In USER PARAMETERS menu, PREFERENCES item gives the possibility to enable popup alarm also with preventive alarms.




8.6. Synoptic animation


- Stand alone UPS or unit view

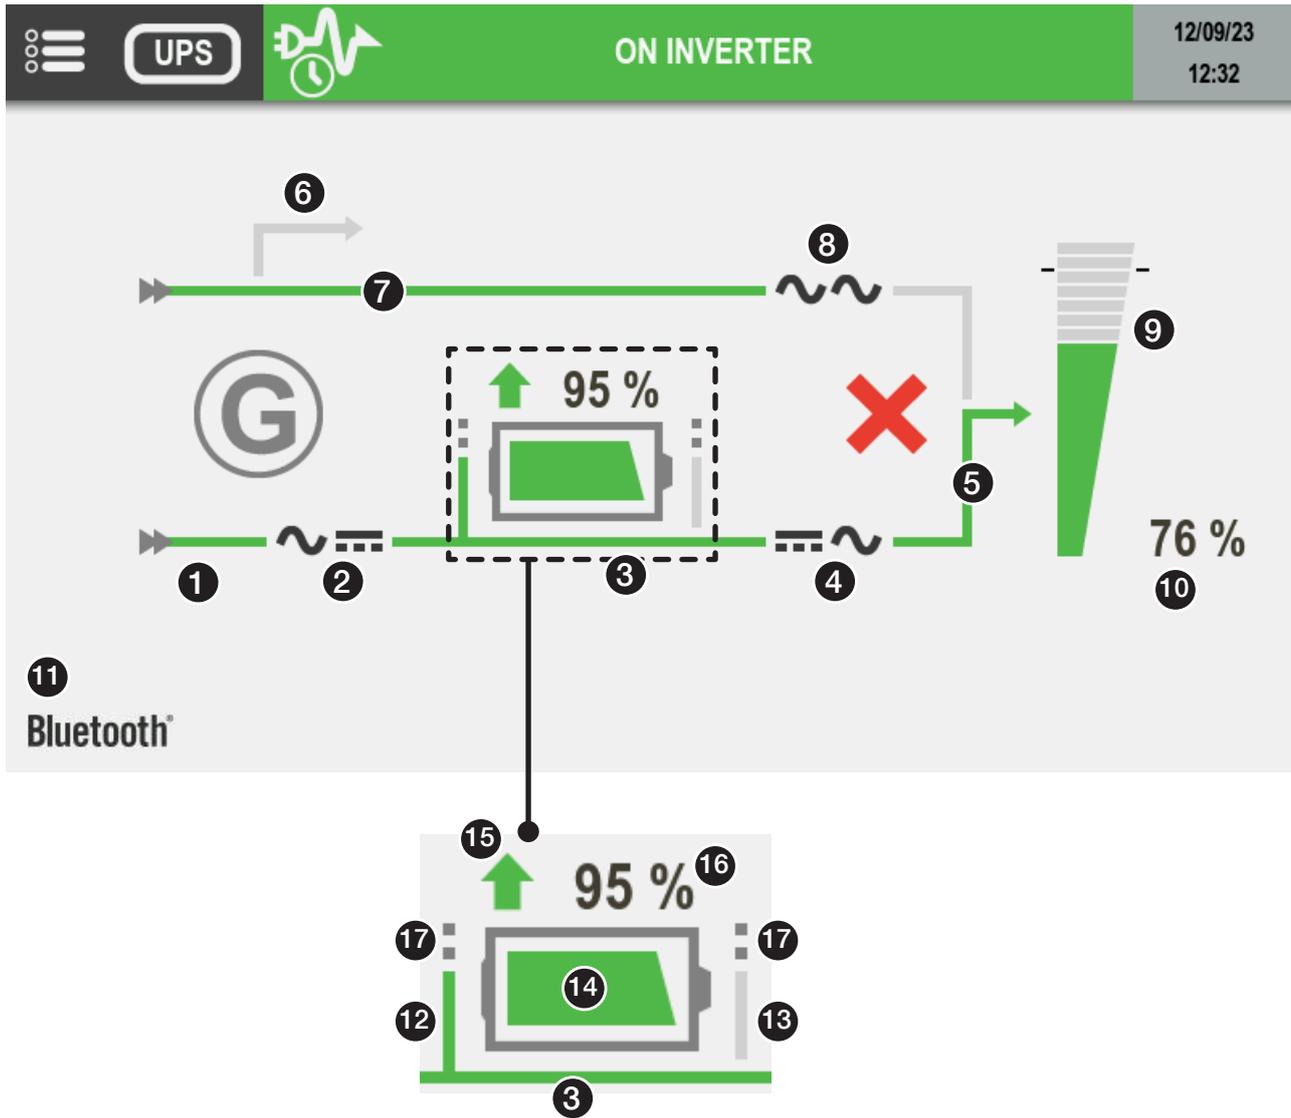

- UPS parallel system: System view

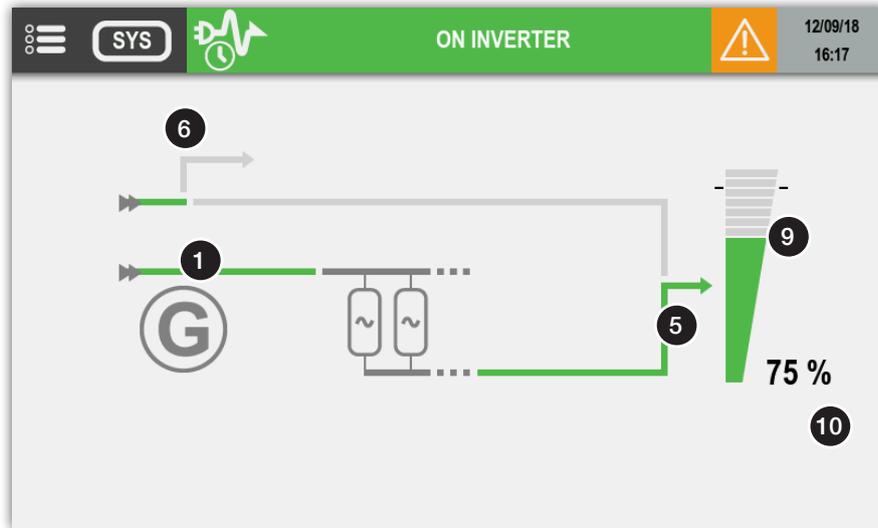

- UPS parallel system: Units view





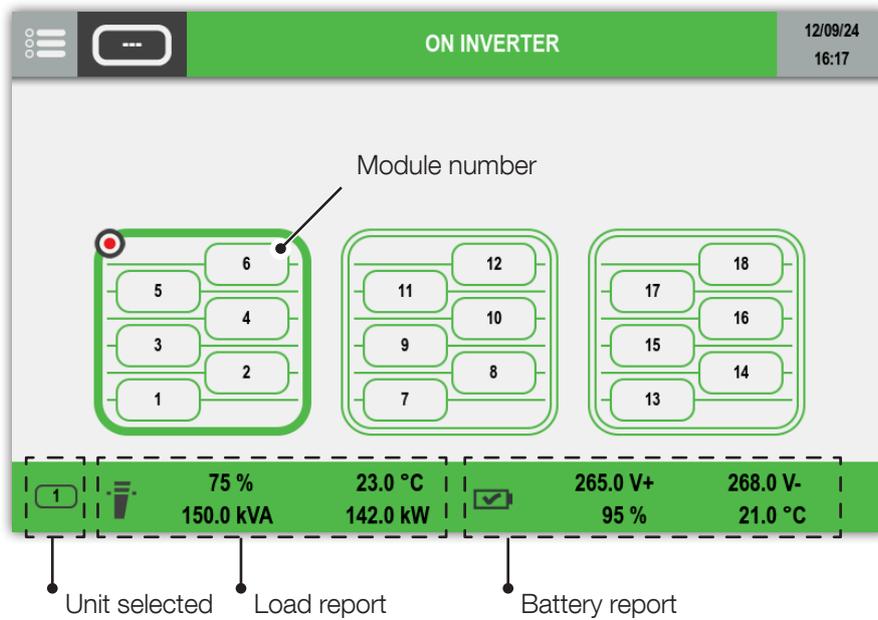


| Item | Description | Rules of animation | | | | Touch actions |
|------|--|---|---------------------|----------------------------|-------------------|--------------------------------------|
| | | Grey | Green | Yellow | Red | |
| 1 | Rectifier input supply | Not present | Present | Out of tolerance | - | - |
| 2 | Rectifier status | Normal status | - | Preventive alarm | Critical alarm | Access to input measurements page |
| | | | | | | |
| 3 | DC voltage bus | DC voltage absent | DC voltage presence | - | - | - |
| 4 | Inverter status | Normal status | - | Preventive alarm | Critical alarm | Access to inverter measurements page |
| | | | | | | |
| 5 | Inverter output | Inverter OFF | Inverter ON | Inverter on battery | - | - |
| 6 | Maintenance bypass * | MBP present | - | Load on maintenance bypass | - | - |
| 7 | Bypass input * | Not present | Present | Out of tolerance | - | - |
| 8 | Bypass status * | Normal status | - | Preventive alarm | Critical alarm | Access to bypass page |
| | | | | | | |
| 9 | Load rate symbol | No load | Fill-up to 95% | Fill-up to 110% | Fill-up over 110% | Access to output measurements pages |
| | | | | | | |
| 10 | Load rate value | Instantaneous value. displayed if value > 0 | | | | - |
| 11 | Bluetooth | BLE dongle for Remote Xpert Service plugged | | | | |
| 12 | DC battery input ** | DC voltage absent | DC voltage presence | BCR function running | - | - |
| 13 | DC battery output ** | DC voltage absent | DC voltage presence | Inverter on battery | | - |
| 14 | Battery indicator ** | - | Fill-up to 100% | Fill-up to 45% | Fill-up to 15% | Access to bat. measurements page |
| | | | | | | |
| 15 | Battery charging / discharging ** | - | Battery charging | Battery discharging | - | - |
| | | | | | | |
| 16 | Battery level or remaining backup time during battery discharge ** | Instantaneous value. displayed if value > 0 The backup time is no more displayed if it is below two minutes. | | | | - |
| 17 | Shared battery symbol not present if each unit has its own battery. ** | | | | | - |

* Element disappears if converter mode is active

** Not present if batteries are not present

- Battery animation
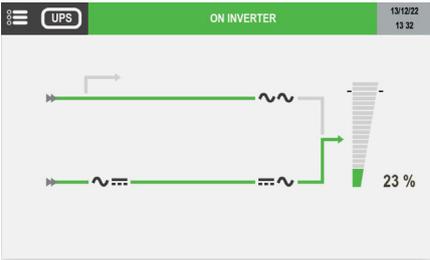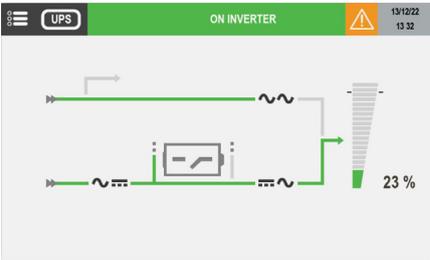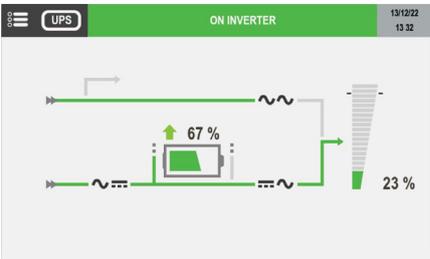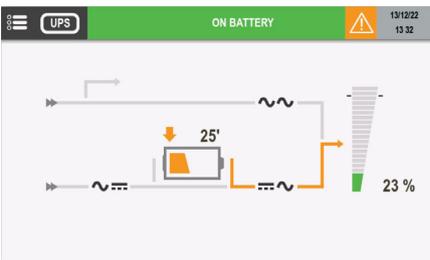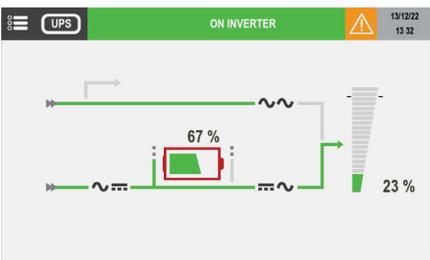
| BATTERY STATUS | DESCRIPTION |
|---|---|
|  | <p>If battery is absent, the battery icon is not displayed</p> |
|  | <p>If battery is present but not connected, the icon is displayed</p> |
|  | <p>If the battery is present and charging, the arrow icon is displayed</p> |
|  | <p>If the battery is present and discharging, the arrow icon is displayed</p> |
|  | <p>If a battery alarm has occurred, the red icon is displayed</p> |

8.6.1. Additional icons



Bypass impossible.



Bypass locked.



“Genset Mode” when the gen set contact is active. Need ADC+SL correctly configured.



Maintenance alarm.

Preventive maintenance is requested.



BLE dongle for Remote Xpert Service plugged.

8.7. Event log page

| Date | Time | Code | Description | Status |
|----------|----------|------|------------------------------------|--------|
| 13/12/16 | 08:30:00 | S000 | LOAD PROTECTED BY INVERTER | NO |
| 31/12/16 | 08:31:05 | S112 | [1] IS AVAILABLE | YES |
| 31/12/16 | 08:31:07 | A032 | RECTIFIER CRITICAL ALARM | YES |
| 31/12/16 | 08:31:09 | A064 | PROGRAMMABLE A064 | YES |
| 16/01/17 | 12:25:00 | A208 | PROGRAMMABLE S079 | YES |
| 17/01/17 | 13:40:00 | A176 | ALL UNITS OR MODULES ARE AVAILABLE | YES |
| 18/01/17 | 16:30:00 | S000 | LOAD PROTECTED BY INVERTER | NO |
| 25/01/17 | 00:15:00 | A016 | BATTERY DISCONNECTED | YES |
| 15/01/17 | 10:20:00 | S000 | LOAD PROTECTED BY INVERTER | NO |
| 18/01/17 | 16:30:00 | S096 | [1] IS OPERATING | NO |



Show STATUS events



Show ALARMS events




Show CONTROLS

8.8. Menu function descriptions

8.8.1. Entering passwords

Some operations and settings require a password in order to be performed.

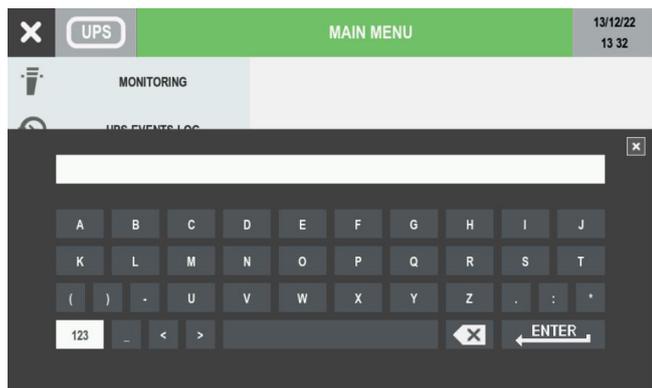

Wildcard covering of the password is active by default.

The default password is **SOCO**.



NOTE!

The password must only contain capital letters and not include the following characters ():*<>._

Press **ENTER** to confirm the selection or close the window to abort.

8.8.2. MONITORING menu

Submenu Alarm opens the alarm pages.

Submenu Status opens the status pages.

8.8.3. EVENTS LOG menu

This menu accesses the event log (Status and Alarms).

8.8.4. MEASUREMENTS menu

This menu displays all UPS measurements relating to the rectifier input stage, output stage, batteries, bypass input stage and inverter.

The pins on the bottom of the screen indicate whether or not there are more pages. Sliding to the right or left changes measurements page.

8.8.5. CONTROLS menu

This menu contains the commands that can be sent to the UPS. Some of them are password protected. If a command is not available, a COMMAND FAILURE message appears.

- **UPS PROCEDURE: START/ON MAINTENANCE BYPASS/STOP** see 'Operating procedures' chapter.
- **BATTERY: BATTERY CONTROLS > BATTERY TEST:** this function checks whether or not test conditions are available and returns the results.
- **MODE: ECO MODE CONTROLS:** this function sets/resets the **ECO MODE**.
- **MAINTENANCE: Alarms reset:** this function clears the alarm history, **LED test:** this function activates LED flashing for a few seconds.

8.8.6. UPS CONFIGURATION menu

- **CLOCK:** this function sets the date and time.
- **COM-SLOTS:** this function configures the RS485 modbus serial link.
- **REFERENCE:** this function gives the possibility to customised the unit reference and the location.
- **REMOTE:** this function enables controls from remote devices through MODBUS protocol (NET VISION for example).

8.8.7. USER PARAMETERS menu

This menu contains the different functions for users such as language, password, buzzer, display, preferences, touchscreen calibration.

8.8.8. SERVICE menu

This menu is reserved for support service personnel and holds UPS identification data and utilities for software upgrades.

- **UPS SETTINGS:** critical machine settings for output. Some parameters cannot be modified when the UPS supplies the load by INVERTER or BYPASS.

| | |
|--|--|
|  | Wrong configuration in UPS SETTINGS could damage the load or the batteries. |
|--|--|


8.9. Additional user functions

8.9.1. Phase colour modification

- Enter **MAIN MENU > USER PARAMETERS > PREFERENCES**

For each phase is possible to select a specific colour in a set of colour range. Those colours are applying in the measurements pages.

| Colour | Default colour |
|---|----------------|
|  Yellow | Phase 3 |
|  Orange | |
|  Red | |
|  Green | |
|  Light blue | Phase 2 |
|  Dark blue | |
|  Purple | Phase 1 |
|  Brown | |
|  Light grey | |
|  Dark grey | |
|  Black | |

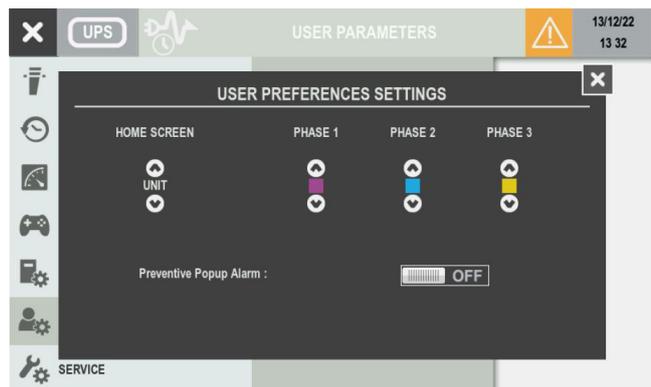

The popup alarm appears in case of critical alarms. This function can be extended to preventive alarms by switching "Preventive Popup Alarm" to ON.

9. OPERATING PROCEDURES



NOTE: before carrying out any operations on the unit read the 'Safety standards' chapter carefully.



NOTE: with the stop procedure the load will be disconnected.

9.1. Switching on

- Connect the mains and auxiliary mains to the UPS.
- Close external input mains switch device.
- Wait for the display to switch on.
- Enter **MAIN MENU > CONTROLS > UPS PROCEDURE**.
- Select **START** and press **ENTER**.
- Carry out the operations indicated on the display.

9.2. Switching off

This operation interrupts the power supply to the load. The UPS and the battery charger will be shutdown.

- Enter menu **MAIN MENU > CONTROLS > UPS PROCEDURE**.
- Select **STOP** and press **ENTER**.
- Wait approx. 2 minutes for the UPS shutdown.



NOTE: the controlled shutdown of each server connected to the LAN can be managed by shutdown software (only with Net Vision option card). This operation cannot be aborted.

- Carry out the operations indicated on the display.

9.3. Bypass operations

Switching onto maintenance bypass



NOTE: this operation is only available when the external manual bypass is configured.

This operation creates a direct connection between the UPS input and output, excluding the equipment control part. This operation is performed in the event of:

- standard maintenance,
- serious failure has occurred.



WARNING! LOAD POWERED BY AUXILIARY MAINS!
Your load is exposed to mains disturbances.

- Enter menu **MAIN MENU > CONTROLS > UPS PROCEDURE**.
- Select **ON MAINTENANCE BYPASS** and press **ENTER**.
- Carry out the operations indicated on the display.



NOTE!
When an external manual bypass is present:

- carry out the procedure described above,
- close external bypass switch.

Switching on from maintenance bypass

- Close external input mains switch device.
- Wait for the display to switch on.
- Enter menu **MAIN MENU > CONTROLS > UPS PROCEDURE**.
- Select **START** and press **ENTER**.
- Carry out the operations indicated on the display.



NOTE!

When an external manual bypass is present, connect a normally-closed early make contact from the External Maintenance bypass switch to the dedicated connector.

9.4. Extended out of service

When the UPS is deactivated for some time, the batteries must be recharged regularly.

They have to be recharged every three months.

- Check that output switches D and E are OFF.
- Connect the mains and auxiliary mains to the UPS.
- Switch ON input switches A, B and G, F if present.
- Wait for the display to switch on.
- Close the external battery breaker/fuses.
- Wait until the batteries are fully charged. Check in the menu **MAIN MENU > MEASUREMENTS > BATTERY MEASUREMENTS**.
- Open the external battery breaker/fuses.
- Switch OFF input switches A, B and G, F if present.

9.5. Emergency shutdown



NOTE!

This operations interrupts the supply to the output load from both inverters and automatic bypass.

Ups power off

Open the external output switch (E) located in the external distribution cabinet or the remote shutdown button installed nearby the UPS.

Remote ups power off

It is possible to interrupt the power supply to the output load using the ADC+SL board. Refer to 'Standard features and option' chapter.

10. OPERATING MODES

10.1. On line mode

A special feature of the UPS is the ONLINE double conversion in conjunction with low distortion mains power absorption. In ON LINE mode, the UPS can supply a voltage that is fully stabilised in frequency and amplitude, regardless of any interference in the mains power supply, within the most stringent classification of UPS regulations.

ONLINE operation provides three operating modes according to mains and load conditions:

- **Inverter mode**

This is the most frequent operating condition: energy is drawn from the primary mains power supply and converted and used by the inverter to generate the output voltage to power the connected loads.

The inverter is constantly synchronised in frequency with the auxiliary mains to enable load transfer (due to an overload or inverter shutdown) without any break in the power supply to the load.

The battery charger supplies the energy required to maintain or recharge the battery.

- **Bypass mode**

In the event of inverter failure, the load is automatically transferred onto the auxiliary mains without any interruption in the power supply.

This procedure may occur in the following situations:

- in the event of a temporary overload, the inverter continues to power the load. If the condition persists, the UPS output is switched
 - on to the auxiliary mains via automatic bypass. Normal operation, which is from the inverter, returns automatically a few seconds after the overload disappears.
 - when the voltage generated by the inverter goes outside the limits due to a major overload or a fault on the inverter.
 - when the internal temperature exceeds the maximum value allowed.
- **Battery mode**

In the event of a mains failure (micro interruptions or extended power cuts), the UPS continues to power the load using the energy stored in the battery.

10.2. High efficiency mode

The UPS has a selectable, programmable economy operating mode (ECO MODE) that can increase overall efficiency by up to 99% for energy saving purposes. If the power supply fails, the UPS will automatically switch onto the inverter and continue to supply power to the load by drawing energy from the battery.

This mode does not provide perfect stability in frequency and voltage like the NORMAL MODE. Therefore the use of this mode should be carefully evaluated according to the level of protection required by the application. With the optional board Net Vision specific daily or weekly time intervals can be selected and programmed to power applications directly from the auxiliary mains.

ECO MODE operation provides very high efficiency, since the application is powered directly from the auxiliary mains via the automatic bypass under normal operating conditions.

To activate follow the correct procedure in the control panel.

10.3. Converter mode

In converter mode the UPS can supply a fully stabilised sinusoidal output voltage with a different frequency from the input power line (50 Hz or 60 Hz is available as output frequency value).



NOTE!

Only set this mode on UPS units with the auxiliary mains (AUX MAINS) disconnected! Do not set this mode on UPS units with common mains lines as it could damage the load!

10.4. Operation with maintenance bypass

If the internal maintenance bypass is activated using the appropriate procedure, the load is powered directly from the maintenance bypass, while the UPS is separate from the power supply and can be switched off.

This operating mode can be selected for maintenance to be carried out on the system, so that the necessary actions can be performed by service personnel without having to disconnect the power supply to the load.

10.5. Operation with motor generator (GENSET)

The UPS can be operated in conjunction with a generator (GENSET) over the ADC+SL card (refer to 'Standard features and option' chapter). With a generator, the frequency and voltage ranges of the auxiliary mains can be increased to accept the instability of the GENSET and at the same time to avoid operation from the battery or risks of out-of-synchronisation switching on to the bypass.

11. STANDARD FEATURES AND OPTION

| Availability | |
|--------------|--------------------------|
| ● | Factory-installed option |
| ○ | Available as option |
| - | Not available |
| STD | Standard feature |

| Features | MODULYS XM | Compatibility |
|---|------------|-------------------|
| Communication Option | | |
| ADC+SL card | ○ | |
| LIB-ADC <i>(Lithium Ion Battery interface)</i> | ○ | |
| Modbus TCP interface | ○ | |
| Temperature sensor | ○ | ❗ ADC+SL card |
| Net Vision card | ○ | |
| EMD | ○ | ❗ Net Vision card |
| ACS card | ○ ● | |
| Remote touchscreen display | ○ | ❗ ADC+SL card |
| Mechanical Option | | |
| Seismic kit | ● | |
| Top connection box extension | ○ | |
| Lifting bolts kit | ○ | |
| Electrical Option | | |
| Kit for common mains | ○ | |
| Kit for TN-C / Neutral-Ground connection | ○ ● | |
| Other | | |
| Cold start | ○ ● | |

❗ Required option


⊘ Incompatible option

11.1. ADC+SL card

The ADC+SL (Advanced Dry Contact + Serial Link) is a slot optional board that provides:

- 4 relays for external device activation (can be set as normally closed or normally open).
- 3 free inputs to report external contacts to UPS.
- 1 connector for external battery temperature sensor (optional).
- RS485 insulated serial link providing MODBUS RTU protocol.
- 2 LEDs indicating board status.

The board is plug&play: the UPS is able to recognise its presence and configuration (up to 4 standard operating modes can be selected by the display) and manages the ADC+SL outputs and the inputs accordingly. It is possible to create a custom operation mode through after sales service.

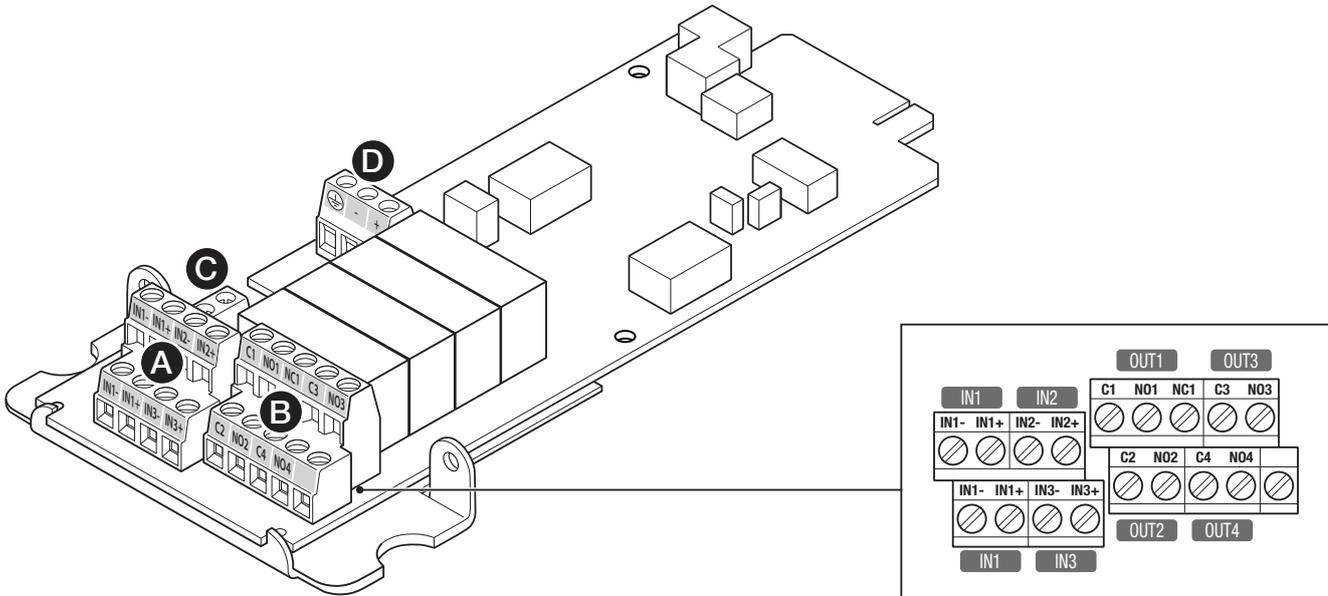

KEY

- A 3 free inputs to link external contacts to UPS.
- B 4 relays for external device activation.
- C 1 connector for external temperature sensor.
- D RS485 insulated serial link.



NOTE!

If the board is removed while operating, an alarm is flagged on the control panel. Perform an "Alarm reset" control to cancel it.

Input

- Free voltage loop.
- INx+ has to be connected to INx- to close the loop on XB4 connector.
- Inputs must be isolated with basic insulation from a primary circuit up to 277 V.
- IN1 is duplicated, giving the possibility to link the UPS POWER OFF signal to other equipment, for example.

Relay outputs

- Contact voltage guaranteed at 277 V (AC) / 25 V (DC) – 4 A (for higher voltage, please contact the manufacturer).
- Relay 1 gives the possibility of choosing between normally closed (NC1) or normally open (NO1) position. Relays 2, 3 and 4 only have normally open position (NOx).
- On connector XB3, Cx means common, NOx means normally open position.

| STANDARD configuration (default) | | | | | |
|----------------------------------|-----------------------------------|----------------------|---|-------------------|---------------------|
| IN/OUT | DESCRIPTION | ACTIVATION DELAY (s) | REMARK ⁽¹⁾ | INPUT TYPE | STATE |
| IN1 | UPS POWER OFF | 1 | Command sent to UPS ⁽²⁾ | Close to activate | Normally open |
| IN2 | GEN SET ON | 1 | Activate S023 status | Open to activate | Normally close |
| IN3 | INSULATION FAULT | 10 | Activate A026 | Open to activate | Normally close |
| RELAY 1 | GENERAL ALARM | 10 | (NC1 or NO1 position can be chosen) Relating to A015 | | Normally open/close |
| RELAY 2 | OPERATING ON BATTERY | 30 | Relating to A019 | | Normally open |
| RELAY 3 | END OF BACK-UP TIME | 10 | Relating to A017 | | Normally open |
| | IMMINENT STOP | 10 | Relating to A000 | | Normally open |
| RELAY 4 | LOAD SUPPLIED BY AUTOMATIC BYPASS | 10 | Relating to S002 | | Normally open |

| OPTIONS SUPERVISOR configuration | | | | | |
|----------------------------------|----------------------|----------------------|---|-------------------|---------------------|
| IN/OUT | DESCRIPTION | ACTIVATION DELAY (s) | REMARK ⁽¹⁾ | INPUT TYPE | STATE |
| IN1 | UPS POWER OFF | 1 | Command sent to UPS ⁽²⁾ | Close to activate | Normally open |
| IN2 | FAN FAILURE | 10 | Activate A054 | Close to activate | Normally open |
| IN3 | BATTERY DISCONNECTED | 10 | Activate A016 | Open to activate | Normally close |
| RELAY 1 | GENERAL ALARM | 10 | (NC1 or NO1 position can be chosen) Relating to A015 | | Normally open/close |
| RELAY 2 | OPERATING ON BATTERY | 30 | Relating to A019 | | Normally open |
| RELAY 3 | REDUNDANCY LOST | 10 | Relating to A006 | | Normally open |
| RELAY 4 | BATTERY DISCONNECTED | 1 | Relating to A016 | | Normally open |

| SAFETY configuration | | | | | |
|----------------------|----------------------------|----------------------|---|-------------------|---------------------|
| IN/OUT | DESCRIPTION | ACTIVATION DELAY (s) | REMARK ⁽¹⁾ | INPUT TYPE | STATE |
| IN1 | UPS POWER OFF | 1 | Command sent to UPS ⁽²⁾ | Close to activate | Normally open |
| IN2 | INSULATION FAULT | 1 | Activate A026 | Open to activate | Normally close |
| IN3 | CHARGER DISABLE/ ENABLE | 10 | Command sent to UPS ⁽²⁾ | Open to activate | Normally close |
| RELAY 1 | GENERAL ALARM | 10 | (NC1 or NO1 position can be chosen) Relating to A015 | | Normally open/close |
| RELAY 2 | UPS POWER OFF | 1 | Relating to A059 | | Normally open |
| RELAY 3 | END OF BACK-UP TIME | 10 | Relating to A017 | | Normally open |
| | IMMINENT STOP | 10 | Relating to A000 | | Normally open |
| RELAY 4 | INSULATION FAULT | 1 | Relating to A026 | | Normally open |

| ENVIRONMENTAL configuration | | | | | |
|-----------------------------|---------------------------|----------------------|---|-------------------|---------------------|
| IN/OUT | DESCRIPTION | ACTIVATION DELAY (s) | REMARK ⁽¹⁾ | INPUT TYPE | STATE |
| IN1 | UPS POWER OFF | 1 | Command sent to UPS ⁽²⁾ | Close to activate | Normally open |
| IN2 | PROGRAMMABLE ALARM | 10 | Activate A064 | Open to activate | Normally close |
| IN3 | BATTERY TEMPERATURE ALARM | 10 | Activate A020 | Open to activate | Normally close |
| RELAY 1 | GENERAL ALARM | 10 | (NC1 or NO1 position can be chosen) Relating to A015 | | Normally open/close |
| RELAY 2 | BATTERY TEMPERATURE ALARM | 10 | Relating to A020 | | Normally open |
| RELAY 3 | REDUNDANCY LOST | 10 | Relating to A006 | | Normally open |
| | OVERLOAD | 10 | Relating to A001 | | Normally open |
| RELAY 4 | PROGRAMMABLE ALARM | 10 | Relating to A064 | | Normally open |

(1) The acronyms mentioned are linked to MODBUS table (Snnn=Status/Annn=Alarm).

(2) A self-locking emergency push button must be used for the UPS Power Off input.

Note: custom configuration is also available. For more information contact Socomec.

RS485 serial link

- Insulated RS485, protected against over voltage. Only for local bus purposes; maximum ~500 m.
- Pull up and pull down line resistor XJ1 (failsafe biasing): jumper open by default.
- Possibility of fixing the RS485 cable to the board.
- Cable type required: twister pair cable + shield to connect to ground. (AWG 24, 0.2 mm² for example).

The INPUT and RELAYS are managed with information coming from the UPS.



NOTE!

**Inputs and relays can be re-programmed depending on requirements.
Contact your SOCOMEC after-sales service to change Input/Output programming.**

Information coming from inputs can be reported in the UPS database for display on the mimic panel and is accessible on the MODBUS table.

The UPS can manage up to three ADC+SL option cards. The cards can be re-programmed for other uses.

In this specific case, the 3 serial links (SLOT 1, SLOT 2 and SLOT 3) are independent.

Modbus serial link

The RS485 provides MODBUS RTU protocol.

The description of MODBUS addresses and UPS database are described in the MODBUS user manual. All manuals are available on SOCOMEC's web site (www.socomec.com).

Serial link settings

COM1 relates to serial port on board in SLOT 1.

COM2 relates to serial port on board in SLOT 2.

COM3 relates to serial port on board in SLOT 3.

Settings are available via the mimic panel to configure:

- Baud rate.
- Parity.
- MODBUS slave number.

Board status

Board presence is reported through status S064 for slot 1, S065 for slot 2 and S068 for slot 3.

In the case of board failure, 'Option board alarm' (A062) occurs to prevent malfunctioning.

11.1.1. Temperature sensor

The temperature sensor can be used to monitor the battery temperature.

The ADC+SL card can be ordered with or without the temperature sensor in kit. Only one can be managed.

Temperature range: 0 °C to 40 °C.



For parallel systems, the temperature sensor works only if connected to the master unit of the parallel


11.2. LIB-ADC card

The LIB-ADC (Lithium Ion Battery interface) is a slot optional board that provides:

- 4 relays for external device activation (can be set as normally closed or normally open)
- 3 inputs to report external contacts to UPS
- 1 connector for external temperature sensor (optional)
- RS485 insulated serial link providing MODBUS RTU protocol
- 4 leds indicating the board status and RS485 communication status

The input and output connections of this card are exclusively reserved for the LIB interface: they cannot be used for general purposes. Setting up the UPS and activation of the system must be done by qualified technicians.

Please contact the SOCOMEC service centre.

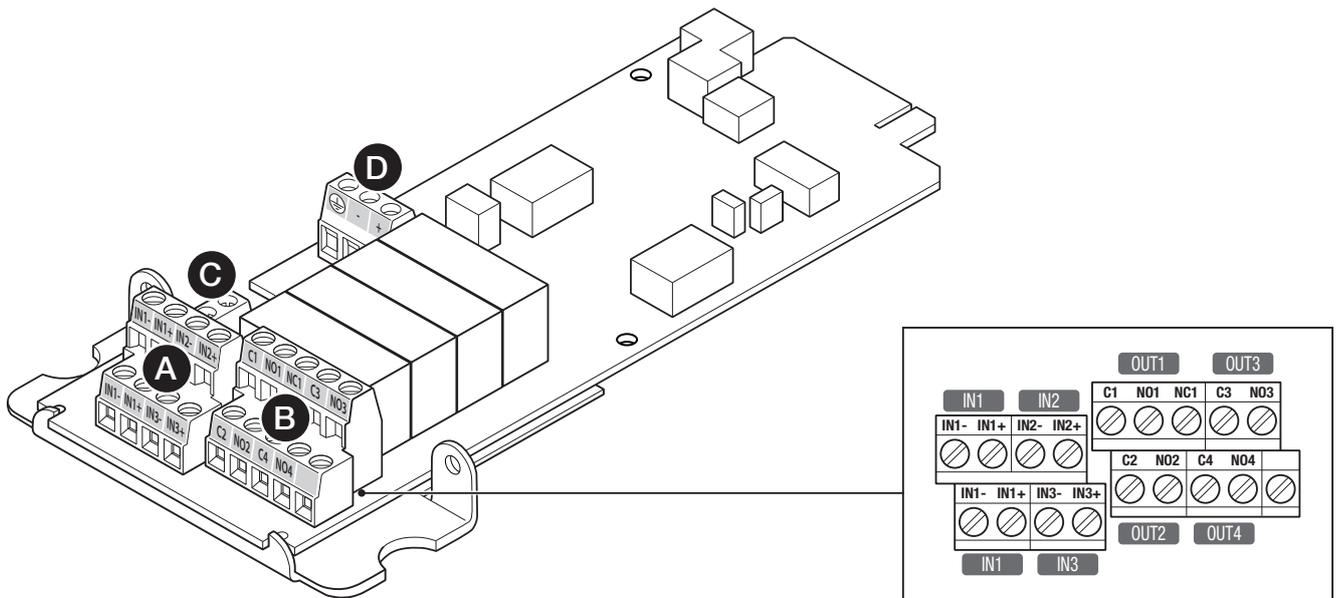

KEY

- | | |
|---|---|
| <p>A 3 inputs to link external contacts to UPS XB4 (reserved for LIB interface)</p> <p>B 4 relays for external device activation XB3 (reserved for LIB interface)</p> | <p>C 1 connector for external temperature sensor XB2 (reserved for LIB interface)</p> <p>D RS485 insulated serial link XB1 (reserved for LIB interface)</p> |
|---|---|


DESCRIPTION

- Auto detect of the BMS connected.
- Smart interface with LIB system, thanks to the serial connection.
- Easy connection and configuration.
- BMS data tunneling feature for building management system.

11.3. Net Vision card

NET VISION is a communication and management interface designed for business networks. The UPS behaves exactly like a networked peripheral, it can be managed remotely, and allows the shutdown of network workstations.


NET VISION allows a direct interface between the UPS and LAN network avoiding dependence on the server and support SMTP, SNMP, DHCP and many other protocols. It interacts via the web browser.

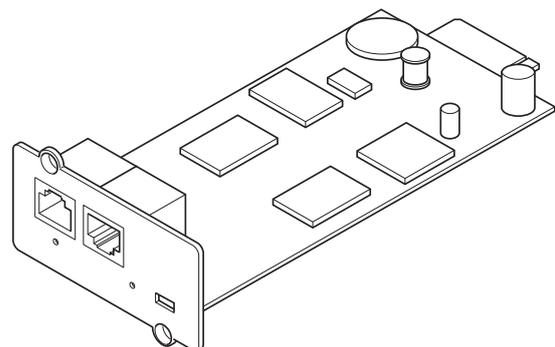

11.3.1. EMD

EMD (Environmental Monitoring Device) is a device to be used in conjunction with the NET VISION interface and provides the following features:


- temperature and humidity measurements + dry contact inputs,
- alarm thresholds configurable via Web browser,
- notification of environmental alarm via email and SNMP traps.

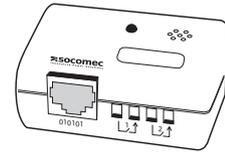

11.4. ACS card

ACS (Automatic Cross Synchronisation) card is used to receive a synchronisation signal from an external source and manage it for the UPS where it is installed, and provide a synchronising signal, where requested, to another UPS.

11.5. Remote touchscreen display

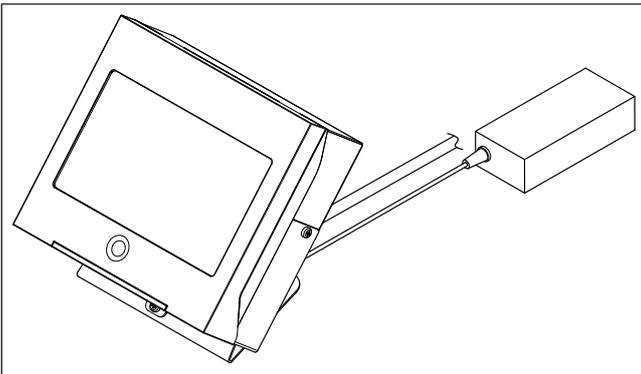

NOTE!
Available only with ADC+SL option card.

11.6. Kit for common mains (CBAR)

See 'Mains and auxiliary mains connected together' chapter.

For further information contact SOCOME.

11.7. Kit for TN-C / Neutral-Ground connection

To deal with different plan needs, a connection bar between Neutral and Protection Earth is available as an option.

For further information contact SOCOME.

11.8. Cold Start

During a prolonged mains failure the load is supplied by the UPS until the protection threshold is reached and the UPS switches off.

With the cold start option enabled, the user has 2 hours time to disconnect the non-essential load and restart manually the UPS (START PROCEDURE via HMI) directly in Stored Mode (battery mode) of operation (Cold Start) in order to supply the indispensable load by exploiting the available residual energy in batteries.

NO retry is possible after the first Cold Start procedure.



NOTE!
Cold start not available for separated battery.

12. TROUBLESHOOTING

The alarm messages displayed enable immediate diagnosis.

Alarms are divided into two categories:

- Alarms relating to external UPS circuits: input mains, output mains, temperature and environment.
- Alarms relating to internal UPS circuits: in this case corrective action will be carried out by the After Sales Department.

The USB report makes it possible to have full information on what occurred. Refer to 'Display operation' chapter.

For other alarms that may appear please contact the Service Dept.

12.1. System alarms

| | | |
|-------------|--|---|
| A000 | IMMINENT STOP | An imminent stop is about to happen. In few minutes the UPS will be shut down. This can be caused by a critical alarm or a user request. |
| A001 | OVERLOAD ALARM | The load is exceeding the UPS power specification. The machine will turn off. Reduce the load immediately. |
| A002 | AMBIENT TEMPERATURE ALARM | Environmental temperature is too high. UPS functionality may be affected, if the condition last for prolonged time. |
| A003 | TRANSFER LOCKED | The UPS is unable to transfer the load between bypass and inverter. |
| A004 | TRANSFER IMPOSSIBLE | Bypass is not available. |
| A005 | INSUFFICIENT RESOURCES | Some components are not operational. |
| A006 | REDUNDANCY LOST | The minimum number of modules that are needed to supply the load has been reached. Check Individual Module alarms or the load rate. |
| A008 | ECO MODE DISABLED BY UPS | Eco mode is disabled due to bypass failure. |
| A009 | ENERGY SAVER DISABLED BY UPS | An event has occurred forcing the UPS to stop the energy saver function. |
| A012 | MAINTENANCE ALARM | UPS needs routine maintenance. Please contact the Service Department. |
| A013 | REMOTE SERVICE ALARM | UPS needs immediate maintenance. Please contact the Service Department. |
| A014 | REMOTE SERVICE PREVENTIVE ALARM | A non-critical alarm is present. Please contact the Service Department. |
| A015 | GENERAL ALARM | An alarm is present. |
| A016 | BATTERY DISCONNECTED | The battery is not connected to the UPS. |
| A017 | BATTERY DISCHARGED | The Battery Charge Level is low and reached a warning threshold. |
| A018 | END OF BACK-UP TIME | Supply from batteries is close to finishing. |
| A019 | OPERATING ON BATTERY | The UPS is running on battery. Load is supplied by batteries. |
| A020 | BATTERY TEMPERATURE ALARM | Battery temperature is greater than the threshold. If temperature is measured using ADC+SL, verify NTC is still connected, otherwise, check the internal UPS temperature. |
| A021 | BATTERY ROOM ALARM | The battery cabinet temperature is too high. |
| A022 | BATTERY TEST FAILED | The battery has failed the last battery test. |
| A026 | INSULATION FAULT | There is an insulation problem with the plant. Verify input from ADC+SL. |
| A027 | BATTERY ALARM | A battery alarm is present. Maximum recharging time at two levels, or slow discharging time protection has occurred. |
| A032 | RECTIFIER CRITICAL ALARM | There is a problem with the rectifier. Please contact the Service Department. |
| A033 | RECTIFIER PREVENTIVE ALARM | There is a non-critical problem with the rectifier. Please contact the Service Department. |
| A035 | RECTIFIER INPUT SUPPLY NOT OK | The input mains supply is out of tolerance. Verify that the input voltage and frequency are within the UPS ratings. |
| A037 | CHARGER CRITICAL ALARM | There is a problem with the battery charger. Please contact the Service Department. |
| A038 | CHARGER PREVENTIVE ALARM | Battery charger was temporary stopped or Battery Voltage is too low. |
| A040 | INVERTER CRITICAL ALARM | There is a problem with the inverter. Please contact the Service Department. |
| A041 | INVERTER PREVENTIVE ALARM | There is a non-critical problem with the inverter. Check the fans are working properly. Please contact the Service Department. |
| A043 | INVERTER IMMINENT STOP | Imminent redundancy was lost due to overload, unit imminent stop, etc. |

| | | |
|------|----------------------------------|---|
| A046 | PARALLEL BOARD CRITICAL ALARM | 2nd ring opening + fault conditions. |
| A047 | PARALLEL BOARD PREVENTIVE ALARM | 1st ring opening. |
| A048 | BYPASS CRITICAL ALARM | There is a problem with the bypass. Please contact the Service Department. |
| A049 | BYPASS PREVENTIVE ALARM | There is a non-critical problem with the bypass. Please contact the Service Department. |
| A050 | BYPASS INPUT SUPPLY NOT OK | The auxiliary supply is out of tolerance. Verify that the input voltage and frequency are within the UPS ratings. |
| A051 | PHASE ROTATION FAULT | The auxiliary mains is not connected properly. Please check phase connection order is correct. |
| A052 | BYPASS BACK-FEED DETECTION | There is a backfeed problem with the bypass. Please contact the Service Department. |
| A054 | FAN FAILURE | Fan Failure can generate overheating. Please contact the Service Department. |
| A055 | ACS ALARM | Communication between ACS and Inverter is lost. |
| A056 | MAINTENANCE BYPASS ALARM | Output and Maintenance ByPass switches are closed at the same time. |
| A057 | INTERNAL BACKFEED DETECTION | There is a backfeed problem with the rectifier. Please contact the Service Department. |
| A059 | UPS POWER OFF | The UPO emergency input on ADC+SL has been activated. |
| A060 | WRONG CONFIGURATION | UPS is not configured properly. Please check the configurations or contact the Service Department. |
| A061 | INTERNAL / COMMUNICATION FAILURE | The internal communication between UPS sub-system is lost. Please contact the Service Department. |
| A062 | OPTION BOARD ALARM | There is a communication problem with the option board. Please contact the Service Department. |
| A063 | SPARE PARTS NOT COMPATIBLE | Please contact the Service Department. |

12.2. System status

| | | |
|------|------------------------------------|--|
| S002 | LOAD SUPPLIED BY AUTOMATIC BYPASS | Load on bypass, supplied by auxiliary mains. Load not protected. |
| S018 | EXTERNAL MAINTENANCE BYPASS CLOSED | External maintenance bypass input is closed. |
| S023 | GEN SET ON | Genset input. Verify input from ADC+SL. |
| S064 | CARD IN SLOT 1 PRESENT | |
| S065 | CARD IN SLOT 2 PRESENT | |
| S068 | CARD IN SLOT 3 PRESENT | |

13. PREVENTIVE MAINTENANCE

| | |
|---|---|
|  | NOTE! Before carrying out any operations on the unit read the 'Safety standards' chapter carefully. |
|  | NOTE! Any work carried out on the equipment must be performed by qualified technicians authorised by SOCOMEC. |

Routine maintenance carried out annually is recommended in order to provide optimum operating efficiency and avoid equipment downtime.

Maintenance consists of thorough functionality checks on:

- electronic and mechanical parts;
- dust removal;
- battery inspection;
- software updating;
- environmental checks.

13.1. Batteries

The condition of the battery is fundamental to UPS operation.

During the operating lifetime of the battery, the UPS stores statistics on the conditions of use of the battery for analysis.

Expected battery lifetime is very much dependent on operating conditions:

- number of charging and discharging cycles;
- load rate;
- temperature.

| | |
|---|---|
|  | NOTE! Batteries must only be replaced with batteries recommended or sold by the manufacturer. Batteries must only be replaced by qualified technicians. |
|  | BEWARE! Used batteries contain harmful substances. Do not open the plastic cover! |
|  | NOTE! Used batteries have to be placed in the appropriate containers to avoid leakage acid. They should only be entrusted to a specialist waste disposal company. |

13.2. Fans & capacitors

The lifespan of consumable parts such as fans and capacitors (AC and DC) depends on whether or not the use and environmental conditions (premises, usage or load type) are abnormal or harsh for the equipment.

It is advisable to replace consumables as follows⁽¹⁾:

| Consumable part | Years |
|---------------------|-------|
| Fan | 5 |
| AC and DC capacitor | 7 |

(1) Based on operation of the unit according to the manufacturer's specification.

14. SAFEGUARDING THE ENVIRONMENT

Do not dispose of electrical appliances with normal waste, use separate collection facilities.

Follow local council waste regulations for proper disposal arrangements to reduce the environmental impact of waste electrical and electronic equipment or contact your local government for information regarding the collection arrangements available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging health and wellbeing. Depleted batteries are considered as toxic waste. When battery replacement becomes necessary, only give rundown batteries to certified and licensed waste disposal companies. In accordance with local legislation, it is prohibited to dispose of batteries together with other industrial waste or household refuse.



The crossed-out trash bin symbol is placed on this product to encourage users to recycle components and units whenever possible. Please be environmentally responsible and recycle this product through your recycling facility at the end of its lifetime.

For any questions regarding the disposal of the product, contact local distributors or retailers.

15. TECHNICAL SPECIFICATIONS

15.1. Unit system

| Number of modules | | | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
|--|--------|-------------------|--|-------|-------|-------|-------|-------|-------|-------|-------|
| Power | kW | | 100 | 150 | 200 | 250 | 300 | 350 | 400 | 450 | 500 |
| | kVA | | 100 | 150 | 200 | 250 | 300 | 350 | 400 | 450 | 500 |
| Input | | | | | | | | | | | |
| Input mains voltage | | | 3ph + N 340 V to 480 V (+20/-15%) up to -40% @ 70% of nominal load | | | | | | | | |
| Input mains frequency | | Hz | 40 to 70 | | | | | | | | |
| Input power factor | | | ≥ 0.99 ⁽¹⁾ | | | | | | | | |
| Total harmonic input current distortion (THDi) | | | ≤ 3% (@: Pn, Resistive load, Mains THDv ≤ 1%) | | | | | | | | |
| Output | | | | | | | | | | | |
| Output voltage (three phase + neutral) | | V | 3Ph+N 380/400/415 V ±1% ⁽²⁾ | | | | | | | | |
| Frequency | | Hz | 50-60 Hz (selectable) ±0.01% | | | | | | | | |
| Total output voltage distortion (THDv) | | % | ≤ 1% (Ph/Ph); ≤ 2% (Ph/N) (@: Pn, Resistive load) | | | | | | | | |
| Overload ⁽³⁾ | 10 min | kW | 125 | 188 | 250 | 313 | 375 | 438 | 500 | 563 | 625 |
| | 1 min | kW | 150 | 225 | 300 | 375 | 450 | 525 | 600 | 675 | 750 |
| Crest Factor | | | ≥ 2.7 | | | | | | | | |
| Bypass | | | | | | | | | | | |
| Bypass input voltage | | V | Nominal output voltage ±15% (±20% if GENSET is used) | | | | | | | | |
| Bypass input frequency | | Hz | 50/60 +/-2% selectable (±8% if GENSET is used) | | | | | | | | |
| Stored energy mode of operation | | | | | | | | | | | |
| Battery voltage range | | V bat | From +/-180 ⁽⁴⁾ up to +/-330 ⁽⁵⁾ (18+18 to 24+24 VRLA battery blocks) ⁽⁶⁾ | | | | | | | | |
| Environmental | | | | | | | | | | | |
| Pollution degree | | | PD2 | | | | | | | | |
| Operating temperature | | °C | 0-40 °C (+15 °C to +30 °C recommended) | | | | | | | | |
| Storage temperature | | °C | -25 °C to +55 °C | | | | | | | | |
| Relative humidity | | % | 95% condensation-free | | | | | | | | |
| Altitude (max) | | m | 1000 (3000 with derating) | | | | | | | | |
| Acoustic noise (@ 70% Pn) | | dBA | 53 | 55 | 56 | 57 | 58 | 58 | 59 | 60 | 60 |
| Cooling type | | | Air cooling | | | | | | | | |
| Required cooling capacity | | m ³ /h | 1200 | 1800 | 2400 | 3000 | 3600 | 4200 | 4800 | 5400 | 6000 |
| Dissipated power (max) | | W | 5160 | 7730 | 10310 | 12890 | 15460 | 18040 | 20610 | 23190 | 25770 |
| Dissipated power (max) | | BTU/h | 17610 | 26380 | 35180 | 43990 | 52760 | 61560 | 70330 | 79130 | 87940 |
| Dimensions and Weight | | | | | | | | | | | |
| Dimensions (W x D x H) | | mm | 800 x 960 x 1990 | | | | | | | | |
| M5-S-300-87 (1x Bypass module included) | | kg | 472 | 508 | 544 | 580 | 616 | 652 | 688 | 724 | 760 |
| UPS module | | kg | 36 | | | | | | | | |
| Standard | | | | | | | | | | | |
| Safety | | | EN/IEC 62040-1 - AS 62040-1 | | | | | | | | |
| EMC | | | EN/IEC 62040-2 - AS 62040-2 | | | | | | | | |
| Product certification | | | IECEE CB Scheme | | | | | | | | |
| Performance | | | EN/IEC 62040-3 - AS 62040-3 | | | | | | | | |
| Product marks | | | CE - RCM ⁽⁷⁾ - CMIM ⁽⁷⁾ - UKCA ⁽⁷⁾ | | | | | | | | |
| Protective class | | | Class I | | | | | | | | |
| Touch current | | | < 1 mA | | | | | | | | |
| Protection level | | | IP20 | | | | | | | | |

(1) Pout ≥ 50% Sn

(2) 360 V with Pout = 90% Pn

(3) Initial Condition Pout ≤ 80% Pn

(4) @ Battery Fully Discharged. Call SOCOMEC support service

(5) @ Battery Fully Charged. Call SOCOMEC support service

(6) Condition apply. For further information contact SOCOMEC

(7) Depends on the production site. Consult the data plate on the equipment

15.2. Parallel system

| Number of modules | | 1 | 2 | 3 | 4 | |
|--|-------------------|--|-------------------|-------------------|-------------------|------|
| Power | kW | 500 | 1000 | 1500 | 2000 | |
| | kVA | 500 | 1000 | 1500 | 2000 | |
| Input | | | | | | |
| Input mains voltage | | 3ph + N 340 V to 480 V (+20/-15%) up to -40% @ 70% of nominal load | | | | |
| Input mains frequency | Hz | 40 to 70 | | | | |
| Input power factor | | ≥ 0.99 ⁽¹⁾ | | | | |
| Total harmonic input current distortion (THDi) | | ≤ 3% (@: Pn, Resistive load, Mains THDv ≤ 1%) | | | | |
| Output | | | | | | |
| Output voltage (three phase + neutral) | V | 3Ph+N 380/400/415 V ±1% | | | | |
| Frequency | Hz | 50-60 Hz (selectable) ±0.01% | | | | |
| Total output voltage distortion (THDv) | % | ≤ 1% (Ph/Ph); ≤ 2% (Ph/N) (@: Pn, Resistive load) | | | | |
| Overload ⁽³⁾ | 10 min | kW | 625 | 1250 | 1875 | 2500 |
| | 1 min | kW | 750 | 1500 | 2250 | 3000 |
| Crest Factor | | ≥ 2.7 | | | | |
| Bypass | | | | | | |
| Bypass input voltage | V | Nominal output voltage ±15% (±20% if GENSET is used) | | | | |
| Bypass input frequency | Hz | 50/60 +/-2% selectable (±8% if GENSET is used) | | | | |
| Stored energy mode of operation | | | | | | |
| Battery voltage range | V bat | From +/-180 ⁽⁴⁾ up to +/-330 ⁽⁵⁾ (18+18 to 24+24 VRLA battery blocks) ⁽⁶⁾ | | | | |
| Environmental | | | | | | |
| Pollution degree | | PD2 | | | | |
| Operating temperature | °C | 0-40 °C (+15 °C to +30 °C recommended) | | | | |
| Storage temperature | °C | -25 °C to +55 °C | | | | |
| Relative humidity | % | 95% condensation-free | | | | |
| Altitude (max) | m | 1000 (3000 with derating) | | | | |
| Acoustic noise (@ 70% Pn) | modules | 1 → 10 | 11 → 20 | 21 → 30 | 31 → 40 | |
| | dBA | 60 | 63 | 65 | 66 | |
| Cooling type | | Air cooling | | | | |
| Required cooling capacity | m ³ /h | 6000 | 12000 | 18000 | 24000 | |
| Dissipated power (max) | W | 25770 | 51540 | 77310 | 103080 | |
| Dissipated power (max) | BTU/h | 87940 | 175880 | 263820 | 351760 | |
| Dimensions and Weight | | | | | | |
| Unit dimensions (W x D x H) | mm | 800 x 960 x 1990 | 1600 x 960 x 1990 | 2400 x 960 x 1990 | 3200 x 960 x 1990 | |
| Units (Bypass module included) | kg | 760 | 1520 | 2280 | 3040 | |
| UPS module | kg | 36 | | | | |
| Standard | | | | | | |
| Safety | | EN/IEC 62040-1 - AS 62040-1 | | | | |
| EMC | | EN/IEC 62040-2 - AS 62040-2 | | | | |
| Product certification | | IECEE CB Scheme | | | | |
| Performance | | EN/IEC 62040-3 - AS 62040-3 | | | | |
| Product marks | | CE - RCM ⁽⁷⁾ - CMIM ⁽⁷⁾ - UKCA ⁽⁷⁾ | | | | |
| Protective class | | Class I | | | | |
| Touch current | | < 1 mA | | | | |
| Protection level | | IP20 | | | | |

(1) Pout ≥ 50% Sn

(2) 360 V with Pout = 90% Pn

(3) Initial Condition Pout ≤ 80% Pn

(4) @ Battery Fully Discharged. Call SOCOMECEC support service

(5) @ Battery Fully Charged. Call SOCOMECEC support service

(6) Condition apply. For further information contact SOCOMECEC

(7) Depends on the production site. Consult the data plate on the equipment

CORPORATE HQ CONTACT:
SOCOMECSAS
1-4 RUE DE WESTHOUSE
67235 BENFELD, FRANCE



553466B-EN 10.2025

www.socomec.com

Non contractual document. © 2025, Socomec SAS. All rights reserved.



 **socomec**
Innovative Power Solutions