

NET-VISION

Version 8.3, for UPS and STS



Socomec Resource Center
To download, brochures, catalogues
and technical manuals

CONTENTS

| | |
|--|----|
| 1. ELECTRONIC EMISSION NOTICE | 5 |
| 1.1. FEDERAL COMMUNICATIONS COMMISSION (FCC) | 5 |
| 2. SAFETY INFORMATION | 5 |
| 2.1. FOR NET VISION CARD | 5 |
| 2.2. FOR NET VISION BOX | 5 |
| 3. GENERAL DESCRIPTION | 6 |
| 3.1. NET VISION PRESENTATION | 6 |
| 3.2. SOCOMEC UPS COMPATIBILITY | 6 |
| 3.3. NET VISION FEATURES | 7 |
| 3.4. CYBERSECURITY | 8 |
| 3.5. CERTIFICATE FOR HTTPS CONNECTION | 9 |
| 4. REQUIREMENTS | 10 |
| 4.1. WEB BROWSER | 10 |
| 4.2. NET VISION EXPLORER | 10 |
| 5. NET VISION INSTALLATION | 10 |
| 6. SERIAL LINK SETTINGS | 10 |
| 7. NET VISION BOOT SEQUENCE | 11 |
| 7.1. EMD LIGHTS SEQUENCE | 11 |
| 7.2. MODBUS POLLING | 11 |
| 7.3. UPS MODBUS MAPPING | 12 |
| 7.4. UPS ARCHITECTURE: | 12 |
| 7.5. STS MODBUS MAPPING | 12 |
| 8. NET VISION EXPLORER PRESENTATION | 13 |
| 8.1. IP SETTINGS (ONLY FOR NV 7 AND 8) | 13 |
| 8.2. BROWSE | 13 |
| 8.3. FW UPGRADE | 14 |
| 8.4. NET VISION SETTINGS FILE DOWNLOAD | 14 |
| 8.5. BATCH OPERATION | 14 |
| 8.6. SUPGRADE.EXE TOOL | 14 |
| 9. IP ADDRESS CONFIGURATION | 15 |
| 9.1. PREPARING NET VISION | 15 |
| 9.2. DEFAULT IP ADDRESS | 15 |
| 9.3. NET VISION ACCESS | 15 |
| 9.4. IP SETTINGS USING NETWORK IF DHCP NOT PRESENT | 15 |
| 9.5. IP SETTINGS USING A TERMINAL AND USB FOR NET VISION | 15 |
| 10. RESET NET VISION WITH FACTORY SETTINGS | 16 |
| 11. NET VISION USER INTERFACE | 17 |
| 11.1. NET VISION HOME PAGE | 17 |
| 11.2. NET VISION MENU | 18 |
| 11.3. UPS ARCHITECTURE TREE-VIEW | 21 |
| 11.4. UPS SYNOPTIC | 21 |
| 11.5. STS SYNOPTIC | 22 |
| 11.6. USER LOGIN | 22 |
| 12. UPS MONITORING | 23 |
| 12.1. UNIT SYNOPTIC | 23 |
| 12.2. SYSTEM SYNOPTIC | 28 |
| 12.3. ALARM TABLE | 29 |
| 12.4. UPS DASHBOARD | 30 |
| 12.5. REAL TIME GRAPH | 31 |
| 12.6. CLIENT TABLE | 31 |
| 12.7. UPS MANAGEMENT | 32 |
| 12.8. SPECIAL DAY SHUTDOWN SCHEDULE | 34 |

| | |
|--|-----------|
| 13. STS MONITORING | 39 |
| 13.1. SYNOPTIC ANIMATION | 39 |
| 13.2. STS PARAMETERS | 40 |
| 13.3. OUTPUT PARAMETERS | 40 |
| 13.4. PATH 1 AND PATH 2 PARAMETERS | 40 |
| 13.5. DASHBOARD | 41 |
| 13.6. REAL TIME GRAPH | 41 |
| 13.7. STS CONTROL | 42 |
| 13.8. LIST OF CONTROLS AVAILABLE | 42 |
| 14. EMD DEVICE MANAGEMENT | 43 |
| 15. NET VISION MANAGEMENT | 44 |
| 15.1. DATE AND TIME | 44 |
| 15.2. NET VISION CONFIGURATION | 45 |
| 15.3. NET VISION CONTROL | 46 |
| 15.4. MULTI-USER TABLE | 47 |
| 15.5. REMOTE VIEW PRO CONFIGURATION (ONLY FOR UPS) | 47 |
| 15.6. REMOTE VIEW PRO SERVER CONFIGURATION | 48 |
| 15.7. SNMP V3 USM TABLE CONFIGURATION | 49 |
| 15.8. SNMP TRAP RECEIVERS CONFIGURATION | 49 |
| 15.9. EMAIL NOTIFICATION | 52 |
| 15.10. AUTHENTICATION CONFIGURATION | 53 |
| 15.11. WOL TARGETS (ONLY FOR UPS DEVICE) | 54 |
| 15.12. MODBUS TCP CONFIGURATION | 54 |
| 15.13. BACNET CONFIGURATION | 54 |
| 15.14. SYSLOG SETUP | 55 |
| 15.15. DDNS SETUP | 55 |
| 15.16. FIREWALL SETUP | 56 |
| 15.17. UPNP PROTOCOL | 56 |
| 15.18. MULTI-LANGUAGE | 56 |
| 15.19. FIRMWARE UPGRADE | 56 |
| 16. NET VISION IOT GATEWAY | 57 |
| 16.1. REQUIREMENTS | 57 |
| 16.2. IOT GATEWAY ACCOUNT CREATION | 57 |
| 16.3. NTP SETTINGS | 57 |
| 16.4. PROXY SETTING IN IOT CONFIGURATION PAGE | 58 |
| 16.5. SYNCHRONIZATION IOT CONNECTION PAGE | 58 |
| 16.6. IOT SERVICE ACTIVATION IOT CONNECTION PAGE | 59 |
| 17. EXTERNAL LINK SETUP | 61 |
| 18. HISTORY LOG | 62 |
| 18.1. HISTORY LOG | 62 |
| 18.2. UPS EXTENDED HISTORY LOG | 64 |
| 18.3. UPS EVENTS LOG | 66 |
| 18.4. STS EVENTS LOG | 67 |
| 18.5. NET VISION EVENTS LOG | 69 |
| 18.6. CLEAR & SAVE LOG DATA | 71 |
| 19. APPENDIX | 72 |

CERTIFICATE AND CONDITIONS OF WARRANTY

Installing the software means full acceptance of all contractual terms. For this reason, please read all the points listed below carefully. If you do not agree with one or more of the contractual terms, do not install this software and/or return it immediately to SOCOMEC.

1. COPYRIGHT AND INTELLECTUAL PROPERTY OWNERSHIP RIGHTS

The user of the software acknowledges that all rights referred thereto and the copyright belong to SOCOMEC, in relation to both the source code and the object code.

Anyone entering into possession of the software without prior authorization from SOCOMEC must immediately uninstall it, if it has been installed and return it to SOCOMEC. If such persons fail to take this action SOCOMEC will exercise its rights to the full extent permitted by civil and criminal law.

The software and documentation are protected by copyright. The unlawful use and/or copying partially or totally of the software shall lead to claims for damages. This documentation and software are not specifications. SOCOMEC reserves the right to make any changes to data without prior notice.

SOCOMEC retains the full and exclusive ownership of all intellectual rights, such as, but not limited to the ones related to documentation, software, source code, object code, etc. Only a personal right to utilize the documentation and software for the application indicated by SOCOMEC is granted to their recipients. All reproduction, modification, dissemination of this documentation and software whether in part or whole and by any manner are expressly prohibited except upon SOCOMEC's express prior written consent.

2. LICENSE TO USE

The NET VISION, NET VISION Explorer and supporting documentation are freely installable for private use solely.

The software contains confidential information. This license does not authorize the user to modify, adapt, decompile or disassemble the software in question or to reconstruct the source code using any other method. SOCOMEC will protect its rights against any such unauthorized use to the full extent permitted by civil and criminal law.

The software may not be hired out to third parties. The license of use of this software is issued exclusively for the purposes laid down in the software documentation.

3. ENTRY INTO FORCE AND DURATION OF THE LICENSE

This license enters into force on the day of installation of the software, whereby the user accepts these conditions of use and liability. The license is open term and has no date of expiry. The licence and the limited rights of use by the user of the software will be invalidated in case of a breach of any of the points laid down in paragraphs "1. Copyright and Intellectual Property ownership rights" and "2. License".

4. WARRANTY CONDITIONS

SOCOMEC neither implicitly nor explicitly provides any warranty concerning the usability of the software. Despite the extensive use of resources to develop the software, no guarantees are provided concerning the absence of errors. SOCOMEC may provide the support needed to solve any errors present in the software. Such support is limited to the correction of programming errors and is not extended to the implementation of new functions that are not present in the version of the software used by the user. Should the user find any manifest or hidden errors, they must be notified to SOCOMEC in writing.

5. SOFTWARE UPDATES

This licence does not grant the right to receive software updates, or new versions.

6. LIMITATIONS OF LIABILITY

SOCOMEC shall not be held liable, under any circumstances, for damage of any kind, including economic losses, directly or indirectly consequential to the use of, or inability to use the software.

7. SEVERABILITY

If any clause of this contract is found to be ineffective or become ineffective for any reason whatsoever, the remaining terms of the licence shall still apply. The unenforceable clause or ineffective provisions will be replaced by a clause, also with retroactive effect, that addresses subsequently identified requirements, within the scope of legal enforceability.

8. AMENDMENTS TO THE LICENCE

Any amendment to this licence must be made in writing.

9. APPLICABLE LAW

This contract is subject to French law.

The information contained herein, the software and documentation, are the exclusive property of SOCOMEC.

1. ELECTRONIC EMISSION NOTICE

1.1. FEDERAL COMMUNICATIONS COMMISSION (FCC)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

1.1.1. CE NOTICE

This device complies with the EMC directive of the European Community and meets or exceeds the following technical standard:

- EN 55032:2015/A1:2020, Class B – “Limits and Methods of Measurement of Radio Interference Characteristics of Information Technology Equipment.” This device complies with the CISPR Class B standard
- EN IEC 61000-3-2:2019/A1:2021 – “Electromagnetic compatibility”

2. SAFETY INFORMATION

2.1. FOR NET VISION CARD

- All servicing of this equipment must be performed by qualified service personnel. Remove rings, watches, and other jewellery before servicing the unit.
- Before plugging in/pulling out the NET VISION card to/from the UPS, please make sure that the power supplying the UPS has been switched off or on maintenance bypass for MASTERYS, MODULYS and DELPHYS UPS. Hot swap of the NET VISION in UPS or STS is inhibited.

2.2. FOR NET VISION BOX

- To reduce the risk of fire or electric shock, install the unit in a temperature-controlled indoor area free of conductive objects. Do not place the unit near liquids or in an excessively humid environment.
- Do not allow liquids or foreign objects to enter the unit
- The unit does not contain any user-serviceable parts. Do not open the unit.
- All servicing of this equipment must be performed by qualified service personnel. Remove rings, watches, and other jewellery before servicing the unit.
- Before maintenance, repair or shipment, the unit must be switched off completely and unplugged and all connections removed.
- Before plugging in the NET VISION power adaptor, please make sure the power source rating matches the NET VISION power adaptor rating.

3. GENERAL DESCRIPTION

3.1. NET VISION PRESENTATION

NET VISION is a network adapter for the professional monitoring and remote control of a single and modular UPS or parallel UPS system.

The NET VISION network adaptor allows a UPS or STS to connect directly the Ethernet network allowing secure management of the UPS over the network using a web browser or NMS application via SNMP. The protocols used for connection are independent of the platform and operating system, therefore NET VISION is extremely flexible and suitable for all systems.

In addition to monitoring and control, the NET VISION interface provides a high level of protection for standalone servers or hosts managing virtual machines powered by the UPS.

In critical conditions, up to 250 devices powered by the UPS can be switched off in an orderly sequence whilst ensuring data integrity.

The remote shutdown is provided by a client shutdown to be installed on all standalone servers (JNC) or on a virtual machine (VIRTUAL-JNC) that require this automatic function.

JNC and VIRTUAL-JNC are shutdown agent software available for free on SOCOMEC's web site.

3.2. SOCOMEC UPS COMPATIBILITY

NET VISION is compatible with the following SOCOMEC UPS products:

- NETYS PR
- NETYS RT
- ITYS all ranges
- ITYS-PRO
- MODULYS all ranges
- MASTERYS all ranges
- DELPHYS all ranges
- STATYS range

3.3. NET VISION FEATURES

3.3.1. UPS AND STS FUNCTIONS

- Real-time UPS or STS health monitoring
- Comprehensive UPS or STS management and flexible configuration via Web Browser
- Automatic detection of UPS architecture: single, modular, or parallel system
- Battery test management (if supported by UPS)
- UPS or STS controls (If enabled by UPS/STS)
- UPS or STS date and time synchronisation (if enabled by UPS/STS)
- Automatic UPS or STS events notification via E-mail and SNMP Trap
- Complete shutdown procedure to protect up to 250 servers/workstations or HOSTS/VM from data loss due to power outage (only for UPS device)
- Scheduling shutdown/start-up/reboot of UPS via remote control (only for single phase UPS)
- Regularly records UPS or STS parameters for statistical analysis and event diagnostics

3.3.2. NETWORK SERVICES

- Assigned IP automatically via DHCP or BOOTP
- Standard RFC1628 UPS MIB and NET VISION proprietary MIB supported
- 10/100Mbps and 1Gbps fast Ethernet auto-sense network environment
- Configuration utility simplifies the firmware upgrade process
- Radius users account support
- IPv4 and IPv6 dual-stack
- Supports MODBUS TCP protocol to connect monitoring equipment
- Digital output to support relay control device (EMD)
- Firewall network access control avoiding non-authorized IP access
- Supports BACnet protocol

3.3.3. NETWORK PROTOCOLS

- IPv4 / v6
- TLS 1.3
- HTTP / HTTPS with certificate
- DHCP / BOOTP
- SNMP v1 / v2c / v3 (MD5-SHA / DES-AES)
- SMTP over TLS
- SSH v2
- UPnP
- NTP / NTS
- WOL
- RADIUS
- TFTP
- SYSLOG over TLS

3.4. CYBERSECURITY

NET VISION, as any devices connected to an Ethernet network, must be protected against any risk of cyber-attack or data loss/destruction. This protection is the responsibility of the user of the NET VISION device.

Therefore, the recommendations below must be in line with the IT system security policy implemented on site, where the NET VISION device is connected.

AWARENESS OF THE SECURITY POLICY:

NET VISION users and administrators are aware of and trained in good IT security practice (information and compliance with corporate security policy, authentication procedure management and password safety, online session management, risks of fishing...)

NETWORK SECURITY:

The IT system architecture must be able to safeguard resources, by segmenting the network according to their degree of sensitivity and using a variety of protective devices (firewall, demilitarized zone, VLAN, network anti-virus etc.).

DEVICE SECURITY:

Device security depends on its network environment, but also user behavior. In terms of the environment, elementary protective measures (filtering authorized stations by MAC address, opening service ports, selecting authorized applications etc.) are highly recommended.

DATA SECURITY:

Data security covers several aspects, in particular the confidentiality, integrity, authenticity and availability of data. Special care is required with data security and archiving procedures on backup devices both inside and outside the company.

ACCESS AND AUTHENTICATION MANAGEMENT:

Managing access to resources and data is a crucial element of the IT system's security policy. Each user requires an account and access rights corresponding to their profile. Access to the IT system's resources is controlled by a user authentication process, based on a minimum of a high-security user-name and password. The password management procedure, specifying the systematic modification of default passwords and their validity period, is included in the IT system's security policy.

CERTIFICATION

An independent Company expert in Cybersecurity, recognized by the ANSSI, has been certified that NET VISION technical security level is compliant with the state of art of the OWASP security recommendation / ISO27002:2022 standard.

The official attestation document is available on demand.



Recommendations to enhance NV security:

- Enabled HTTPS protocol and disable HTTP
- In case of using HTTP port to change port 80 to local port 8080 for example
- Disable all protocols and ports not used (SSH, PING, SMTP, UPnP, WOL, MODBUS TCP...)
- Change regularly the admin password. This password is valid for 90 days by default.
- Add user credentials for read only access

3.5. CERTIFICATE FOR HTTPs CONNECTION

3.5.1. USING HTTPs WITH CERTIFICATE.

Net Vision allows uploading an external certificate.

File format:

- .pem extension
- 8Kb max size
- Including Private key and Certificate sections:
-----BEGIN PRIVATE KEY-----
QlmljhdLIUHVG...
-----END PRIVATE KEY-----
-----BEGIN CERTIFICATE-----
mzoeirOUBgytv...
-----END CERTIFICATE-----

Upload CA file:


- Select the .pem file
- Upload

The Net Vision configuration page shows the name of current certificate in used. It is possible to remove the certificate clicking on remove button.

| | |
|----------------|--|
| Upload CA file | <input type="button" value="Choose File"/> No file chosen |
| | <input type="button" value="Upload"/> nvtest.pem <input type="button" value="Remove CA file"/> |

After enabling HTTPs protocol the secure connection can be performed.

Forcing the connection in case of self-generated certificate without Certification Authorities (trusted or not).

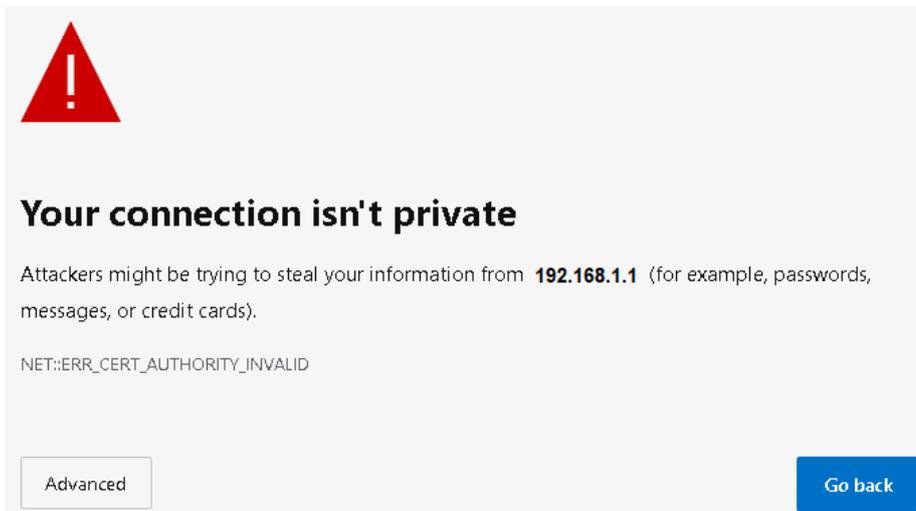

Select Advanced, and continue to site

Even in case of not secure warning, the HTTPs connection initiates with Net Vision using the uploaded certificate



The response time can be long during page downloading due to html page encryption algorithm.

3.5.2. USING HTTPs WITHOUT CERTIFICATE.

In that case the auto-generate certificate by Net Vision used for the HTTPs connection. (Root CA – cacert.crt)

4. REQUIREMENTS

4.1. WEB BROWSER

NET VISION interacts with the end user through a web browser. All web browsers compliant with HTML, js and XML technologies can access to NET VISION pages.

4.2. NET VISION EXPLORER


This tool must be installed in a Windows™ computer to configure IP settings, to upload the NET VISION configuration, or to upgrade the FW. Please refer to the Appendix.

NET VISION Explorer detects all UPS connected on the same local network through NET VISION. This tool helps to check the IP addresses of each NET VISION.

NET VISION Explorer is compliant with all NET VISION FW versions from V5 to V8.

5. NET VISION INSTALLATION

NET VISION Card

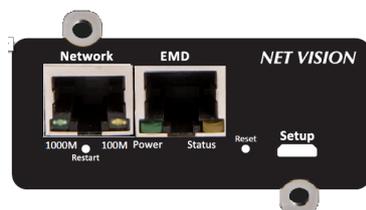

NET VISION Card is installed and screwed into one of the available COM-Slots. The metallic front part can be adapted, to fix the NET VISION to com-Slot depending on the UPS model.

NET VISION is powered by the UPS or STS and communicates through serial link to the internal μ C board of the device.

The serial link COM port must be set on the Local control panel to establish the communication.

 **WARNING:** Before installing the card, please note its MAC address: the 6 last char used as admin password the first time

 For box version and EMD installation, please refer to appendix

6. SERIAL LINK SETTINGS

Net Vision communicates with the UPS or STS via RS232 serial link. The baud rate is detected automatically. In case of communication trouble it is possible to change it in the Net Vision configurations page.

The com-slot port used for Net Vision has be set as following:

- baud rate: 56 kbauds
- slave number: 1
- no parity

For ITYS 2 generation: the baud rate set to 2400.

For NETYS, ITYS 3 generation and MASTERY/S/DDELPHYS old generation: the baud rate set to 9600.

Check on UPS installation manual the right COM-Slot for use for Net Vision Card and serial link settings.


7. NET VISION BOOT SEQUENCE

During NET VISION's starting phase, the Power EMD light is OFF and Status EMD light will flash till communication is established.

NET VISION automatically detects the protocol and UPS type. Once the communication is established, the Power EMD light is continuous; and the Status EMD light flashes when NET VISION is sending MODBUS request to the UPS. At the end of the boot sequence, the MODBUS polling starts and the NET VISION communicates with the UPS.

7.1. EMD LIGHTS SEQUENCE

POWER Green Power Light:

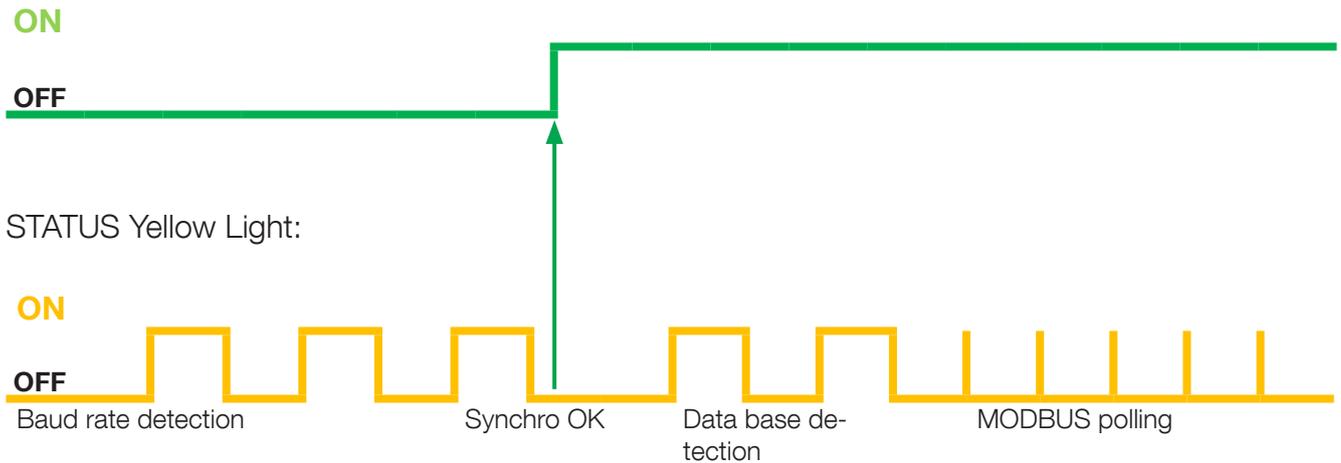

7.2. MODBUS POLLING

As NET VISION communicates with the device through the MODBUS serial link, the data refreshing depends on the baud rate and the number of units for parallel systems.

At 9600 bauds, the polling time for 1 unit is around 3 seconds. This polling time is to be multiplied by the number of units present in the system in order to have a global time of data refreshing.

7.3. UPS MODBUS MAPPING

NET VISION manages 2 types of UPS mapping:

- ‘JBUSP’ mapping for:
 - NETYS PR - RT
 - ITYS
 - MODULYS
 - MASTERYS MC - BC - GP - IP - EM
 - DELPHYS BC - GP - Xtend
- ‘VU-MAP’ mapping for:
 - ITYS-PRO
 - MODULYS XS - GP 2.0 - XM - XL
 - MASTERYS BC+ - GP4
 - DELPHYS with touchscreen panel.

JBUSP TABLES

| | | | |
|--------------|-----------|--------|------|
| STATUS | S00 – S63 | 0x1020 | 4 w |
| ALARMS | A00 – A63 | 0x1040 | 4 w |
| MEASUREMENTS | M00 – M47 | 0x1060 | 48 w |

VU-MAP TABLES

| | | | |
|--------------|-------------|--------|------|
| STATUS | S000 – S127 | 0x0030 | 8 w |
| ALARMS | A000 – A127 | 0x0038 | 8 w |
| MEASUREMENTS | M000 – M079 | 0x0040 | 80 w |

MODBUS TCP access must follow the addresses according to the UPS mapping
Please refer to the Appendix: MODBUS TCP JBUSP and VU-MAP TABLE.

7.4. UPS ARCHITECTURE:

- Single Unit 1 phase and 3 phases
- Converter - without battery
- Module – without bypass
- Modular Unit up to 8 modules
- Parallel system, distributed bypass or centralized bypass, up to 6 Units (JBUSP) and 10 Units (VU-MAP)
- Modular system up to 4 Units – 24 modules.

7.5. STS MODBUS MAPPING

| | | | |
|--------------|-------------|--------|------|
| STATUS | S000 – S127 | 0x0140 | 3 w |
| ALARMS | A000 – A127 | 0x0148 | 2 w |
| MEASUREMENTS | M000 – M079 | 0x0220 | 64 w |

8. NET VISION EXPLORER PRESENTATION

D: DHCP
S: IP Static

Action buttons

Refresh/Preferences
 Add or Remove device from the list

Batch operation

Connected
 Locked/unlocked

Pages navigation

| | Name | Location | IP | Action | F/W Ver. | Model | MAC |
|-------------------------------------|------------|-------------|-------------|---------|----------|-----------|-------------------|
| <input checked="" type="checkbox"/> | | | | [Icons] | | NV7card- | 00-e0-d8-ff-c1-a0 |
| <input type="checkbox"/> | MODULYS... | Showroom U3 | 192.168.1.1 | [Icons] | 8.00 | NV8card | 00-e0-d8-ff-c1-90 |
| <input type="checkbox"/> | | | | [Icons] | | NV6card-S | 00-e0-d8-14-f6-9a |
| <input type="checkbox"/> | | | | [Icons] | | NV6card-S | 00-e0-d8-19-8c-cc |
| <input type="checkbox"/> | | | | [Icons] | | | 00-e0-d8-11-74-4a |

1 device is selected. <http://www.socomec.com>Email:info.scp.isd@socomec.com>

8.1. IP SETTINGS (ONLY FOR NV 7 AND 8)

Click on to open the IP settings window:

Name: MODULYS GP
 Location: Showroom U3

DHCP
 Static IP

192 · 168 · 1 · 1
 SubMas: 255 · 255 · 0 · 0
 Gatew: . . .

Connection must be unlocked to change IP settings


OK Cancel

8.2. BROWSE

Click on to start the web browser and open the NET VISION home page.

8.3. FW UPGRADE


Click on  to open the FW upgrade window

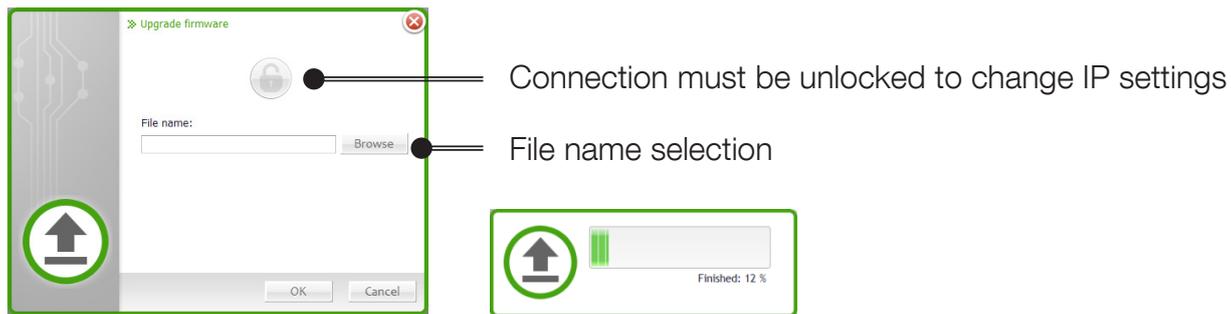

If several NET VISION units have been selected, the FW bin file can be updated to all selected NET VISION through batch function.


8.4. NET VISION SETTINGS FILE DOWNLOAD

Click on  to open the configuration file download window

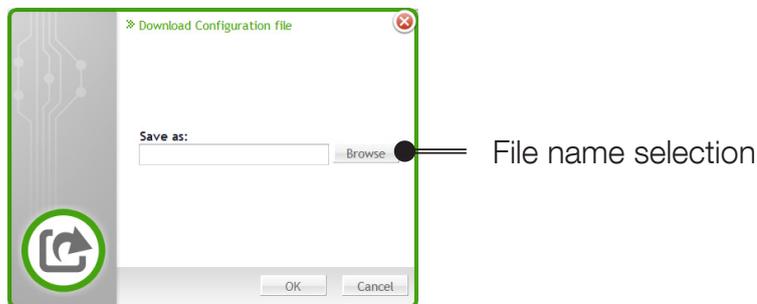

8.5. BATCH OPERATION

Click on  to open the batch operation window

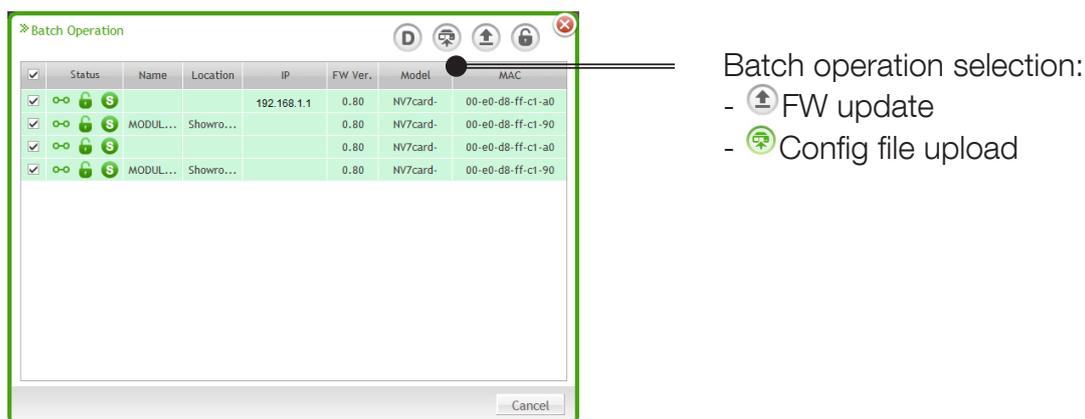

8.6. SUPGRADE.EXE TOOL

 The Supgrade.exe tool used for NET VISION 6 does not recognize the NET VISION 7 / 8 Card.

9. IP ADDRESS CONFIGURATION

9.1. PREPARING NET VISION

Once the UPS power is on and NET VISION has been installed in the COM-Slot and connected to the Network, the NET VISION's IP address must be programmed.

9.2. DEFAULT IP ADDRESS

If a DHCP server is available on the same Network as NET VISION, the NET VISION will request a valid IP address from the server. If the DHCP server is not available, NET VISION switches to the following default IP address: 192.168.7.18.

IPv6 is not activated by default. The default IP address is set to IPv4 format.

9.3. NET VISION ACCESS

When the NET VISION has a valid IP address, open the web browser and enter the IP address set manually or given by the DHCP server. The IP address can be checked with the NET VISION Explorer software utility (see NET VISION explorer §).

NET VISION requests always a login and password account before accessing to web pages. Default admin credentials at first connection:

Login: admin

Password: 6 last Char of MAC address for the first access

After first login, a new password is requested and then a new session login popup appears.

9.4. IP SETTINGS USING NETWORK IF DHCP NOT PRESENT

Even if DHCP is not available, the IP address can be set through the NET VISION Explorer tool.

9.5. IP SETTINGS USING A TERMINAL AND USB FOR NET VISION

The USB Gadget Serial driver must be installed (Windows 10 recognizes the driver automatically - driver installation not necessary). Please refer to the APPENDIX.

Once the device is recognized, open an SSH terminal connection to modify IP settings.

10. RESET NET VISION WITH FACTORY SETTINGS

S1 - Restart Button (H/W): HW reset, Power off/ on

S2 - Reset Button (S/W): SW reset,

Press 1 ~ 3 second: Restart System


Press 3 ~ 6 seconds: Reset Account and Password to Default Value

Press Over 6 seconds: Reset to Factory Default Value

 If functions have been set before this procedure (email, SNMP, Shutdown ...) those functions will need to be reconfigured.

The RESET button does not affect the NET VISION settings, it only restarts NET VISION.

 Make sure that the IP given by the DHCP server remains the same as before the NET VISION RESET.

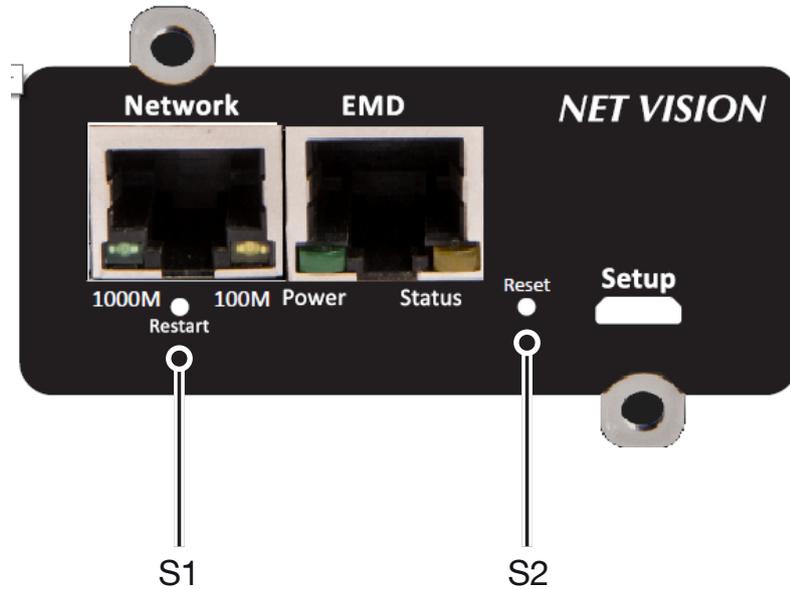

11. NET VISION USER INTERFACE

11.1. NET VISION HOME PAGE

EXAMPLE OF UPS DEVICE

NET VISION system name
NET VISION system location

NET VISION reference UPS Reference Shortcut access Login

NET VISION menu UPS tree-view UPS synoptic Parameters table

| UPS Parameters | |
|----------------------------|----------------------------|
| UPS status | Load protected by Inverter |
| Output load rate (%) | 75/75/75 |
| Output power (kVA) | 47.0/46.0/43.0 |
| Output voltage (V) | 230/230/230 |
| Rectifier voltage (V) | 241/240/242 |
| Battery capacity (%) | 100 |
| Remaining Backup time (mn) | 23 |
| Battery voltage (V) | 584.2 |
| Temperature (°C) | 22.0 |
| Date / time | 24/11/2017 10:44:04 |

11.2. NET VISION MENU

11.2.1. DEVICE MONITORING

| Device monitoring items | UPS | STS | Access to | Shortcut access |
|-------------------------|-----|-----|--|---|
| "Comprehensive view" | X | X | Device synoptic |  |
| "Dashboard" | X | X | Synthesis page of UPS parameters displayed by widgets |  |
| "Real-time Graph" | X | X | Scan function of device parameters |  |
| "Client table" | X | | List of Servers connected to NET VISION associated with shutdown client | |
| "EMD Device" | X | X | EMD Environment Device data. It appears if the EMD device is connected to NET VISION | |

11.2.2. DEVICE MANAGEMENT

| Device management items | UPS | STS | Access condition | |
|-------------------------|-----|-----|---|--|
| "Shutdown management" | X | | Present if Shutdown Agent function enabled in Net Vision Control page | |
| "Battery Test" | X | | If Battery is present The battery test can be applied only if remote controls are enabled by UPS | Controls are available for Read/Write user rights and admin accounts |
| "Battery Schedule" | X | | If Battery is present and remote controls are enabled by UPS. Available only for 'VU-MAP' UPS | |
| "UPS control" | X | | If remote controls enabled by UPS | |
| "STS control" | | X | If remote controls enabled by STS | |
| "eco mode schedule" | X | | If eco mode and remote controls are enabled by UPS | |
| "Weekly schedule" | X | | If "weekly schedule" is selected in shutdown event | |
| "Special day schedule" | X | | If "special day" is selected in shutdown event | |
| "Power Share" | X | | If "Power share" function is present and remote controls are enabled by UPS | |
| "EMD Device" | X | X | If the EMD device is connected to NET VISION | |

11.2.3. NET VISION MANAGEMENT

| NET VISION management items | Access condition | Remarks |
|---|--|---|
| "Date and Time" | Update and synchronize NET VISION and UPS date and time | |
| "NET VISION Configuration" | General settings | |
| "NET VISION Control" | Enable or disable network services / protocols | |
| "Multi-User Table" | Set the users access rights | |
| "Remote View Pro Configuration" | To activate the connection to Remote View Pro supervision software | RV Pro v3 or above |
| "IoT Configuration" "IoT Connection" | To activate the connection to SOCOMEC Cloud for digital services | Need to contact SOCOMEC Service before for creating your account and receiving the activation key for your site. |
| "SNMP v3 Configuration" | SNMP v3 USM table settings | |
| "SNMP TRAP Receivers" | NMS configuration | |
| "Email Notification" | SMTP server / emails addresses settings | Items disabled by default. Pages are present if services or protocols have been enabled in NET VISION Control page. |
| "Authentication Configuration" | RADIUS settings | |
| "WOL Targets" (only for UPS device) | Protocol pages settings | |
| "Modbus TCP Config" | | |
| "BACnet Configuration" | | |
| "Syslog Setup" | | |
| "DDNS Setup" | | |
| "Firewall Setup" | | |
| "External Links Setup" | To add hyperlink for network devices access | |
| "Multi-Language Setup" | | Check on socomec web side for availability |
| "Firmware Update" | | |

11.2.4. HISTORY LOG MENU

| History Log items | UPS | STS | | Remarks |
|--|-----|-----|--|---|
| "UPS History Log" "STS History Log" | X | X | NET VISION stores the measurements every 60s by default. 2048 is the maximum of records stored by NET VISION. |  Shortcut access in graphic mode |
| "UPS Extend History log" | X | | NET VISION stores in this log the minimum, average and maximum of UPS measurements every 1 hour by default; up to 2048 records |  Shortcut access in graphic mode |
| "UPS event Log" "STS event Log" | X | X | Store UPS or STS alarms (add and remove) | |
| "NET VISION Event Log" | X | X | Store all actions done on NET VISION | |
| "Clear and save Logs" | X | X | Remove logs from NET VISION memory Download logs to local computer (csv) | |

List of UPS measurements stored by NET VISION in "History Log" and "Extend History Log"

| | | |
|--------------------|-------------|---|
| "Input voltage" | V Per phase | A measurement stored with a value of -1 means that this measurement is not managed by the UPS |
| "Input frequency" | Hz * 10 | |
| "Output load rate" | % per phase | |
| "Output voltage" | V per phase | |
| "Battery capacity" | % | |
| "UPS temperature" | C or °F | |

List of STS measurements stored by NET VISION in "History Log"

| | |
|---------------------|----|
| Source 1 voltage L1 | V |
| Source 1 voltage L2 | V |
| Source 1 voltage L3 | V |
| Source 2 voltage L1 | V |
| Source 2 voltage L2 | V |
| Source 2 voltage L3 | V |
| Output Current L1 | A |
| Output Current L2 | A |
| Output Current L3 | A |
| Output frequency | Hz |
| SW1 temperature | °C |
| SW2 temperature | °C |

11.2.5. EXTERNAL LINK

An extra menu is present if devices have been activated. These links give direct access to other devices. It automatically opens a new page in the web browser with the selected link.

11.3. UPS ARCHITECTURE TREE-VIEW

NET VISION automatically recognizes the UPS topology and adapts the UPS tree-view and synoptic view.

| UPS topologies | | | |
|---|---|---|--|
| Single unit UPS | Modular unit UPS | Modular system Up to 4 units in parallel | Parallel system UPS Up to 10 units in parallel |
| UPS reference UPS reference Module number Module number 1 2 3 | UPS reference Module number Module number 1 2 3 | SYSTEM reference Unit number Module number Unit number Module number | SYSTEM reference Unit number Unit number Unit number Unit number |
| | Modules numbered from 1 to 8, according the physical position in the unit's cabinet | Horizontal Modules numbered from 1 to 24, according the physical position in the unit's cabinet | In case of centralized bypass, the Bypass Unit is not represented |

Energy Saver icon is displayed if the mode is activated

Device status management:

| Status | Single / modular | System | Unit | Module | Battery |
|-------------------------------|-----------------------------|---------------------------------|--------------------------------|-----------------|----------------|
| On standby | | | | | : disconnected |
| Operating | | | | | : Ok |
| Operating with alarm | | | | | : discharging |
| Operating with critical alarm | | | | | : alarm |
| Imminent stop (flashing) | | | | | |
| Click for access to: | UNIT SYNOPTIC UNIT TABLE | SYSTEM SYNOPTIC UPS TABLE | UNIT SYNOPTIC UNIT TABLE | MODULE TABLE | |

11.4. UPS SYNOPTIC

NET VISION manages 2 types of synoptic: SYSTEM VIEW and UNIT VIEW

| System view for parallel systems | |
|---|--|
| <p>Overviews of units' input and bypass input supply and the global output of the UPS. The UPS output parameters table gives the global measurements of all units that are operating.</p> | |
| Unit view for single, modular or units as part of a parallel system | |
| <p>This view gives details of rectifier and bypass inputs supply, battery status and unit output parameters.</p> | |

11.5. STS SYNOPSIS

STATYS diagram

The diagram gives the status of the output load, on preferred or alternate source and the details of the 2 paths.



11.6. USER LOGIN

The login status is given by following icons:




Not logged



Logged

Click on the button to open a session or to close the current session.

Login popup:

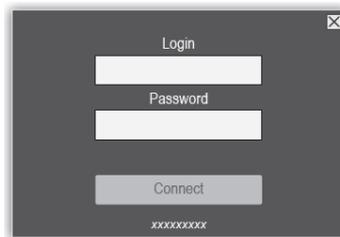

Admin account management:

- at first connection after installation or after factory reset command, the password is set with the 6 last char of its MAC address
- after first login, the password needs to be changed and a new session needs to be open.

To access to all the configurations and UPS controls, it is necessary to open a session as admin or with a “Read/Write” user access account.

It is possible to set a “Login Timeout (Sec)” in the NET VISION Configuration page. At the end of the timeout, the current session is closed automatically.

NET VISION does not allow more than one session.



If a session is still open, a new session that is opened forces the logout of the previous session.



Password policy : minimum of 12 characters including :


- Upper case letters: A to Z
- Lower case letters: a to z
- Numbers: 0 to 9
- Special char : ! % # @ ^ * (other characters are not allowed)

After Login, a second popup indicates the remaining days before changing the password.

12. UPS MONITORING

12.1. UNIT SYNOPTIC

12.1.1. SYNOPTIC ANIMATION

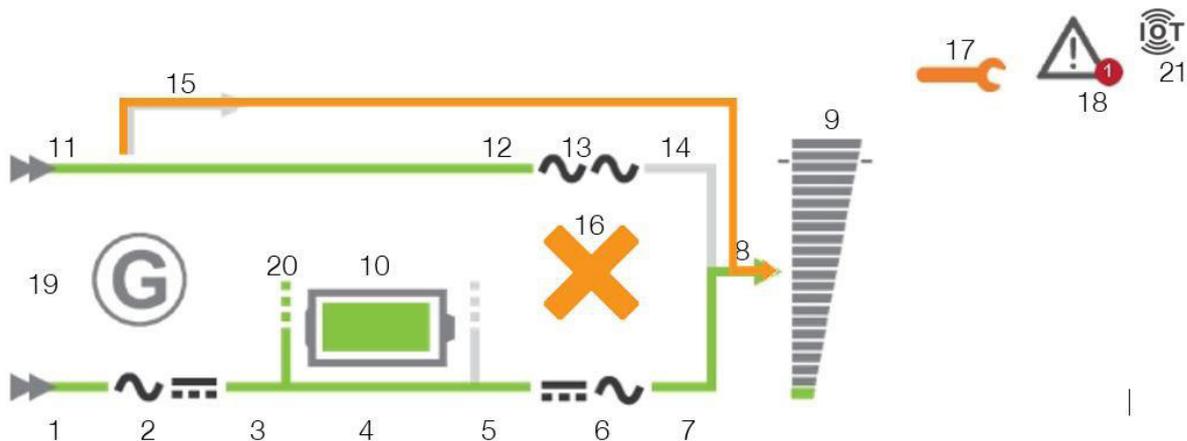

| | Element | Grey | Green | Yellow | Red |
|----|------------------------|--|-------------------------------|---|----------------|
| 1 | Rectifier input supply | Not present | Present | | |
| 2 | Rectifier | | | On + prev. alarm | Critical alarm |
| 3 | Rectifier output | Rectifier off | Rectifier on | | |
| 4 | DC Bus | Rectifier off | Rectifier on | | |
| 5 | Inverter input | Rectifier off | Rectifier on | On battery | |
| 6 | Inverter | | | On + prev. alarm | Critical alarm |
| 7 | Inverter output | Inverter off | Inverter on | On battery | |
| 8 | Output | off | On inverter or On eco mode | On bypass or On battery | |
| 9 | Load | 0% | Up to 90% | Above 90% | Above 100% |
| 10 | Battery | default | | Battery room or temp, alarm or test failed | Battery alarm |
| 11 | Bypass input supply | Not present | Present | | |
| 12 | Bypass input | Not present | Present | Bypass on | |
| 13 | Bypass | | | On + prev. alarm | Critical alarm |
| 14 | Bypass output | Bypass off | Bypass on and eco mode | Bypass on | |
| 15 | Maintenance Bypass | present | | On maintenance bypass | |
| 16 | Bypass impossible | | | Impossible | Locked |
| 17 | Maintenance alarm | | | Active | |
| 18 | Alarm present | If one alarm present | | | |
| 19 | Genset | Genset on | | | |
| 20 | Battery sharing | Present if the battery is shared with all other Units in parallel system | | | |
| 21 | IoT Status | Present if the IoT connection has been enabled | | | |

The output load rate value is reported to synoptic. The load value is not displayed if the maintenance bypass is closed.

During battery charging and battery charged status, the battery capacity value in % is displayed. The capacity value is replaced by the remaining backup time when the battery is discharging.

12.1.2. BATTERY ANIMATION

| Battery status | Battery symbol |
|----------------------|----------------|
| Battery circuit open | |
| Battery charged | |
| Battery discharging | |
| Battery discharged | |
| Battery charging | |

12.1.3. LOAD ANIMATION


| LOAD RATE | 0% | 10% | 50% | 90% | 100% | 120% |
|-------------------|----|-----|-----|-----|------|------|
| Example of values | | | | | | |

12.1.4. UNIT SYNOPTIC NAVIGATION

Clicking on the rectifier , battery , inverter , bypass and output load symbols shows the related parameters table below the synoptic.

To switch back to **Unit/UPS Parameters Table** click on or button, or select “**comprehensive view**” in the UPS Monitoring menu

Navigation overview

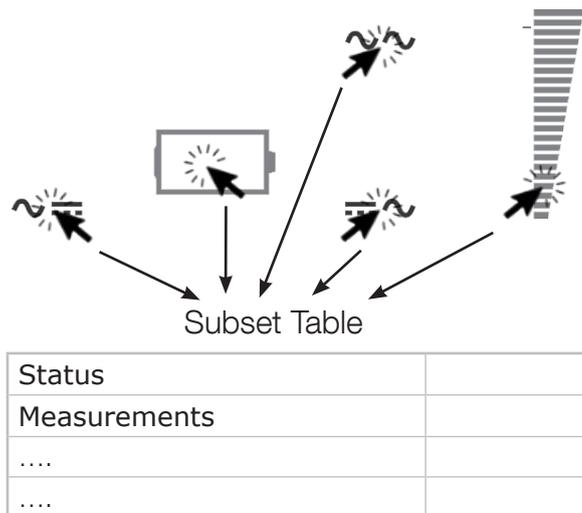

If one or more alarm is present, clicking on opens the alarm table. The icon flashes when a new alarm is incoming. In this situation, it opens the alarm page, resets all alarms and stops the audible alarm on UPS.

12.1.5. UNIT / UPS PARAMETERS TABLE

The table is updated with data read from the UPS or from the Unit selected

| "UPS or Unit Parameters" | |
|---|--|
| <p>"UPS Status" The status displayed depends on the type of UPS range. Status lists are not available for all UPS, depending on the range and UPS functionalities</p> | <p>"Unknown" – no communication with UPS "In Service mode" "On maintenance bypass" "Imminent STOP" "Auto-test procedure" "Operating on Battery" "Battery test in progress" "Load protected by Inverter" "Normal mode" – for OFF LINE UPS "UPS in eco mode" "Line-Interactive mode" "UPS in Flex mode operation" "Load on Bypass" "Unit Available" "On standby" "Load OFF"</p> |
| "Output load rate (%)" | Per phase |
| "Output Power (kVA)" | Global if measurements available from UPS |
| "Output (kW)" | Global if measurements available from UPS |
| "Output Voltage (V)" | Per phase |
| "Input voltage (V)" | Per phase |
| "Battery capacity (%)" | Only if battery present |
| "Remaining backup time (mn)" | |
| "Battery voltage (V)" | |
| "Temperature (°C)" | UPS ambience temperature |
| "Date / time" | |

12.1.6. BATTERY PARAMETERS TABLE

| "Battery Parameters" | | |
|---|--|--|
| "Battery Status" The status list displayed depends on the type of UPS range. Depending on the range and UPS functionalities, parts of the status list are not managed. | | "Unknown" "Battery disconnected" "Battery discharged" "Battery low" "Battery discharging" "Battery to input" – specific function (optional) "Battery alarm" "Battery room alarm" – if sensor present "Battery temperature alarm" – if sensor present "Battery test running" "Battery charging" "Battery OK" |
| "Battery voltage (V)" | | Battery string + and string - values are displayed if present. |
| "Battery capacity (%)" | | |
| "Battery capacity (Ah)" | | |
| "Remaining Backup time (mn)" | | Value present in the table during the battery discharging when computed or indicates the nominal backup time in normal operation |
| "Battery temperature (°C)" | | If the temperature sensor is present (option) |
| "Time since on battery power (mn)" | | Present only during battery discharging |

12.1.7. OUTPUT PARAMETERS TABLE

| "Output Parameters" | | |
|---|--|--|
| "Output Status" The status list displayed depends on the type of UPS range. The status list is not available for all UPS, depending on the range and UPS functionalities | | "Unknown" – if no com with UPS "On maintenance bypass" "Load protected by inverter" "Normal mode" – for OFF LINE UPS "eco mode" "Load on Bypass" "Line-Interactive mode" "On standby" "Load OFF" |
| "Output load rate (%)" | | Per phase |
| "Output Power (kVA)" | | Present if computed by UPS |
| "Output Power (kW)" | | Present if computed by UPS |
| "Output power factor" | | Per phase if computed by UPS |
| "Output crest factor" | | Global if computed by UPS |
| "Output Current (A)" | | Per phase |
| "Output Voltage (V)" | | Per phase |
| "Output Voltage (U)" | | Per phase if computed by UPS |
| "Output Frequency (Hz)" | | |

12.1.8. RECTIFIER PARAMETERS TABLE

| "Input Parameters" | | |
|--------------------|-------|----------------------------|
| "Input Voltage | (V)" | Per phase |
| "Input Current | (A)" | Present if computed by UPS |
| "Input Power | (kW)" | Present if computed by UPS |
| "Input Frequency | (Hz)" | |
| "Gen Set Status" | | Present if managed by UPS |

12.1.9. BYPASS PARAMETERS TABLE


| "Bypass Parameters" | | |
|---------------------|-------|----------------------------|
| "Bypass Voltage | (V)" | Per phase |
| "Bypass Voltage | (U)" | Present if computed by UPS |
| "Bypass Power | (kW)" | Present if computed by UPS |
| "Bypass Frequency | (Hz)" | |

12.1.10. INVERTER PARAMETERS TABLE

| "Inverter Parameters" | | |
|-----------------------|-------|--|
| "Inverter Voltage | (V)" | Per phase. Set to 0 if inverter is off |
| "Inverter Voltage | (U)" | Present if computed by UPS |
| "Inverter Frequency | (Hz)" | Set to 0 if inverter is off |

12.2. SYSTEM SYNOPTIC

12.2.1. ANIMATION

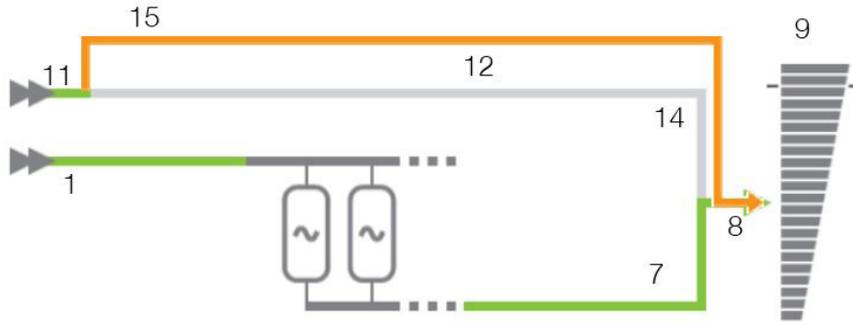

| Element | Grey | Green | Yellow | Red |
|---------|------------------------|--------------|---|--------------------------|
| 1 | Rectifier input supply | Not present | Present | |
| 7 | Inverter output | Inverter off | Inverter on On battery | |
| 8 | Output | off | On inverter On eco mode On bypass On battery | |
| 9 | Load | 0% | Up to 90% | Above 90% Above 100% |
| 11 | Bypass input supply | Not present | Present | |
| 12 | Bypass input | Not present | Present | Bypass on |
| 14 | Bypass output | Bypass off | Bypass on and eco mode | Bypass on |
| 15 | Maintenance Bypass | Present | | On maintenance bypass |

12.2.2. NAVIGATION

Clicking on the System  and output load symbols  shows the related parameters table below the synoptic.

Clicking on the  button or “Comprehensive view” in the Monitor menu switches back to the “UPS Parameters Table”.

12.2.3. UPS PARAMETERS TABLE

The table is updated with data read from the UPS at System level, which is a combination from all Unit data.

See “Unit/UPS Parameters”

12.2.4. UPS OUTPUT PARAMETERS TABLE

The table is updated with data read from the UPS at System level, which is a combination from all Unit data.

See UPS “Output Parameters Table”

12.3. ALARM TABLE

The alarm table is accessible by clicking on the  icon. The number associated to the icon  indicates the number of active alarms.

The alarm icon is shown while the general alarm is present.

The alarms table reports the current active alarms and indicates the last incoming alarm. Each alarm is time-stamped when it occurs.

All alarms from the 'JBUSP' (A00 to A63) or 'VU-MAP' (A000 – A127) table are reported in this page.


Alarm Table

| Number of Active Alarms | | 1 | |
|-------------------------|---------------------|-----------------------|------------------------------------|
| Last Alarm | | General Alarm | |
| Index | Alarm Time | UPS Alarm Description | Level |
| Axxx or Axx | dd/mm/yyyy hh:mm:ss | | Information Warning Critical |


For a parallel UPS system, the table shows only active alarms at system level.

12.4. UPS DASHBOARD

This page gives an overview of UPS parameters through graphical widgets. Measurements not available or not computed are not represented in this page. Output currents are represented in bar-graph. The vertical line defines the nominal amps limit.

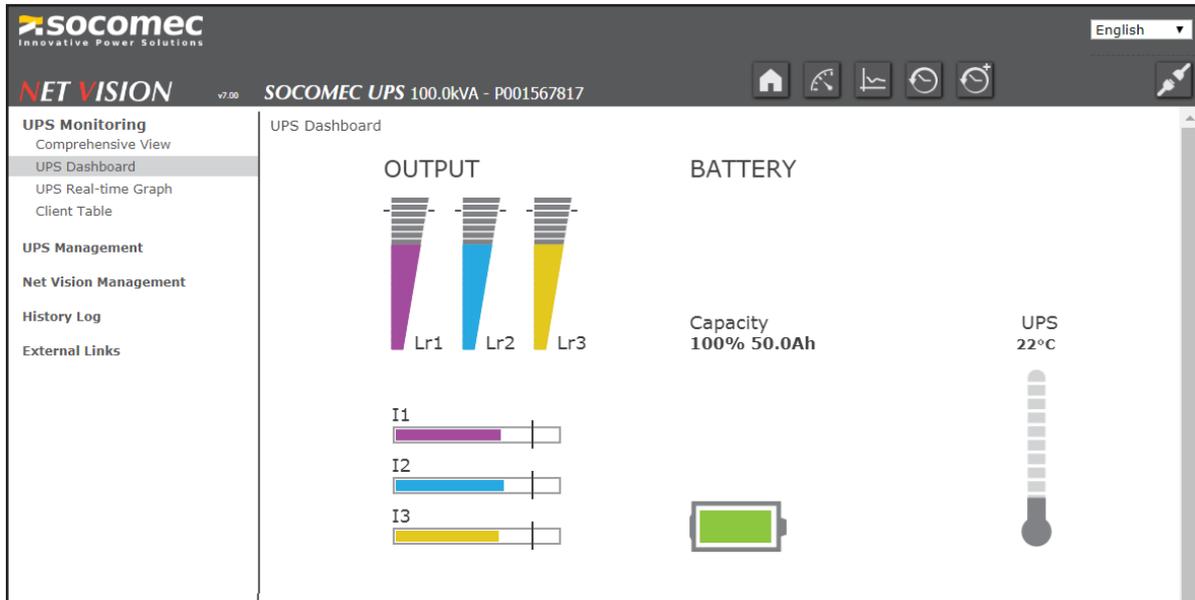

During battery discharging, remaining backup time is displayed

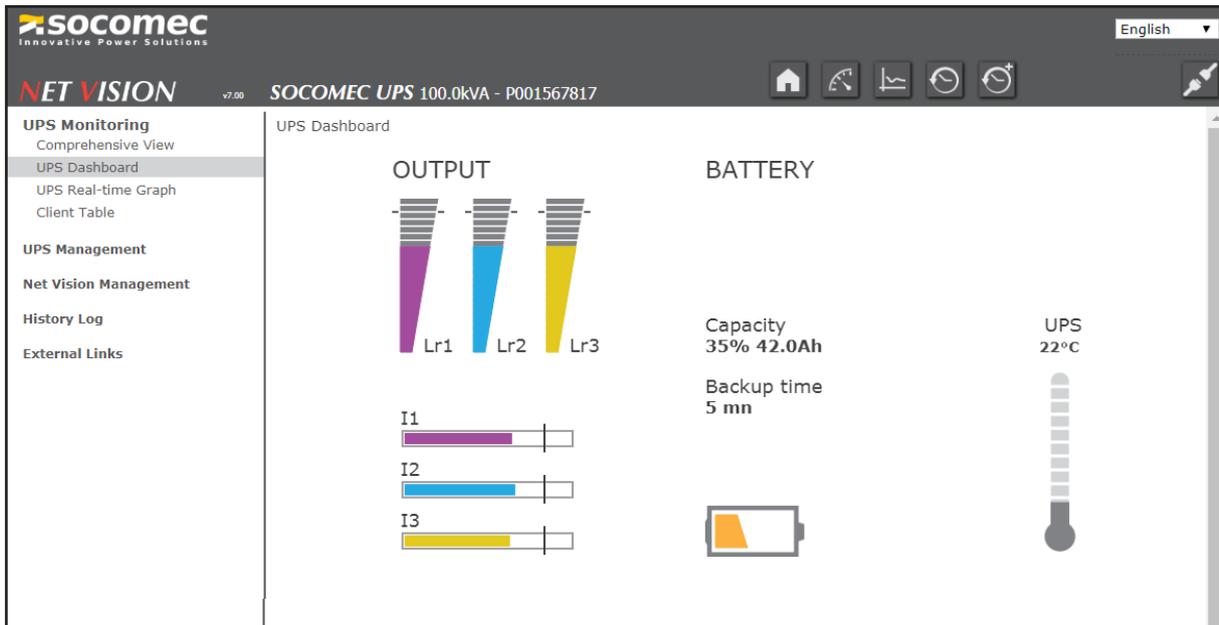


 Go back to synoptic;

For a parallel UPS system, the measurements shown are values read from system level.


12.5. REAL TIME GRAPH

This widget allows you to scan UPS parameters in real time. Measurements can be selected / unselected for more visibility.

Click on to launch the scanning

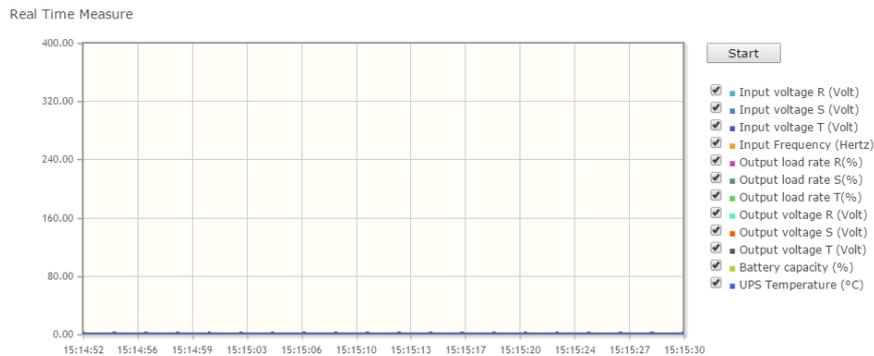

Click on to interrupt the scanning

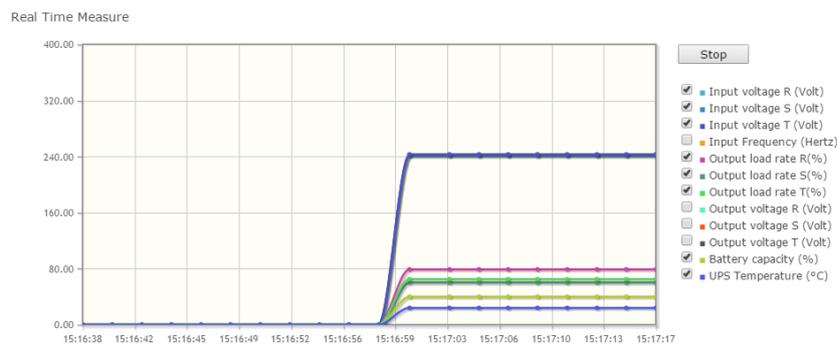

Data scanned not stored by NET VISION



Go back to synoptic;

12.6. CLIENT TABLE

This page lists all servers / Hosts connected to NET VISION. JNC and VIRTUAL-JNC software shutdown agents have to be installed on all servers to manage the events shutdown sent by NET VISION

Client Table

| | |
|-------------------------|---|
| Connected Client Number | 1 |
|-------------------------|---|

| Index | IP Address | Client Name | Connected Time |
|-------|-------------|-----------------|---------------------|
| 1 | 192.168.1.2 | IT Server (JNC) | 2017/04/08 11:17:18 |

12.7. UPS MANAGEMENT

12.7.1. UPS CONTROL

If the remote controls are enabled by the UPS, NET VISION allows the following actions depending on UPS capabilities.

The access to the controls page is possible only for admin and read/write account users.

UPS Control

| | |
|-------------------------|-----------------------|
| Transfer Load to Bypass | <input type="radio"/> |
| Enable eco mode | <input type="radio"/> |
| Enable standby mode | <input type="radio"/> |
| Alarm Acknowledgement | <input type="radio"/> |

Apply

List of all controls managed by NET VISION

| | |
|-----------------------------------|--|
| "Transfer Load to Inverter"* | Controls are available if all conditions and permissions are set by the UPS. (*) only for DELPHYS UPS ranges If a control is not present, it means that this control is not allowed by the UPS. |
| "Transfer Load to Bypass"* | |
| "Enable Line-interactive mode"* | |
| "Disabled Line-interactive mode"* | |
| "Enable eco mode" | |
| "Disable eco mode" | |
| "Enable standby mode" | |
| "Disabled standby mode" | |
| "Alarm Acknowledgement" | Always present |

(*) Only for VU-MAP UPS compliancy

For parallel UPS systems, the controls are sent to the system and dispatched to all the units present. NET VISION does not allow sending controls unit by unit.

12.7.2. BATTERY TEST

This function gives the possibility to send an immediate battery test to the UPS. The result of the last battery test, if any, is reported in the page.

For single or modular units or parallel systems with shared battery:

Battery Test

| Battery test status | Last Battery test* | Result | Next test (in day) | Battery test control |
|--|--------------------|--|---------------------|--|
| Disabled In progress On standby Programmed Enabled | day/month | No test OK Interrupted Failed | 0 if not programmed | <input type="button" value="Apply"/> Available if the remote controls are enabled by the UPS and the battery test is possible |

For parallel systems with distributed battery or for unit with blended batteries between modules (only VU-MAP compliancy UPS):

Battery Test

| Unit number or battery number | Battery test status | Last Battery test* | Result | Next test (in day) | Battery test control |
|-------------------------------|---|--------------------|--|---------------------|--|
| 1 | Disabled In progress On standby Programmed Enabled" | day/month | No test OK Interrupted Failed | 0 if not programmed | <input type="button" value="Apply"/> Available if the remote controls are enabled by the UPS and the battery test is possible |
| 2 | Disabled | 00/00 | No test | 0 | |

12.7.3. BATTERY TEST SCHEDULE

This function is available only for VU-MAP compliancy UPS. The battery test can be programmed automatically to start on a specific day and hours with a frequency given in weeks:

Battery Test Schedule

| Week interval | Day | Hours | |
|--|---|---------------------------------|--|
| <input type="text" value="Disabled"/> <ul style="list-style-type: none"> 1 ... 52 | <input type="text" value="Monday"/> <ul style="list-style-type: none"> ... Sunday | <input type="text" value="00"/> | <input type="button" value="Apply"/> Only if remote controls are enabled by UPS |

For parallel systems with distributed battery, the battery test schedule can be programmed unit by unit. Each battery test will be started at different time.

12.7.4. ECO MODE SCHEDULE

This function is available if the eco mode function is enabled by the UPS.

NET VISION can manage a running period in eco mode, than switches again in normal mode.



Warning: Make sure that the eco mode schedule is not activated on the UPS itself via local control panel before to set the eco mode schedule from NET VISION page. Both schedules cannot run on same time.

Eco mode Schedule

| Index | Enabled eco mode | | Disabled eco mode | |
|-------|--|------------------------------------|--|------------------------------------|
| 1 | <div style="border: 1px solid black; padding: 2px;">Disabled ▼ Monday ... Sunday</div> | <input type="text" value="00:00"/> | <div style="border: 1px solid black; padding: 2px;">Disabled ▼</div> | <input type="text" value="00:00"/> |

12.7.5. WEEKLY SHUTDOWN SCHEDULE

This function is activated if the “Weekly Schedule” event is enabled in the “event shutdown management” page.

Weekly Schedule

| Index | SHUTDOWN period | | RESTART period | |
|-------|--|------------------------------------|--|------------------------------------|
| 1 | <div style="border: 1px solid black; padding: 2px;">Disabled ▼ Monday ... Sunday</div> | <input type="text" value="00:00"/> | <div style="border: 1px solid black; padding: 2px;">Disabled ▼</div> | <input type="text" value="00:00"/> |

12.8. SPECIAL DAY SHUTDOWN SCHEDULE

This function is activated if the “Special Schedule” event is enabled in the “event shutdown management” page.

Special Schedule

| Index | SHUTDOWN period | | RESTART period | |
|-------|---|------------------------------------|---|------------------------------------|
| 1 | <input type="text" value="01/01/2017"/> | <input type="text" value="00:00"/> | <input type="text" value="01/01/2017"/> | <input type="text" value="00:00"/> |

12.8.1. POWER SHARE

This function is available if the UPS manages power plugs and remote controls have been activated. The configurations and Plugs controls page is accessible for admin account login only.

Power Share Management

| Available Plugs | Mode | Value |
|-----------------|--|----------------------|
| Plug 1 | <div style="border: 1px solid black; padding: 5px;">None Battery Capacity Remaining backup time Emergency light ON Time since on battery</div> | <input type="text"/> |

Power share Plugs 1 2

MODE SETTINGS

- "Battery Capacity": switches the output plug to OFF when the value is reached.
- "Remaining Backup time": switches the output plug to OFF when the value is reached.
- "Time on Battery": switches the output plug to OFF when the value is reached.
- "Emergency lighting": switches the output plug to ON when the UPS is on battery.

PLUGS CONTROL

Select to close or unselect to open the plugs then apply.
Plugs are immediately opened or closed according the control sent.



Warning: the UPS ignores the immediate control if the plug is set to a specific mode.

12.8.2. SHUTDOWN MANAGEMENT

NET VISION allows you to send notification and shutdown commands to servers. The shutdown agent must be installed on each server / Host. The NET VISION IP address should be set in the agent configuration. If the server is recognised by NET VISION, it will be present in the Client Table page of the UPS monitoring menu.

UPS SHUT OFF

This function is available if the Standby Schedule function is managed by the UPS. Otherwise this function is not displayed.

The UPS shut-off command is sent to the UPS when the NET VISION sends the shutdown command to the server. This command is sent with the time period set for this function. The UPS will turn off the output at the end of the time period.

The restart delay defines the time period after which the UPS should restart automatically after mains power resumes. A restart time set to 0 means that the UPS will not restart.

Shutdown Management

| | | |
|-------------------------------|--|--|
| UPS Shut Off Delay (Sec) | | Request to shut off the UPS after delay |
| UPS Shut Off | <input type="text" value="Disabled"/> ▼ Enabled | |
| UPS On Delay (mn) | | Request to restart the UPS |
| Level of battery capacity (%) | 0 - 100 | Set the battery level for event shutdown |


| Shutdown Event | Shutdown Actions | Warning Period (Min) | 1st Warning (Sec) | Warning Interval (Sec) |
|----------------|--|--|--|---|
| List of Event | <input type="text" value="Disabled"/> ▼ Enabled | Delay in minutes before sending shutdown command to server | Delay in seconds before sending the first warning message to sever | Delay between 2 warning messages sent to server |



WARNING!

Make sure that the UPS shut-off time period is longer than the total time period for the shutdown procedure for the Server / Hosts supplied by the UPS. See shutdown process paragraph for more details.

SHUTDOWN SEQUENCE

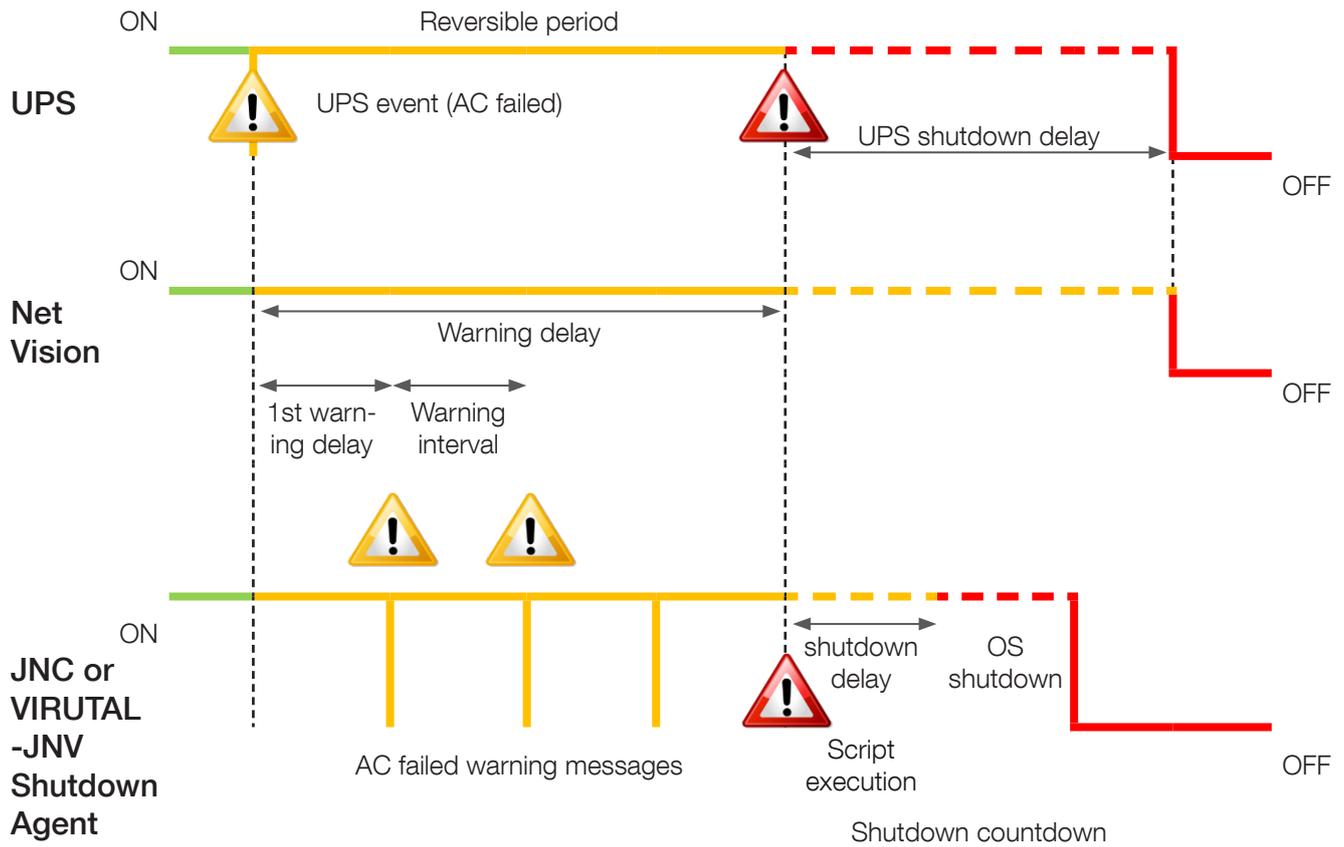

Reversible period:

If the event is removed during this period, the shutdown process is cancelled. At the end of this period, the NET VISION sends the shutdown command to servers and the UPS standby control if enabled.

Shutdown delay:

The Shutdown agent can start running scripts or batch files before the OS shutdown.



UPS shutdown delay must be greater than the server's shutdown time, evaluated as the shutdown delay set on the agent + OS shutdown itself.

SHUTDOWN EVENT SELECTION

- "UPS on battery (AC Failed)"
- "Battery Low or Battery Discharged"
- "Battery Level"
- "Imminent Stop"
- "UPS Overload"
- "Temperature Alarm"
- "On Bypass"
- "Weekly Schedule – activate the Weekly schedule page"
- "Special Day – activate the Special Day Schedule page"

Additional events if EMD device present:

- "EMD Temperature"
- "EMD Humidity"
- "EMD Alarm-1"
- "EMD Alarm-2"

SHUTDOWN TEST PROCEDURE

NET VISION allows you to simulate an AC fail event. After test validation the Shutdown procedure starts, with the settings of 'AC failed' event.

The AC Failed simulation is disabled if the AC Failed Shutdown action is disabled.

NET VISION sends the notification and the shutdown command to the server.

At the end of the procedure, after sending the shutdown command. NET VISION waits around 2 minutes before sending a shutdown cancel command. This command permits the agent to recover normal UPS status. The agent is then ready for the shutdown procedure again.

During the test, the button is disabled and switches to 'enabled' when the 'shutdown cancel' command is sent to servers.




WARNING!

If the Warning period = 0, the server shutdown command is sent immediately.

13. STS MONITORING

13.1. SYNOPTIC ANIMATION

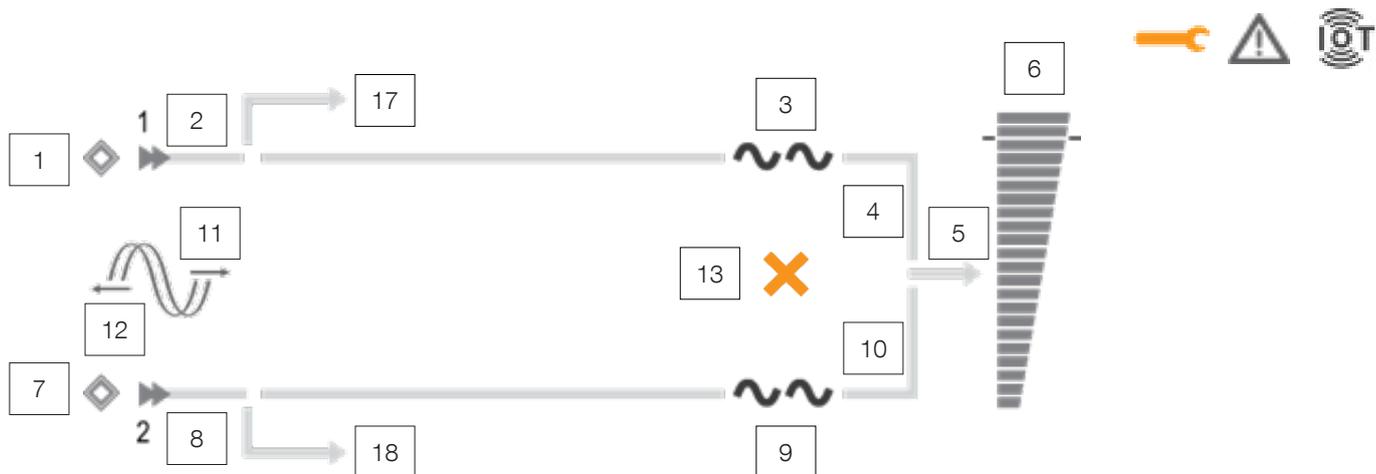

| | Element | Grey | Green | Yellow | Red |
|----|--------------------|---------------|---------------------|---------------------|-----|
| 1 | Source 1 preferred | | | | |
| 2 | input path 1 | Not present | present | On alternate source | |
| 3 | Switch 1 | | | Alarm | |
| 4 | Output SW 1 | | On preferred source | On alternate source | |
| 5 | Output | | On preferred source | On alternate source | |
| 6 | Load | | | | |
| 7 | Source 2 preferred | | | | |
| 8 | Input path 2 | Not present | present | On alternate source | |
| 9 | Swiath 2 | | | Alarm | |
| 10 | Output SW2 | | On preferred source | On alternate source | |
| 11 | Not synchro | | | | |
| 12 | Sliding | | | | |
| 13 | Bypass impossible | | | Active | |
| 14 | Maintenance alarm | | | Active | |
| 15 | Alarm present | | | | |
| 16 | IoT status | Not connected | | | |
| 17 | Maintenance byp1 | | | Closed | |
| 18 | Maintenance byp2 | | | Closed | |

13.2. STS PARAMETERS

| | |
|-------------------------|---|
| "STS STATUS" | "Unknown" "In Service mode" "On maintenance bypass 1" "On maintenance bypass 2" "Imminent STOP" "On preferred source" "On alternate source" "LOAD OFF" |
| "Output Load Rate (%)" | Per phase |
| "Output Current (A)" | Per phase |
| "Output Power (kW)" | Global |
| "Output Voltage (V)" | Per phase |
| "Output Frequency (HZ)" | |
| "Phase shift (°)" | |
| "STS Temperature (°C)" | |
| "Date and Time" | |
| "Output Current (A)" | Per phase |
| "Output Power (kW)" | Global |
| "Output Voltage (V)" | Per phase |
| "Output Frequency (HZ)" | |
| "Phase shift (°)" | |
| "STS Temperature (°C)" | |
| "Date and Time" | |

13.3. OUTPUT PARAMETERS

| | |
|-------------------------|---------------|
| "STS STATUS" | |
| "Output load rate (%)" | Per phase |
| "Output Power (kVA)" | Per phase |
| "Output Power (kW)" | Per phase |
| "Output Current (A)" | Per phase |
| "Output Voltage (U)" | Per phase |
| "Output Voltage (V)" | Per phase |
| "Output Frequency (Hz)" | |
| "Output power factor" | Per phase (*) |
| "Output Crest factor" | Per phase (*) |

(*) Present if the measurements managed by the STATYS.


13.4. PATH 1 AND PATH 2 PARAMETERS

| | |
|------------------------|------------------|
| "Input Voltage (V)" | Per phase |
| "Input Voltage (U)" | Per phase |
| "Input Frequency (Hz)" | |
| "Temperature (°C)" | Of static switch |

13.5. DASHBOARD



13.6. REAL TIME GRAPH

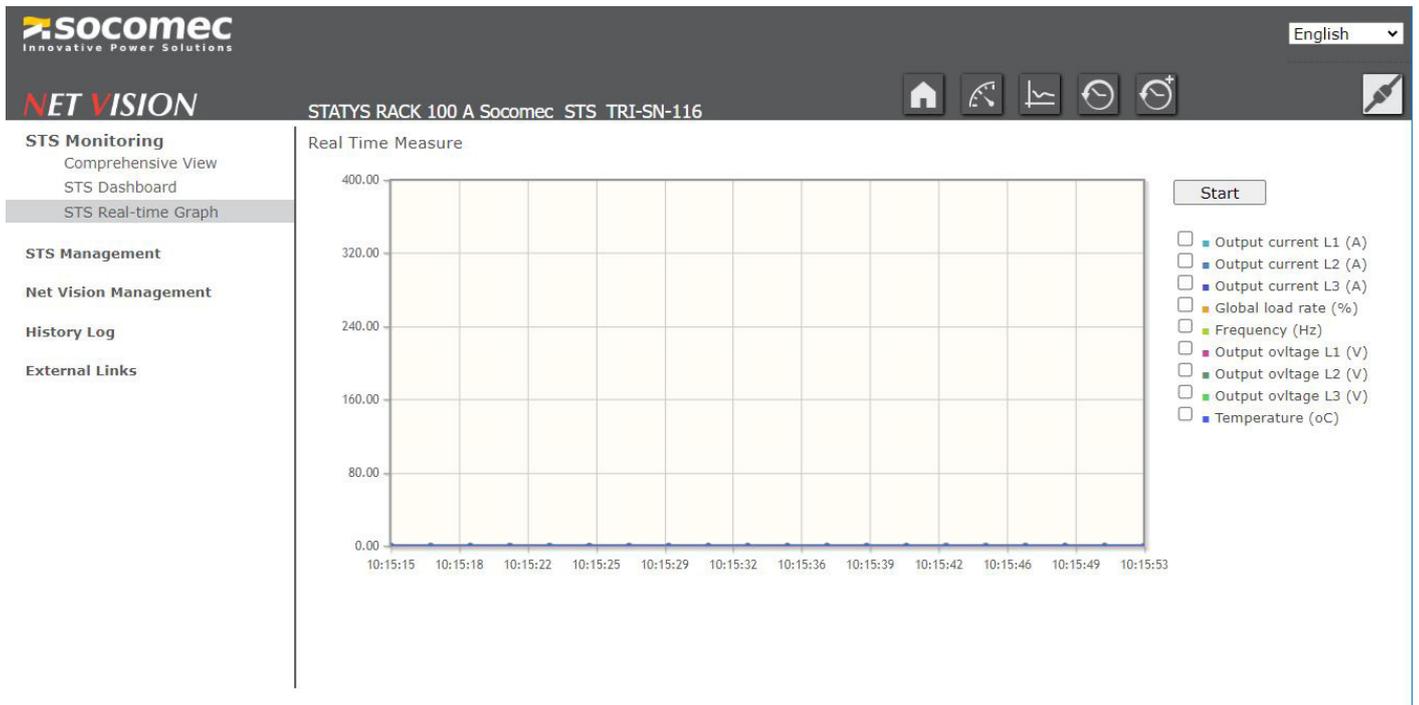

13.7. STS CONTROL

socomec
Innovative Power Solutions

English

NET VISION STATYS RACK 100 A Socomec STS TRI-SN-116

STS Monitoring

STS Management
STS Control

Net Vision Management

History Log

External Links

STS Control

| | |
|----------------------------------|-----------------------|
| Switch on alternate Source | <input type="radio"/> |
| Set Source 2 as Preferred Source | <input type="radio"/> |

Apply

13.8. LIST OF CONTROLS AVAILABLE

| |
|------------------------------------|
| “Switch on preferred Source” |
| “Switch on alternate Source” |
| “Set Source 1 as Preferred Source” |
| “Set Source 2 as Preferred Source” |
| “Alarm Ack” |

14. EMD DEVICE MANAGEMENT

If an EMD device (Environment Monitoring Device) is connected to NET VISION, you will need to activate it. The EMD should be connected to the NET VISION EMD port. EMD values are not transferred to the UPS.

Customisation

Temperature and humidity measurements and two inputs can be assigned as required.

Thresholds

The Low and High thresholds define the tolerances. If the value is out of tolerance, NET VISION will send an email, SNMP TRAP or server shutdown command, depending on the NET VISION settings.

The offset can compensate the value with a reference value.

Alarm mode

It defines if the EMD inputs are flagged as an alert in 'Normally Open' or 'Normally Closed' position.

EMD Device

Information

| | |
|------------------------|------------|
| EMD Address | 1 |
| Application FW Version | 01.00.0005 |

EMD 1

| | | |
|---------------|---|------------|
| Location Name | <input type="text"/> | |
| Alarm-1 | <input type="text" value="Alarm-1 Name"/> | Disabled ▼ |
| Alarm-2 | <input type="text" value="Alarm-2 Name"/> | Disabled ▼ |

| | | |
|---------------------------|---|-----------------------------------|
| Sensor | Temperature (°C) | |
| Sensor Name | <input type="text" value="Temperature Name"/> | |
| Calibration Offset | <input type="text" value="0.0"/> ▼ | |
| Critical Set Point (High) | <input type="checkbox"/> | <input type="text" value="60.0"/> |
| Warning Set Point (High) | <input type="checkbox"/> | <input type="text" value="50.0"/> |
| Warning Set Point (Low) | <input type="checkbox"/> | <input type="text" value="10.0"/> |
| Critical Set Point (Low) | <input type="checkbox"/> | <input type="text" value="5.0"/> |

| | | |
|---------------------------|---|-----------------------------------|
| Sensor | Humidity (%) | |
| Sensor Name | <input type="text" value="Temperature Name"/> | |
| Calibration Offset | <input type="text" value="0.0"/> ▼ | |
| Critical Set Point (High) | <input type="checkbox"/> | <input type="text" value="60.0"/> |
| Warning Set Point (High) | <input type="checkbox"/> | <input type="text" value="50.0"/> |
| Warning Set Point (Low) | <input type="checkbox"/> | <input type="text" value="10.0"/> |
| Critical Set Point (Low) | <input type="checkbox"/> | <input type="text" value="5.0"/> |

15. NET VISION MANAGEMENT

15.1. DATE AND TIME

UPS date and time

NET VISION allows the synchronisation of the UPS date and time. When NET VISION detects a new date and time (set manually or via NTP server), it sends the new values to the UPS if this function is enabled.

This function is enabled if the date and time are managed by the UPS. Otherwise this part is not displayed.

Update Now sends the current date and time to the UPS manually.

Date and time

Synchronise with computer where the web browser is open

Synchronise with NTP server (every hours)

Set values manually.

NET VISION also manages the time zone; GMT + [x] hours.

Date and Time

| | | |
|--------------------------|-----------------------|-------------------|
| Date on UPS (dd/mm/yyyy) | | |
| Time on UPS (hh:mm:ss) | | Update Now |
| Synchronize UPS | Disabled Enabled ▼ | Set Value |

Date and Time

| | |
|--------------------------|--|
| System Date (dd/mm/yyyy) | |
| System Time (hh:mm:ss) | |

Time Zone

GMT+

Daylight Saving Time:

Disabled

Enabled

Auto

Synchronize with computer time

Computer Date:

Computer Time:

Synchronize with NTP server

NTP Server:

IP address

NTP Synchro:

hour / day / week / month

NTS Support:

Disabled
Enabled ▼

Set manually

Date (dd/mm/yyyy):

01/01/2022

Time (hh:mm:ss):

00:00:00



In case of using NTP synchronisation, the NET VISION clock is set with UTC time. Having local time, select the time zone and daylight if necessary. Daylight saving set to 'Auto' managed according to the time zone set (summer / spring period for +1 or -1 hour).

15.2. NET VISION CONFIGURATION

| Configuration | Default value | Description |
|-----------------------------|---|---|
| "Upload Configuration" | | Select the NET VISION settings backup file to restore previous settings |
| "Upload CA file " | | Select a local certificate for secure connection. |
| "Download Configuration" | | Create a backup file of all NET VISION settings |
| "Download Root Certificate" | | Download the NV certificate to install on local computer for secure connection |
| "Download MIB file" | | |
| "BootP/DHCP" | DHCP enabled | Select "Static" to modify manually IP settings |
| "IP Address" | 192.168.7.18 | |
| "Gateway Address" | | |
| "Subnet Mask" | | |
| "DNS Address" | | Allows you to set server IP by name, instead IP value address |
| "System Name" | Socomec | Name reported in NET VISION top bar, SNMP OID and in email |
| "System Contact" | | Additional info reported in SNMP OID and in email |
| "System Location" | | Additional info reported in NET VISION top bar, SNMP OID and in email |
| "History Log Interval (s)" | 60 | NET VISION records measurements in history log file every minute (60s). Up to 2048 records |
| "Extend Log Interval (mn)" | 60 | NET VISION records the minimum, average and maximum measurements history log file every hour (60mn). Up to 2048 records |
| "Net Vision admin Password" | | To change admin account password |
| "Polling Rate (s)" | 2 | Defines the delay between 2 pollings |
| "First Login Reset (Day)" | 90 | Accounts password validity period up to 720 days |
| "Serial Timeout (ms)" | 20 ms (56k) 50 ms (19200) 100 ms (9600) | Additional serial time out |
| "Temperature unit" | °C | Select °C or °F |
| "SNMP read Community" | public | To be reported in the NMS if necessary |
| "SNMP write Community" | private | To be reported in the NMS if necessary |
| "Login Timeout (s)" | 300 | Defines the time while the session is open. |
| "Baud rate Setting" | 9600 | Can be changed if automatic discovery is not working. 2400 / 9600 / 19200 / 57600 |

| "IPv6 Configuration" | Automatic | Select the IPv6 mode |
|-----------------------|-----------------------------|--------------------------------------|
| "IPv6 Local Address" | fe80::2e0:d8ff:feff:c1a0/64 | To be set according to IPv6 settings |
| "IPv6 Global Address" | | To be set according to IPv6 settings |
| "IPv6 Router" | | To be set according to IPv6 settings |

15.3. NET VISION CONTROL

| Configuration | Default value | Description |
|----------------------------|------------------------------|--|
| "BootP/DHCP" | | |
| "PING Echo" | | The ping answer can be disabled |
| "Network Upgrade" | | The FW upgrade, through TFTP, from NET VISION Explorer can be disabled |
| "HTTPs Port" | Port 443 | To enable HTTPs secure connection |
| "HTTP Port" | Port 80 | To enable web page and changing port |
| "SSH Connection" | Port 22 | To enable remote console (such as putty tool) for NET VISION configuration |
| "SNMP Support" | Port 161 Version | To enable connection to NMS v1 / v2c / v3 |
| "SMTP Support" | Port 25 | To enable email functions |
| "ShutDown-Agent Setup" | UDP 200 | Fixed UDP Port |
| "UPnP Control" | | To enable NET VISION as a Network device |
| "RADIUS/Authentication" | | To enable authentication protocol page settings |
| "WOL Target" | | To enable Wake On LAN settings page. Protocol to restart servers when NET VISION restarts after a shutdown due to AC failure |
| "Modbus Configuration" | | To enable MODBUS TCP protocol |
| "BACnet Configuration" | | BACnet is disabled for μ UPS and old UPS range. BACnet is not available for STS device |
| "Syslog Setup" | | To enable Syslog settings page |
| "DDNS Setup" | | To enable DDNS settings page |
| "Firewall Setup" | | To enable Firewall settings page |
| "Data Unit Selection" | 0 for System Unit 1 to 12 | Set to 0: all Unit SNMP OID and Unit BACnet objects are set with data at System/UPS level. Set to an unit number: all Unit SNMP OID and Unit BACnet objects are set with data of the unit selected. Net Vision monitors only the unit selected. Other units are not present in the tree view in that situation. NET VISION must be installed on each Unit. TRAPS are still managed at SYSTEM level |
| "SNMP TRAP / email Filter" | Disabled | This function enable or disable TRAP3 and TRAP4 notification when "severity" level is set as filter to send TRAP or e-mail |

15.4. MULTI-USER TABLE

This table sets user's credential to access the NET VISION interface, NET VISION allows up to 8 user accounts.

Admin account is not managed in this table, this account is always active.

Multi-User Table

| Index | User Name | Password | Access type |
|-------|----------------------|----------------------|-------------------------------------|
| 1 | <input type="text"/> | <input type="text"/> | Disabled Read Only Read/Write |

Remark:

This table combines with the RADIUS function. NET VISION checks before on RADIUS server (if enabled) the user account. If the user is existing on RADIUS server, NETVISION will take the RADIUS account credentials. Otherwise he will check the local user account set in the Multi-User table.

15.5. REMOTE VIEW PRO CONFIGURATION (ONLY FOR UPS)

If Remote View Pro supervision SW is running to monitor the UPS, the server IP must be reported in NET VISION.

Remote View Pro SW sees NET VISION as a communication node server.

NET VISION must be added on Remote View Pro accordingly.

Remote View Pro Configuration

| | |
|----------------|----------------------|
| Server Control | Disabled Enabled |
| Server IP | <input type="text"/> |
| Server Port | 80 |
| GUID | NV MAC address |
| Password | To set |


15.6. REMOTE VIEW PRO SERVER CONFIGURATION

15.6.1. UPS SETTINGS

This function is available from Remote View Pro v3.x version. Previous release has to be updated with last package available on SOCOMEC's WEB page. A new licence is not needed if already installed. The configurations are reported in the new release during installation setup.

A new group has to be created in "Device Group" as NV7 type.

- Select a Name for this group
- Copy the GUID given by NET VISION
- Set the same password as in NET VISION
- Apply to save settings.

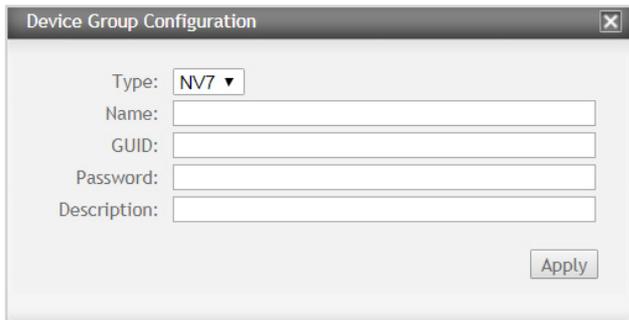

The image shows a dialog box titled "Device Group Configuration". It contains the following fields:

- Type: NV7 (dropdown menu)
- Name: (text input field)
- GUID: (text input field)
- Password: (text input field)
- Description: (text input field)

An "Apply" button is located at the bottom right of the dialog box.

Once the new Device Group is connect, Add the NET VISION in Node List

If an EMD device is connected to this NET VISION, EMD device has to be added as a second node.



The image shows a table titled "NODE List" with the following columns: NODE NAME, Status, IP Address, MAC Address, and Version. The table contains one row with the following data:

| | NODE NAME | Status | IP Address | MAC Address | Version |
|--------------------------|--------------|-------------|-------------|-----------------|-----------------------|
| <input type="checkbox"/> | NET VISION 8 | information | 192.168.1.1 | 00E0D8FFC43AUPS | Net Vision 8 v0.80 a9 |
| <input type="checkbox"/> | | | | | |

15.6.2. STS SETTINGS

The STS needs to be set as SNMP agent in Remote View Pro SW. Single add and enabled STS MIB.

15.7. SNMP v3 USM TABLE CONFIGURATION

This page contains the related setting for configuring the SNMPv3 protocol.
The security level defines the access for authentication and privacy password.

“noAuthNoPriv” with no authentication and no privacy passwords

“authNoPriv” with authentication password but no privacy password

“authPriv” with authentication password but with privacy password

User name and Password⁽¹⁾ set to NET VISION must be reported in the SNMP v3 configuration of the NMS.
If Authentication is requested, the protocol must be chosen between HMAC-MD5 or HMAC-SHA
If Privacy protocol is requested, the protocol must be chosen between DES or AES.

The protocols chosen in NET VISION must be reported in the SNMP v3 configuration of the NMS

SNMP USM table Configuration

| Index | User Name | Auth-Password | Auth-Protocol | Priv-Password | Priv-Protocol | Security level |
|-------|----------------------|----------------------|---------------|----------------------|---------------|--|
| 1 | <input type="text"/> | <input type="text"/> | MD5 SHA ▼ | <input type="text"/> | DES AES ▼ | noAuthNoPriv ▼ authNoPriv authPriv |

15.8. SNMP TRAP RECEIVERS CONFIGURATION

This page lists the parameters for SNMP trap receivers. NET VISION allows up to 8 NMS IP Address.
As NET VISION manages its own MIB file and the standard RFC1628 MIB (for UPS only), you have to select the correct MIB file used to monitor the UPS.

In case of using the NET VISION MIB file, a specific filter for TRAP sending can be applied as following:

- Filtering by Severity: in this case a second filter can be applied such as:
 - “Information”: all TRAPs will be send
 - “Warning”: ‘warning’ and ‘critical’ TRAPs will be send
 - “Critical”: only ‘critical’ TRAPs will be sent.



TRAP 3 and TRAP 4 will be not sent with this filter if “SNMP TRAP Filter” has been enabled in the “NET VISION Control” page.



In case of selecting TRAP v3, the USER name of USM table has to be reported in Community string.

- Filtering by Event: it is necessary to select events that will send TRAP to the NMS.



Once events have been selected or unselected, the selection must be saved: click on to save the SNMP settings

SNMP Trap Receivers Table

| Index | NMS IP address | Community String | Trap Type | Trap Version | Event Filter | Severity |
|-------|----------------------|----------------------|--------------------------------------|-------------------|--------------|---|
| 1 | <input type="text"/> | <input type="text"/> | None ▼ RFC1628 NET VISION TRAP | v1 ▼ v2c v3 | By Severity | Information ▼ Warning Critical |
| 2 | | | | | By Event | <input type="button" value="Event Select"/> |

(1) For all passwords, ()[]{}\$%&\|/ characters are NOT allowed"

For SNMP v3 Trap Version, the USM table must be set according to the NMS configuration.
Filter by specific event: TRAP list selection ordered by severity.

15.8.1. UPS EVENT LIST

INFORMATION

| | |
|--|---|
| This trap is sent upon completion of a UPS diagnostic test | Not available for all UPS |
| The UPS status is normal. Load protected by UPS (*) | TRAP 22 |
| Alarm cancelled. All alarms are disabled (*) | TRAP 24: General alarm no longer present |
| The UPS has cancelled the shutdown procedure to agent | TRAP 26: Sent if the server shutdown has been enabled |
| This trap is sent each time an alarm is removed from the alarm table | TRAP 4: entry removed |
| The Input supply has been restored | TRAP 23 |
| The communication between UPS and the agent has been restored | TRAP 25 |
| NET VISION is restarting | TRAP 27 |
| EMD Sensor Not over high temperature | TRAP 31 |
| EMD Sensor Not over high humidity | TRAP 35 |
| EMD input2 is restored | TRAP 39 |
| EMD Sensor Not under low temperature | TRAP 29 |
| EMD Sensor Not under low humidity | TRAP 33 |
| EMD input1 is restored | TRAP 37 |

WARNING

| | |
|--|---|
| The UPS is operating on battery power | TRAP 1: Sent every minute with remaining backup time |
| The UPS output is in overload (*) | TRAP 6: Output load rate more than 100%. |
| The battery is in alarm | TRAP 11 |
| The battery test has detected a weak battery | TRAP16: Test failed |
| Load supplied by automatic Bypass | TRAP 18: On bypass and not eco mode activated |
| A warning message has been sent to shutdown agent | TRAP 20: Sent if the server shutdown has been enabled |
| This TRAP is sent each time an alarm is inserted into to the alarm table | TRAP 3: New entry added |
| Redundancy is lost | TRAP 7 |
| The UPS has switched to battery backup power (*) | TRAP 15: Battery discharging – sent once |
| The UPS internal temperature has reached the threshold | TRAP 17 |
| A preventive alarm has been detected by the UPS (*) | TRAP 19 (including general alarm) |
| A shutdown command has been sent to agent | TRAP 21: Sent if the server shutdown has been enabled |

CRITICAL

| | |
|---|---|
| The UPS is about to switch off the output power | TRAP 5: Imminent stop |
| The battery has been detected as discharged | TRAP 9 |
| A critical alarm has been detected on the UPS (*) | TRAP 12 |
| UPS is no longer communicating with the agent | TRAP 14 |
| The battery has been disconnected from the UPS | TRAP 8 |
| The battery is near of the end of backup time (*) | TRAP 10: Battery low / end of backup time |
| The load has been disconnected from the UPS | TRAP 13: Load off or on standby mode |
| EMD Sensor detected low temperature | TRAP 28 |
| EMD Sensor detected low humidity | TRAP 32 |
| EMD input1 is active | TRAP 36 |
| EMD Sensor detected high temperature | TRAP 30 |
| EMD Sensor detected high humidity | TRAP 34 |
| EMD input2 is active | TRAP 38 |

(*) typical setting for basic usage example, with TRAP filter setting enabled in NET VISION Control page.

15.8.2. STS EVENT LIST

I INFORMATION

| |
|--|
| The load is supplied by the preferred source |
| Alarm cancelled. STS in normal situation |
| The source 1 is the preferred source |
| New Admin or User session opened. |
| Trap test. |

W WARNING

| |
|--|
| The load is supplied by the alternate source |
| STS general alarm |
| Admin or User account locked. |

C CRITICAL

| |
|-------------------|
| STS Imminent Stop |
| STS in Overload |
| Load not supplied |

15.9. EMAIL NOTIFICATION

This page gives the description of UPS email notification settings. Email sending follows the same rule as for TRAP management.

The first part is dedicated to Mail Server and user account if necessary.

| | |
|---------------------------------------|---|
| "Mail Server" | IP address or server full name |
| "User Account" | Needed if authentication is enabled |
| "User Password" ⁽¹⁾ | Needed if authentication is enabled |
| "Sender email Address" | name@domain |
| "Mail Subject Prefix" | Free text as mail subject |
| "DNS Address" | |
| "Mail Daily Status Report at (hh:mm)" | 00:00 |
| "Mail support TLS" | To enabled if required by e-mail server |
| "Mail support authentication" | To by enabled if user account is required |
| "Delay before sending (minute)" | delay before sending email if event still present |

(1) For all passwords, ()[]{}\$%&\|/ characters are NOT allowed"

Send Test function

Once the Mail Server and account have been set and saved on NET VISION, click on to test the configuration with function.

Mail Type

"Events": the email is sent when the event occurs

"Daily Status": NET VISION sends a daily e-mail at defined time. This e-mail includes history log files in attachment.

"Events / Status": an e-mail is sent when the event occurs with the history log file in attachment.

Event filter by severity:

"Information": all alarms are sent via email

"Warning": alarms tagged as "warning" and "critical" are sent

"Critical": only critical alarms are sent

Event filter by specific event:

Refer to SNMP TRAP event selection.

Selecting this filter means the emails are sent at the same time as SNMP TRAP.

Refer to event list for TRAP

Email Notification

| Index | Mail account | Description | Mail Type | Event Filter | Event Level |
|-------|----------------------|----------------------|--|--|---|
| 1 | <input type="text"/> | <input type="text"/> | <input type="text" value="None"/> ▼ Events Daily status Events/status | <input type="text" value="By Severity"/> | <input type="text" value="Information"/> ▼ Warning Critical |
| ...8 | <input type="text"/> | <input type="text"/> | <input type="text" value="None"/> ▼ | <input type="text" value="By Event"/> | <input type="button" value="Event Select"/> |

Note: the e-mail address length is limited to 64 characters.

15.10. AUTHENTICATION CONFIGURATION

This page gives the description of Authentication Configuration settings.

| | |
|------------------------------------|---|
| "UDP Port" | This parameter displays the RADIUS protocol port. |
| "Primary Server" | Primary RADIUS server IP or domain name. |
| "Secondary Server" | Backup RADIUS server IP or domain name. If the RADIUS server is not backed-up the parameter can remain blank. |
| "Share Secret of Primary Server" | This parameter is used to transmit an encryption password between NET VISION and primary RADIUS server. This value must be the same as the primary RADIUS server setting. |
| "Share Secret of Secondary Server" | This parameter is used to transmit an encryption password between NET VISION and the secondary RADIUS server. This value must be the same as the secondary RADIUS server setting. If the RADIUS server is not backed-up the parameter can remain blank. |
| "Packet Timeout Interval" | When the RADIUS server does not respond within time interval, the authentication packet will be re-sent. |
| "Packet Retry Times" | When the RADIUS server does not respond the authentication request will be re-sent according to packet retry times. |

If you do not have a secondary radius server, you can only set "Primary Server" and "Share Secret of Primary Server".

Authentication Configuration

| | |
|----------------------------------|--------------------------------|
| UDP Port | 1812 |
| Primary Server | <input type="text"/> |
| Secondary Server | <input type="text"/> |
| Share Secret of primary Server | |
| Share Secret of secondary Server | |
| Packet Timeout | <input type="text" value="1"/> |
| Packet Retry | <input type="text" value="3"/> |

| Index | User Name | Access type |
|-------|----------------------|--|
| 1 | <input type="text"/> | <input type="button" value="Disabled"/> <input type="button" value="Read Only"/> <input type="button" value="Read/Write"/> |

Note:

This service allows all users set in the RADIUS server to login to NET VISION with Read/Write permission. Users managed by RADIUS server have to be reported in the User table to select user's rights access to NET VISION (Read or R/W).

15.11. WOL TARGETS (ONLY FOR UPS DEVICE)

The "Wake On LAN" function restarts through network interface all registered client servers. Up to 32 MAC client addresses can be managed by NET VISION. WOL frame is sent to servers in case of servers have been shut down after an AC failed procedure.

Wake On LAN Targets

| | |
|--------------------|--------------------------------|
| Repeating Times | <input type="text" value="1"/> |
| Interval Timer (s) | <input type="text" value="1"/> |

| Test | Index | Mac Address | Control | Description |
|--------------------------|-------|--|-----------|----------------------|
| <input type="checkbox"/> | 1 | <input type="text" value="00:00:00:00:00:00"/> | Enabled ▼ | <input type="text"/> |

15.12. MODBUS TCP CONFIGURATION

This page enables or disables the MODBUS TCP protocol; the MODBUS Port can be changed.

MODBUS Configuration

| | |
|--------------------------|----------------------------------|
| Modbus TCP Configuration | Enabled ▼ Disabled |
| Modbus Port | <input type="text" value="502"/> |

Refer to Annex for UPS data access through MODBUS TCP protocol.

Note:



Only 1 unique connection allows

No multi connection

If the MODBUS TCP port has been opened by the remote station and there is a "blank" of 1 minute (no data exchanged), NET VISION will close the port for security reason.

15.13. BACNET CONFIGURATION

This page enables or disables the BACnet protocol.

BACNET Configuration

| | |
|----------------------|------------------------------------|
| BACnet Configuration | Enabled ▼ Disabled |
| BACnet Port | <input type="text" value="47808"/> |
| BACnet ID | <input type="text" value="1883"/> |

Refer to § Appendix for BACnet Object definition

15.14. SYSLOG SETUP

This page contains the related setting for configuring the Syslog protocol

Syslog Setup

| | |
|----------------|----------------------------|
| Server Control | Enabled ▼ Disabled |
| Server IP | <input type="text"/> |
| Syslog filter | UPS + NET VISION + SERVICE |
| Server Port | 514 |
| TLS Control | Enabled ▼ Disabled |

Syslog filter: UPS + NET VISION + SERVICE to select the group of events send to Syslog server.

Syslog protocol includes all UPS events, NET VISION configurations changes and shutdown command sent to servers.

All records of UPS Events Log and NET VISION Events Log are pushed to target server through syslog protocol.

Using SYSLOG over TLS, the related certificate can be uploaded if needed.

15.15. DDNS SETUP

This page lets the Administrator to set DDNS configuration in NET VISION.

NET VISION can register any of the DDNS providers.

The user name and password must be created with the selected DDNS provider.

DDNS Setup

| | |
|-------------------------------------|--|
| DDNS State Disabled / Failed / Pass | |
| DDNS Control | Enabled ▼ Disabled |
| DDNS ISP setup | ezip ▼ pgpow dhs dyndns dyndns-stat tzo easydns |
| User Name | <input type="text"/> |
| Password | <input type="text"/> |
| DDNS Domain name | <input type="text"/> |

15.16. FIREWALL SETUP

This page allows setting the accessible IP list.

Prefix Length: number of bits in the mask to define the IP segment

Example: /8 = 11111111 00000000 00000000 00000000

Firewall action:

Accept: this IP or IP segment can be accessed by NET VISION.

Reject: this IP or IP segment cannot be accessed by NET VISION.

Firewall Configuration


| Index | IP Address | Prefix Length | Action |
|-------|----------------------|-------------------------------------|--------------------|
| 1 | <input type="text"/> | 0 to 31 (IPv4) ▼ 0 to 128 (IPv6) | Accept ▼ Reject |

15.17. UPnP PROTOCOL

UPnP (Universal Plug and Play) protocol allows NET VISION to be managed as device network from a remote computer.

The user interface can be opened clicking on the NET VISION device icon.

The NET VISION is present in the device network list as bellow.

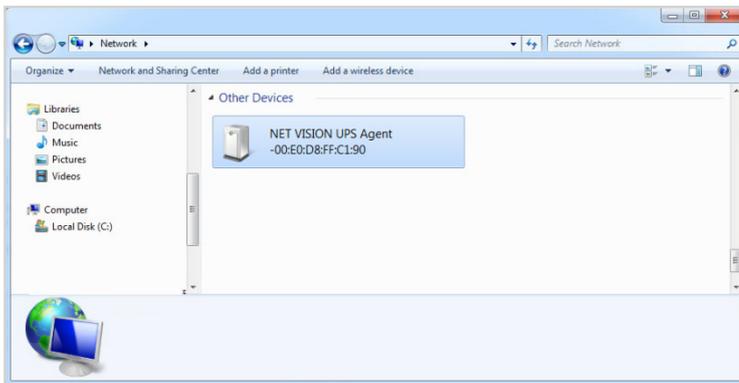

NET VISION network device properties :



15.18. MULTI-LANGUAGE

create your own language version or download additional language package if available.

15.19. FIRMWARE UPGRADE

Upgrade the firmware

select the bin file

click on upload

16. NET VISION IOT GATEWAY

NET VISION includes IoT Gateway functions for:



- SoLive UPS
SOCOMECEC free mobile app for UPS remote monitoring

- SoLink Remote Maintenance
SOCOMECEC 24/7 Remote Monitoring Service contract



16.1. REQUIREMENTS

An internet access from the local network is necessary to connect NET VISION to SOCOMECEC Cloud Application.

NET VISION needs following outgoing ports open:

- HTTPs: 443
- NTP: 123

16.2. IoT GATEWAY ACCOUNT CREATION

Your NET VISION gateway and the device associated have to be created with your own account on SOCOMECEC Cloud Application.

After contacting your Socomec support you will get an activation key back.

This key has to be reported in NET VISION IoT Configuration page to enable the communication with cloud application.

16.3. NTP SETTINGS

To guarantee the correct data transferring and storage to SOCOMECEC Cloud Applications, the NTP server has to be set on NET VISION. A public NTP server url, such as ntp.pool.org, is allowed.

16.4. PROXY SETTING IN IoT CONFIGURATION PAGE

A PROXY server is recommended to ensure a secure internet connection. NET VISION manages different kind of PROXY server.

SOCOMEc IoT connection

| | |
|--------------|------------------|
| Proxy Server | Auto |
| Host | Disabled Auto |
| Port | NTLM Kerberos |
| Login | Proxy basic |
| Password | |

Apply

Test

PROXY Settings:

- Select the type of Server
- Enter Host name and port.
- Login and password if needed.

Finalize the setting clicking on **Apply**

Test button checks if the NET VISION is able to reach the Socomec server.

In case of test failed:

Check the PROXY setting and network connection.

16.5. SYNCHRONIZATION IoT CONNECTION PAGE

A synchronization action has to be performed to initiate the provisioning process to SOCOMEc's Cloud Application.

The **Synchronization** button is enabled if all following conditions are respected:

- PROXY server enabled if needed
- IoT connection enabled and Activation Key entered
- NTP server set, date and time update from server done once
- The device is communicating with NET VISION (Serial number and UPS ID and configuration transferred to NET VISION)

| | |
|--------|--------------|
| Status | Disconnected |
|--------|--------------|

Synchronization

The IoT connection status is above the Synchronization button. (Refer to §19.6.3)

16.6. IoT SERVICE ACTIVATION IOT CONNECTION PAGE

| | | |
|-------------------------------------|--------------------------------------|---|
| IoT Socomec | <input type="text" value="Enabled"/> | Access Type |
| Device name | <input type="text"/> | |
| Remote Maintenance Activation Key | <input type="text"/> | <input type="text" value="Enabled"/> |
| Remote Portal Access Activation Key | <input type="text"/> | <input type="text" value="Disabled"/> |
| Mobile App | Activation key | <input type="text"/> <input type="text" value="Disabled"/> <input type="button" value="Request"/> |
| | Site name | <input type="text"/> |
| | Installation name | <input type="text"/> |
| | User reference | <input type="text"/> |
| | Admin account email | <input type="text"/> |
| | User 1 account email | <input type="text"/> |
| | User 2 account email | <input type="text"/> |
| | User 3 account email | <input type="text"/> |
| User 4 account email | <input type="text"/> | Activation key will return via SMS QR code to scan from SOCOMEC APP |

16.6.1. IoT CONNECTION SETTING

Before to enable a cloud service:

- Enable the IoT Connection
- Enter a Device Name in upper case and without space.

16.6.2. SoLINK : REMOTE MAINTENANCE ACTIVATION

- Enter the activation key (uuid – 32 characters format) given by our Expert Service
- Enable the Remote maintenance service.

and

16.6.3. PORTAL ACCESS ACTIVATION

- Enter the activation key (uuid – 32 characters format) given by our Expert Service
- Enable the Portal Access service.

and

16.6.4. SoLIVE : MOBILE APP ACTIVATION

please refer to Solive quick start guide to monitor your UPS in SoLive mobile app procedure; in brief:

1. Create your Socomec cloud account via SoLive App
2. Register your mobile to cloud platform via SoLive App
3. Get the mobile App activation key via SMS
4. Activate your device via NET VISION IoT page
5. Add your device in Solive App

16.6.5. LIST OF STATUS CONNECTION AND EVENT STORED IN NET VISION EVENTS LOG

| Connection Status | Description | Action |
|---|---|--|
| Device Unknown | The IoT connection is disabled | Default status |
| Disconnected | The IoT connection stopped | Waiting the next synchronization if the function is enabled |
| Connecting | The IoT connection is in progress | Wait for connected status |
| Connected | The IoT connection operates | Normal operation |
| Create Device Gateway Fail | The gateway provisioning has been refused by the server, or end of time out | Check the IoT settings and enter again the activation key. A new synchronisation has to be start |
| Create device Fail | The device provisioning has been refused by the server, or and of time out | A new synchronisation is required |
| Check Profile Fail | The profile is missing | Click again on [Synchronization], re-starting the process |
| Download Profile Fail Wrong profile format | The profile is corrupted | Click again on [Synchronization], re-starting the process |
| Push Data Fail | Error answer from server | Wait next data push |
| | | |
| SSL CA Expired | No internet access | Check Ethernet connection and proxy settings |
| DNS Resolved Failed | DNS not reachable | Check proxy setting |
| Cloud Request Failed | Error get from server | Wait next synchronization |
| Data check error | Error get from server | Wait next synchronization |
| Get Gateway Failed | Error get from server | Wait next synchronization |
| Get UPS Failed | Error get from server | Wait next synchronization |

In case of connection failure NET VISION closes all IoT connections, and retries a new connection every 2 minutes. After 10 unsuccessful retries, the NET VISION tries again after 20 minutes. Alarms and Status occurring during disconnection period are memorized and transmitted once the IoT connection is established.

17. EXTERNAL LINK SETUP

This page allows setting the access to other network devices by hyperlink.

Screen Text description will appear in the External Links menu.

The hyperlink includes the IP address or url (without http://) set as Link Address

External Links Setup

| Index | Screen Text | Link Address | Status |
|-------|----------------------|----------------------|----------------------|
| 1 | <input type="text"/> | <input type="text"/> | Disabled Enabled |
| 2 | <input type="text"/> | <input type="text"/> | Disabled ▼ |
| 3 | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| 4 | <input type="text"/> | <input type="text"/> | <input type="text"/> |

Example:

The screenshot shows the Socomec NET VISION interface. The left sidebar contains a menu with 'External Links' and 'External device access' highlighted. The main content area is titled 'External Links Setup' and contains a table with the following data:

| Index | Screen Text | Link Address | Status |
|-------|------------------------|--------------|------------|
| 1 | External device access | 192.168.1.1 | Enabled ▼ |
| 2 | | | Disabled ▼ |
| 3 | | | Disabled ▼ |
| 4 | | | Disabled ▼ |

An 'Apply' button is located below the table.

Click on the link to open a new page in the web browser.

18. HISTORY LOG

18.1. HISTORY LOG

HISTORY LOG ACCESS FROM SHORT CUT IN TOP BAR

From this access, the measurements recorded are shown in graphical mode.

By default, the NET VISION shows the last 30 minutes records.

The time window can be selected by Specific Period or by Day Selection using the calendar function.

Measurements group selection: (all groups are selected by default)

Input Information: includes Input voltage per phase and input frequency

Output information: includes output voltage per phase, global output load

UPS information: includes UPS temperature and battery capacity


UPS History Graphic

| | | | |
|-----------------------|------|---|---------|
| <input type="radio"/> | Show | Specific Period ▼ | Records |
| | | 30 minutes 60 minutes 3 hours 6 hours 12 hours 1 day | |

| | | | | | | |
|-----------------------|------|------------|----|------------|---------|---------------------------------------|
| <input type="radio"/> | Show | dd/mm/yyyy | to | dd/mm/yyyy | Records | <input type="button" value="Change"/> |
|-----------------------|------|------------|----|------------|---------|---------------------------------------|



| | | |
|---|--|---|
| <input checked="" type="checkbox"/> Input information | <input checked="" type="checkbox"/> Output information | <input checked="" type="checkbox"/> UPS information |
|---|--|---|

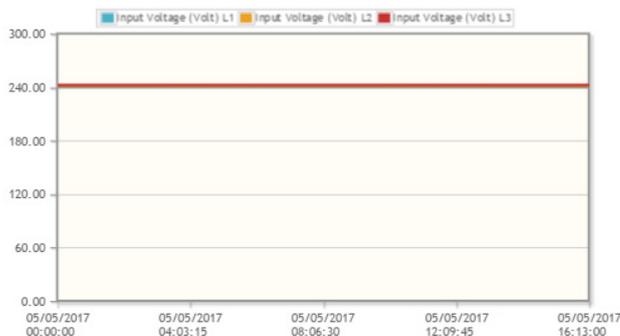

HISTORY LOG FROM NET VISION MENU ITEM

This menu shows the history log page by page in a table presentation.
The last 5 records are shown in the table by default.

The time window can also be changed via the calendar.

The number of pages available is displayed above and below the table. Page numbers are used as buttons to change the log page.

UPS History Log

from to

Log count per page

<< < 1 2 3 > >>

| Log | Input Voltage (V) | | | Output Voltage (V) | | | Input frequency (Hz) | Output Load (%) | | | Battery Capacity (%) | UPS temperature (°C) |
|-----------|-------------------|---|---|--------------------|---|---|----------------------|-----------------|---|---|----------------------|----------------------|
| | R | S | T | R | S | T | | R | S | T | | |
| Date time | | | | | | | | | | | | |

<< < 1 2 3 > >>

Maximum number of records: 2048

If the sample is set to 1 minute, the complete time window offers a view of 2048 minute (~1 day and 18 minutes)

18.2. UPS EXTENDED HISTORY LOG

ACCESS FROM SHORT CUT IN TOP BAR 

From this access, the measurements recorded are shown in graphical mode.

For each measurement, NET VISION stores the minimum, average and maximum values during the sample rate (60 minutes by default)

By default, the NET VISION shows the last 30 minutes records. It could be that the NET VISION shows “No Record!” due to the sample rate; in such a case, another period must be chosen to have data in the table.

The time window can be selected by Specific Period or by Day Selection using the calendar function.

Measurements group selection: (all groups are selected by default)

Input Information: includes input voltage per phase and input frequency

Output information: includes output voltage per phase, global output load

UPS information: includes UPS temperature and battery capacity


UPS Extended History Graphic

| <input type="radio"/> | Show | Specific Period ▼ | Records |
|-----------------------|------|-------------------|---------|
| | | 30 minutes | |
| | | 60 minutes | |
| | | 3 hours | |
| | | 6 hours | |
| | | 12 hours | |
| | | 1 day | |

| <input type="radio"/> | Show | dd/mm/yyyy | to | dd/mm/yyyy | Records | Change |
|-----------------------|------|------------|----|------------|---------|--------|
| | | | | | | |

| May 2017 | | | | | | |
|----------|----|----|----|----|----|----|
| Su | Mo | Tu | We | Th | Fr | Sa |
| | 1 | 2 | 3 | 4 | 5 | 6 |
| 7 | 8 | 9 | 10 | 11 | 12 | 13 |
| 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| 21 | 22 | 23 | 24 | 25 | 26 | 27 |
| 28 | 29 | 30 | 31 | | | |

| | | |
|---|--|---|
| <input checked="" type="checkbox"/> Input information | <input checked="" type="checkbox"/> Output information | <input checked="" type="checkbox"/> UPS information |
|---|--|---|

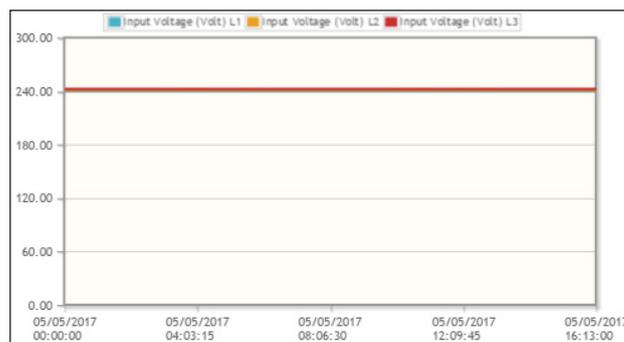

The graphs represent the minimum, average and maximum values of each measurement.

UPS EXTENDED LOG FROM NET VISION MENU ITEM

From this access, the measurements recorded are shown in table mode.
By default, the last 5 records are shown in the table

The time window can also be changed via the calendar
The number of pages available is displayed above and below the table.

UPS Extended Log

from to

Log count per page

<< < 1 2 3 > >>

| Start time | End time | Input Voltage (V) R | | | Input Voltage (V) S | | | Input Voltage (V) T | | | * | * | * |
|------------------------|----------------------------|---------------------|-----|-----|---------------------|-----|-----|---------------------|-----|-----|---|---|---|
| dd/mm/yyyy hh:mm:ss | dd/mm/ yyyy hh:mm:ss | Min | Max | Avg | Min | Max | Avg | Min | Max | Avg | * | * | * |
| | | | | | | | | | | | * | * | * |

... << < 1 2 3 > >>

Maximum number of records: 2048

If the sample is set to 1 hour, the complete time window is a view of 2048 hours (~85 days and 8 hours)

* Same table for:

- Input Frequency
- Output Voltage
- Output Current
- Output Load Rate
- Battery Capacity
- UPS Temperature

18.3. UPS EVENTS LOG

All incoming and out coming alarms detected by NET VISION are stored in the UPS events log.

UPS Events Log

from to

Log count per page

<< < 1 2 3 > >>

| Event Time (dd/mm/yyyy hh:mm:ss) ▼ | Event Level ▼ | Event Description |
|------------------------------------|------------------------------------|---|
| 01/01/1970 00:00:00 | Information Warning Critical | 'has been removed' when the alarm disappears |
| | | |

Clicking on ▼ changes the display order: by date and time or by severity level.

List of UPS event stored by NET VISION

| | | | |
|----------------------------------|-----------------------|----------------------------------|------------------------------|
| UPS Imminent Stop | | UPS Power Off | If function present |
| Overload Alarm | | Wrong Configuration | |
| Ambient Temperature Alarm | | Internal / Communication failure | |
| Transfer locked | | Option Board Alarm | |
| Transfer impossible | | External Input 1 to 4 Alarm | If ADC programmed |
| Insufficient resource | Parallel system only | Unit 1 to 12 General Alarm | Parallel system only |
| Redundancy lost | Parallel system only | UPS connected | |
| Output Short circuit detection | | UPS not connected | |
| Maintenance Alarm | | Power Plugs 1 to 4 ON | If power share plugs present |
| Remote Service Alarm | If function present | Power Plugs 1 to 4 OFF | If power share plugs present |
| General Alarm | | Transfer Load to Bypass | UPS STATUS EVENTS |
| Battery disconnected | If function present | Transfer Load to Inverter | |
| Battery discharged | | Enable eco mode | |
| End of Backup Time / Battery Low | | Disable eco mode | |
| Operating on Battery | | Enable standby mode | |
| Battery Temperature Alarm | If function present | Disable standby mode | |
| Battery Room Alarm | If function present | Alarm Acknowledgement | |
| Battery Test failed | | On maintenance bypass | |
| Battery Alarm | | Auto-test in progress | |
| Rectifier Critical Alarm | Rectifier General Al. | Battery test in progress | |
| Rectifier Preventive Alarm | | Load protected by Inverter | |
| Rectifier Input Supply not OK | | Normal mode | |
| Gen Set Alarm | If function present | UPS in eco mode | |
| Charger Critical Alarm | | Load on bypass | |
| Charger Preventive Alarm | Charger General Al. | Unit Available | |
| Inverter Critical Alarm | | On standby | |
| Inverter Preventive Alarm | Inverter General Al. | Load off | |
| Bypass Critical Alarm | | UPS shut off sent | |
| Bypass Preventive Alarm | Bypass General Al. | Standby schedule sent | |
| Bypass Input Supply not OK | | Eco mode schedule sent | |
| Phase Rotation fault | | | |
| Maintenance Bypass Alarm | | | |
| FAN Failure | | | |

18.4. STS EVENTS LOG

| Level | Description |
|-------|-----------------------------------|
| | STS Source 1 OK |
| C | STS Source 1 Critical |
| W | STS Source 1 Out of tolerance |
| W | STS Source 1 Absent |
| | STS Power Path 1 OK |
| | STS Source 2 OK |
| C | STS Source 2 Critical |
| W | STS Source 2 Out of tolerance |
| W | STS Source 2 Absent |
| | STS Power Path 2 OK |
| | STS Sources perm. Synchronised |
| W | STS Sliding Sources |
| W | STS Sources not Synchronised |
| | STS Sources Instant. Synchronised |
| | STS S1 is preferred source |
| | STS Load on preferred source |
| W | STS Load on alternate source |
| C | STS Load Off |
| W | STS Load on manual bypass 1 |
| W | STS Load on manual bypass 2 |
| | STS Load on S1 |
| | STS Load on S2 |
| W | STS Transfer locked ext. |
| | STS Output OK |
| W | STS Output of tolerance |
| W | STS Output Absent |
| W | STS ESD input active |
| | STS Q41 closed |
| | STS Q42 closed |
| | STS SS1 closed |
| | STS SS2 closed |
| | STS Q30 closed |
| | STS Q51 closed |
| | STS Q52 closed |
| | STS Remote controls enabled |
| W | STS Maintenance alert |
| | STS User mode |

| | |
|---|-----------------------------------|
| C | STS Imminent Stop |
| W | STS Output Isc detection |
| W | STS Manual Bypass Alarm |
| W | STS Overload Alarm |
| C | STS SoLink Alarm |
| W | STS Consecutives Detections Alarm |
| W | STS Switchback Impossible Alarm |
| W | STS Transfer Impossible alarm |
| W | STS Powerpath1 deteriorated |
| W | STS PowerPath1 short circuit |
| C | STS PowerPath1 Failure |
| W | STS PowerPath2 deteriorated |
| W | STS PowerPath2 Sort Circuit |
| C | STS PowerPath1 Failure |
| W | STS Backfeed1 protection open |
| W | STS Backfeed2 protection open |
| W | STS Ambient temperature max |
| W | STS Preventive Alarm |
| W | STS Wrong Configuration |
| W | STS HMI Alarm |
| W | STS Electronics alarm |
| W | STS Custom input alarm |
| W | STS Maintenance alarm |
| W | STS General Alarm |

18.5. NET VISION EVENTS LOG

Any modifications of NET VISION configurations and settings are stored in the NET VISION Events log.

NET VISION Events Log

from to

Log count per page

<< < 1 2 3 > >>

| Event Time (dd/mm/yyyy hh:mm:ss) ▼ | Event Level ▼ | Event Description |
|------------------------------------|------------------------------------|-------------------|
| 01/01/1970 00:00:00 | Information Warning Critical | |

Clicking on ▼ changes the display order: by date and time or by severity level.

List of NET VISION events stored in the log: “???” defines the local IP address

| |
|--|
| Cold boot |
| Warm boot |
| Network link up |
| Network link down |
| NET VISION UPS Agent Restart |
| NET VISION UPS Agent Parameters reset to default |
| Parameters checksum error |
| NET VISION UPS Agent Firmware upgrade |
| History log cleared |
| Extended history log cleared |
| UPS event log cleared |
| NET VISION UPS Agent event log cleared |
| History log interval changed |
| Extended history log interval changed |
| Send shutdown warning to clients |
| Send shutdown request to clients |
| Send UPS shutdown command to UPS |
| Send shutdown cancel to clients |
| Send UPS output on command to UPS |
| UPS communication lost |
| UPS communication restored |
| ??? Time changed by user |
| ??? Time changed by server |
| ??? Time changed by RTC |
| Cannot connect to mail server |
| Incorrect Mail receiver |
| Incorrect Mail server name/IP address |
| Mail send error/unknown error |

| |
|---|
| Mail sent |
| Wake On LAN packet sent to clients |
| All RADIUS servers invalid or connection failed |
| ??? has been changed via ??? by ??? |
| NET VISION UPS Agent event log schema changed. Log has been re-created. |
| UPS event log schema changed. Log has been re-created. |
| History log schema changed. Log has been re-created. |
| Extended history log schema changed. Log has been re-created. |
| Upload configuration successfully via NET VISION Explorer by ??? |
| Upload configuration with ??? error(s) via NET VISION Explorer by ??? |
| Ntp Time Server Connected Failed |
| Mail send error:??? |
| Mail send test |

If an EMD device is connected and enabled

| |
|---|
| EMD Temperature not over high Set point |
| EMD Temperature over high Set point |
| EMD Temperature not under low Set point |
| EMD Temperature under low Set point |
| EMD Humidity not over high Set point |
| EMD Humidity over high Set point |
| EMD Humidity not under low Set point |
| EMD Humidity under low Set point |
| EMD Alarm-1 not active |
| EMD Alarm-1 activated |
| EMD Alarm-2 not active |
| EMD Alarm-2 activated |

18.6. CLEAR & SAVE LOG DATA

This page allows storing all log files to a local computer, to backup files on a local computer or to clear logs on NET VISION.

The log files are stored in CSV format and can be opened with a standard Office programme, such as MS Excel.

Save and Clear log functions are accessible for admin or Read/write account users.

Clear & Save Log Data

| |
|---|
|  UPS History Log |
|  UPS Extended Log |
|  UPS Events Log |
|  NET VISION Events Log |

| Clear Log Data | | |
|---|---------------------------------------|--------------------------------------|
| <input type="radio"/> NET VISION Events Log | <input type="radio"/> UPS Events Log | |
| <input type="radio"/> UPS Extended Log | <input type="radio"/> UPS History Log | <input type="button" value="Clear"/> |

STORED FILES

Click on  to store the file on a local computer

CLEAR LOGS

Select which Log to clear and click on

If the EMD device is connected, the EMD History Log is added as a menu item and added in the logs tables above.

19. APPENDIX

APPENDIX: NET VISION 7 MIB FILE OID DESCRIPTION

| upsIdent(1) | No. | Variables |
|-----------------------------|-----|------------------------------|
| .1.3.6.1.4.1.4555.1.1.7.1.1 | 1 | upsIdentModel |
| | 2 | upsIdentSerialNumber |
| | 3 | upsIdentUserRef |
| | 4 | upsIdentUserLocation |
| | 5 | upsIdentAgentSoftwareVersion |
| | 6 | upsSystemName |
| | 7 | upsSystemContact |
| | 8 | upsSystemLocation |

| upsBattery (2) | No. | Variables | Values |
|-----------------------------|-----|------------------------------|---|
| .1.3.6.1.4.1.4555.1.1.7.1.2 | 1 | upsBatteryStatus | unknown(1). batteryNormal(2). batteryCharging(3). batteryTest(4). batteryDischarging(5). batteryLow(6). batteryDepleted(7). batteryFailure(8). batteryDisconnected(9) |
| | 2 | upsSecondsOnBattery | Seconds |
| | 3 | upsEstimatedMinutesRemaining | Minutes |
| | 4 | upsEstimatedChargeRemaining | % |
| | 5 | upsBatteryVoltage | Format ###.# V |
| | 6 | upsBatteryTemperature | Format ##.# °C (*) |
| | 7 | upsAmbientTemperature | Format ##.# °C |
| | 8 | upsBatteryCurrent | Format # ###.# A |

| upsInput(3) | No. | Variables | Values |
|-----------------------------|-------|------------------------------|-------------------|
| .1.3.6.1.4.1.4555.1.1.7.1.3 | 1 | upsInputNumLines | 3 for 3 phase UPS |
| | 2 | upsInputFrequency | Format ##.# Hz |
| | 3 | upsInputTable/upsInputEntry/ | |
| | 3.1.1 | upsInputLineIndex | |
| | 3.1.2 | upsInputVoltage | ###.# V |
| | 3.1.3 | upsInputCurrent | ###.# A (*) |
| | 3.1.4 | upsInputVoltageMax | ###.# V |
| | 3.1.5 | upsInputVoltageMin | ###.# V |



General rule: In case measurements not managed by UPS the related IOD value is set at -1 or 65535.

| upsOutput(4) | No. | Variables | Values |
|-----------------------------|-------|--------------------------------|--|
| .1.3.6.1.4.1.4555.1.1.7.1.4 | 1 | upsOutputSource | Unknown (1). onMaintenanceBypass(2). onInverter(3). normalMode(4). ecoMode(5). onBypass(6). standby(7). upsOff(8). LineInteractive(9). |
| | 2 | upsOutputFrequency | Format ##.# Hz |
| | 3 | upsOutputNumLines | 3 for 3 phase UPS |
| | 4 | upsOutputTable/upsOutputEntry/ | |
| | 4.1.1 | upsOutputLineIndex | |
| | 4.1.2 | upsOutputVoltage | ###.# V |
| | 4.1.3 | upsOutputCurrent | ###.# A |
| | 4.1.4 | upsOutputPercentLoad | ### % |
| | 4.1.5 | upsOutputKva | ###.# kVA (*) |
| | 4.1.6 | upsOutputKw | ###.# kW (*) |
| | 5 | upsOutputGlobalKva | ###.# kVA (*) |
| | 6 | upsOutputGlobalKw | ###.# kW (*) |
| | 7 | upsOutputLoadRate | ### % |

(*) measurements are set to a value of -1 if the measurement is not managed

| upsBypass(5) | No. | Variables | Values |
|-----------------------------|-----|--------------------------------|-------------------|
| .1.3.6.1.4.1.4555.1.1.7.1.5 | 1 | upsBypassFrequency | Format ##.# Hz |
| | 2 | upsBypassNumLines | 3 for 3 phase UPS |
| | 3 | upsBypassTable/upsBypassEntry/ | |
| | 3.1 | upsBypassLineIndex | |
| | 3.2 | upsBypassVoltage | ###.# V |
| | 3.3 | upsBypassCurrent | ###.# A (*) |

| upsAlarm(6) | No. | Variables | JBUSP | VU-MAP |
|-----------------------------|------------------------|--------------------------------|-----------|--------|
| .1.3.6.1.4.1.4555.1.1.7.1.6 | 1 | upsAlarmsPresent | | |
| | 2 | upsAlarmTable/upsAlarmEntry/ | | |
| | 2.1.1 | upsAlarmId | | |
| | 2.1.2 | upsAlarmDescr | | |
| | 2.1.3 | upsAlarmTime | | |
| | 2.1.4 | upsAlarmExtDes | | |
| | 3 | upsWellKnownAlarms/ | | |
| | 3.1 | upsAlarmImminentStop | A31 | A000 |
| | 3.2 | upsAlarmOverload | A02 | A001 |
| | 3.3 | upsAlarmTemperature | A07 | A002 |
| | 3.4 | upsAlarmTransferLock | A45 | A003 |
| | 3.5 | upsAlarmAutoTransferImpossible | A46 | A004 |
| | 3.6 | upsAlarmInsufficientResources | A50 | A005 |
| | 3.7 | upsAlarmRedundancyLost | A43 | A006 |
| | 3.8 | upsAlarmOutputShortCircuit | A09 | A007 |
| | 3.9 | upsAlarmMaintenance | A44 | A012 |
| | 3.10 | upsAlarmRemoteService | A42 | A013 |
| | 3.11 | upsAlarmGeneralFault | A00 | A015 |
| | 3.12 | upsAlarmBatteryCircuitOpen | A59 | A016 |
| | 3.13 | upsAlarmBatteryDischarged | S16 A49 | A017 |
| | 3.14 | upsAlarmLowBattery | S15 | A018 |
| | 3.15 | upsAlarmOnBattery | S05 | A019 |
| | 3.16 | upsAlarmBatteryTemperature | 0 | A020 |
| | 3.17 | upsAlarmBatteryRoom | A47 | A021 |
| | 3.18 | upsAlarmBatteryTest | S14 | A022 |
| | 3.19 | upsAlarmBatteryFault | A01 | A027 |
| | 3.20 | upsAlarmRectifierFault | A52 | A032 |
| | 3.21 | upsAlarmRectifierAlarm | A23 | A033 |
| | 3.22 | upsAlarmRecInputBad | A05 | A035 |
| | 3.23 | upsAlarmGenSetGeneral | A56 | A036 |
| | 3.24 | upsAlarmBatteryChargerFault | A10 | A037 |
| | 3.25 | upsAlarmBatteryChargerAlarm | A26 | A038 |
| | 3.26 | upsAlarmInverterFault | A54 | A040 |
| | 3.27 | upsAlarmInverterAlarm | A25 | A041 |
| | 3.28 | upsAlarmBypassFault | A62 | A048 |
| | 3.29 | upsAlarmBypassAlarm | A29 | A049 |
| | 3.30 | upsAlarmByplInputBad | A06 | A050 |
| | 3.31 | upsAlarmPhaseRotationFault | A61 | A051 |
| | 3.32 | upsAlarmFansFailure | A60 | A054 |
| | 3.33 | upsAlarmMaintenanceBypass | A48 | A056 |
| | 3.34 | upsAlarmUPSPowerOffActive | A58 | A059 |
| | 3.35 | upsAlarmWrongConfiguration | A20 | A060 |
| | 3.36 | upsAlarmInternalFailure | A19 | A061 |
| | 3.37 | upsAlarmOptionalBoards | A51 | A062 |
| | 3.38 | upsAlarmExternalAlarm1 | A38 | A064 |
| 3.39 | upsAlarmExternalAlarm2 | A39 | A065 | |
| 3.40 | upsAlarmExternalAlarm3 | A40 | A066 | |
| 3.41 | upsAlarmExternalAlarm4 | A41 | A067 | |
| 3.42 | upsAlarmModule1Alarm | A32 | A096 | |
| 3.43 | upsAlarmModule2Alarm | A33 | A097 | |
| 3.44 | upsAlarmModule3Alarm | A34 | A098 | |
| 3.45 | upsAlarmModule4Alarm | A35 | A099 | |

| | | | | |
|-----------------------------|-----------------------|---------------------------|---------------|------------|
| .1.3.6.1.4.1.4555.1.1.7.1.6 | 3.46 | upsAlarmModule5Alarm | A36 | A100 |
| | 3.47 | upsAlarmModule6Alarm | A37 | A101 |
| | 3.48 | upsAlarmModule7Alarm | 0 | A102 |
| | 3.49 | upsAlarmModule8Alarm | 0 | A103 |
| | 3.50 | upsAlarmModule9Alarm | 0 | A104 |
| | 3.51 | upsAlarmModule10Alarm | 0 | A105 |
| | 3.52 | upsAlarmModule11Alarm | 0 | A106 |
| | 3.53 | upsAlarmModule12Alarm | 0 | A107 |
| | 3.54 | upsAlarmAutoTestRunning | 0 | S030 |
| | 3.55 | upsAlarmOnBypass | S04&!S07 | S002&!S007 |
| | 3.56 | upsAlarmUpsOutputOff | !S03&!S04 | S004 |
| | 3.57 | upsAlarmUpsSystemOff | !S02&!S01&S04 | |
| | 3.58 | upsAlarmCommunicationLost | | |
| | 3.59 | upsAlarmShutdownPending | | |
| | 3.60 | upsAlarmShutdownRequested | | |
| | 3.61 | upsAlarmShutdownImminent | | |
| 3.62 | upsAlarmAwaitingPower | | | |

| upsControl(7) | No. | Variables | Values |
|-----------------------------|--------------------------------|-----------------------------------|--------------------|
| .1.3.6.1.4.1.4555.1.1.7.1.7 | 1 | upsControlStatusControl* | upsStandbyOn (1). |
| | | | upsStandbyOff (2). |
| | | | upsEcoMode (3). |
| | | | upsNormalMode (4). |
| | | | upsAlarmReset (5). |
| | | | upsOnBypass (6). |
| | | | upsOnInverter (7) |
| | 2 | upsShutdownDelay | |
| | 3 | upsTurnOffAfterShutdown | |
| | 4 | upsControlShutdownParametersTable | |
| | 4.1.1 | upsControlEventDescr | |
| | 4.1.2 | upsControlEventStatus | |
| | 4.1.3 | upsControlDelay | |
| | 4.1.4 | upsControlFirstWarning | |
| | 4.1.5 | upsControlWarningInterval | |
| | 5 | upsControlWeeklyScheduleTable | |
| | 5.1.1 | upsControlWeeklyIndex | |
| | 5.1.2 | upsControlWeeklyShutdownDay | |
| | 5.1.3 | upsControlWeeklyShutdownTime | |
| | 5.1.4 | upsControlWeeklyRestartDay | |
| | 5.1.5 | upsControlWeeklyRestartTime | |
| | 6 | upsControlSpecialScheduleEntry | |
| | 6.1.1 | upsControlSpecialIndex | |
| | 6.1.2 | upsControlSpecialShutdownDay | |
| | 6.1.3 | upsControlSpecialShutdownTime | |
| | 6.1.4 | upsControlSpecialRestartDay | |
| 6.1.5 | upsControlSpecialRestartTime | | |
| 7 | upsControlEcoModeScheduleTable | | |
| 7.1.1 | upsControlEcoModeIndex | | |
| 7.1.2 | upsControlEcoModeStartDay | | |
| 7.1.3 | upsControlEcoModeStartTime | | |
| 7.1.4 | upsControlEcoModeEndDay | | |
| 7.1.5 | upsControlEcoModeEndTime | | |

* Control executed only if remote control enabled

| upsConfig(8) | No. | Variables |
|-----------------------------|-------|---------------------------------|
| .1.3.6.1.4.1.4555.1.1.7.1.8 | 1 | upsConfigNomKva |
| | 2 | upsConfigNbrUnit |
| | 3 | upsConfigUnitKva |
| | 4 | upsConfigRemoteCtrl |
| | 5 | upsDevicesTable/upsDevicesEntry |
| | 5.1.1 | indexOfDevice |
| | 5.1.2 | addrOfDevice |
| | 5.1.3 | nameOfDevice |
| | 5.1.4 | timeOfConnection |
| | 5.1.5 | statusOfConnection |
| | 5.1.6 | severityOfConnection |

| upsAgent(9) | No. | Variables |
|-----------------------------|---|---|
| .1.3.6.1.4.1.4555.1.1.7.1.9 | 1 | upsAgentIpAddress |
| | 2 | upsAgentGateway |
| | 3 | upsAgentSubnetMask |
| | 4 | upsAgentDate |
| | 5 | upsAgentTime |
| | 6 | upsAgentNtpTimeServer |
| | 7 | upsAgentNtpTimeZone |
| | 8 | upsAgentHistoryLogFrequency |
| | 9 | upsAgentExtHistoryLogFrequency |
| | 10 | upsAgentPollRate |
| | 11 | upsAgentBaudRate |
| | 12 | upsAgentDhcpStatus |
| | 13 | upsAgentTelnetStatus |
| | 14 | upsAgentTftpStatus |
| | 15 | upsAgentResetToDefault |
| | 16 | upsAgentRestart |
| | 17 | upsAgentClearAgentLog |
| | 18 | upsAgentClearEventLog |
| | 19 | upsAgentClearExtHistoryLog |
| | 20 | upsAgentClearHistoryLog |
| | 21 | upsAgentTrapsReceiversTable/upsAgentTrapsReceiversEntry |
| | 21.1.1 | trapsIndex |
| | 21.1.2 | trapsReceiverAddr |
| 21.1.3 | receiverCommunityString | |
| 21.1.4 | receiverNmstype | |
| 22 | upsAgentAccessControlTable/upsAgentAccessControlEntry | |
| 23 | upsAgentMibVersion | |
| 50 | upsAgentTrapString | |

| emdStatus(10) | No. | Variables |
|------------------------------|-----|----------------------|
| .1.3.6.1.4.1.4555.1.1.7.1.10 | 1 | emdStatusTemperature |
| | 2 | emdStatusHumidity |
| | 3 | emdStatusIn1Active |
| | 4 | emdStatusIn2Active |

APPENDIX: NET VISION 7 TRAP DESCRIPTION

| upsTraps(2) | No. | Variables | Level | JBUSP | VU-MAP |
|--|----------|---------------------------------|-------------|------------------------|----------------|
| Sent if TRAP Filter enabled | 1 | upsTrapOnBattery | Critical | S05 | A019 & S000 |
| | 2 | upsTrapTestCompleted | Not managed | | |
| | 3 | upsTrapAlarmEntryAdded | Warning | upsWellKnownAlarms OID | |
| | 4 | upsTrapAlarmEntryRemoved | Information | upsWellKnownAlarms OID | |
| TRAP send to Remote View Pro monitoring SW | 5 | upsTrapImminentStop | Critical | A31 | A000 |
| | 6 | upsTrapOverload | Warning | A02 | A001 |
| | 7 | upsTrapRedundancyLost | Warning | A43 | A006 |
| | 8 | upsTrapBatteryCircuitOpen | Critical | A59 | A016 |
| | 9 | upsTrapBatteryDischarged | Critical | S16 | A017 |
| | 10 | upsTrapBatteryLow | Critical | S15 | A018 |
| | 11 | upsTrapBatteryAlarm | Warning | A01 | A027 |
| | 12 | upsTrapUpsCriticalAlarm | Critical | A52 A54 A62 | A032 A040 A048 |
| | 13 | upsTrapLoadOFF | Critical | !S03&!S04 | S004 |
| | 14 | upsTrapCommunicationLost | Critical | NET VISION event | |
| | 15 | upsTrapOnBatteryPower | Warning | S05 | A019 & S000 |
| | 16 | upsTrapBatteryTestfailed | Warning | S14 | A022 |
| | 17 | upsTrapTemperatureAlarm | Warning | A07 | A020 |
| | 18 | upsTrapOnBypass | Warning | S04&!S06 | S002 |
| | 19 | upsTrapUpsPreventiveAlarm | Warning | A00 | A015 |
| | 20 | upsTrapShutdownWarning | Warning | Shutdown agent | |
| | 21 | upsTrapShutdownrequest | Warning | | |
| | 22 | upsTrapUpsNormal | Information | S03 | S000 S001 |
| | 23 | upsTrapPowerRestored | Information | S00 | S048 |
| | 24 | upsTrapAlarmCancelled | Information | !A15 | !A015 |
| | 25 | upsTrapComEstablished | Information | Shutdown agent | |
| | 26 | upsTrapShutdwonCancelled | Information | | |
| | 27 | upsTrapAgentRestarting | Information | NET VISION event | |
| | 28 | upsTrapEmdTempLow | Critical | EMD events | |
| | 29 | upsTrapEmdTempNotLow | Information | | |
| | 30 | upsTrapEmdTempHigh | Critical | | |
| | 31 | upsTrapEmdTempNotHigh | Information | | |
| | 32 | upsTrapEmdHumidityLow | Critical | | |
| | 33 | upsTrapEmdHumidityNotLow | Information | | |
| | 34 | upsTrapEmdHumidityHigh | Critical | | |
| | 35 | upsTrapEmdHumidityNotHigh | Information | | |
| | 36 | upsTrapEmdFirstInputActive | Critical | | |
| | 37 | upsTrapEmdFirstInputRestored | Information | | |
| | 38 | upsTrapEmdSecondInputActive | Critical | | |
| | 39 | upsTrapEmdSecondInputRestored | Information | | |
| | 40 | TRAP TEST | Information | | Manual test |

TRAP1 to TRAP4 are managed as defined by RFC1628.

TRAP1: sent every minute with remaining backup time and running time on battery as parameters.

TRAP3: sent every time a new alarm is added to the list.

The alarm index sent as parameters follows the well-known alarm index OID.

TRAP4: sent every time when an alarm is removed from alarm list. The alarm index is the same as sent with TRAP3.

APPENDIX: RFC1628 WELLKNOWALARMS OID DESCRIPTION

Those alarms OID and description are reported in TRAP 3 (added) and TRAP 4 (removed)

| OID | .1.3.6.1.2.1.33.1.6.3 | JBUSP | VU-MAP | |
|-----|------------------------------|--------------------|---------------------|---------------------|
| .1 | upsAlarmBatteryBad | A01 or A47 | A027 or A20 or A21 | |
| .2 | upsAlarmOnBattery | S05 | A019 & S000 | |
| .3 | upsAlarmLowBattery | S15 | A018 | |
| .4 | upsAlarmDepletedBattery | S16 A49 | A017 | |
| .5 | upsAlarmTempBad | A07 | A002 | |
| .6 | upsAlarmInputBad | A05 | A035 | |
| .7 | upsAlarmOutputBad | | | Not available |
| .8 | upsAlarmOutputOverload | A02 | A001 | |
| .9 | upsAlarmOnBypass | S04&!S07 | S002&!S006 | |
| .10 | upsAlarmBypassBad | A29 | A049 | Critical alarm |
| .11 | upsAlarmOutputOffAsRequested | | | Not available |
| .12 | upsAlarmUpsOffAsRequested | | | Not available |
| .13 | upsAlarmChargerFailed | A26 | A038 | |
| .14 | upsAlarmUpsOutputOff | !S03&!S04 | S004 | |
| .15 | upsAlarmUpsSystemOff | !S02 & !S03 & !S04 | !S049 & !S52 & !S57 | |
| .16 | upsAlarmFanFailure | A60 | A054 | |
| .17 | upsAlarmFuseFailure | | | Not available |
| .18 | upsAlarmGeneralFault | A00 | A015 | |
| .19 | upsAlarmDiagnosticTestFailed | S14 | A022 | Battery test failed |
| .20 | upsAlarmCommunicationsLost | | | NV alarm |
| .21 | upsAlarmAwaitingPower | | | Shutdown agent |
| .22 | upsAlarmShutdownPending | | | Shutdown agent |
| .23 | upsAlarmShutdownImminent | | | Shutdown agent |
| .24 | upsAlarmTestInProgress | S10 | A034 | Battery test |

APPENDIX: STS MIB FILE OID DESCRIPTION

| stsObjects(1) | No. | Variables |
|---------------|-----|------------------------------|
| stsIdent(1) | 1 | stsIdentModel |
| | 2 | stsIdentSerialNumber |
| | 3 | stsIdentFirmwareVersion |
| | 4 | stsIdentAgentSoftwareVersion |
| | 5 | stsIdentUserRef |
| | 6 | stsIdentUserLocation |
| | 7 | stsSystemName |
| | 8 | stsSystemContact |
| | 9 | stsSystemLocation |

| stsObjects(1) | No. | Variables |
|---------------|-----|---|
| stsSource1(2) | 1 | stsSource1Status |
| | 2 | unknown(1), source1OK(2), source1Critical(3), source1OutTo(4), source1Absent(5) |
| | 3 | stsSource1Preferred |
| | 4 | no(1), yes(2) |
| | 5 | stsSource1Frequency |
| | 6 | stsSource1NumLines |
| | 7 | stsSource1Table |
| | 8 | stsSource1Entry |
| | 9 | stsSource1Voltage |

| stsObjects(1) | No. | Variables |
|---------------|-----|---|
| stsSource2(3) | 1 | stsSource2Status |
| | 2 | unknown(1), source2OK(2), source2Critical(3), source2OutTo(4), source2Absent(5) |
| | 3 | stsSource2Preferred |
| | 4 | no(1), yes(2) |
| | 5 | stsSource2Frequency |
| | 6 | stsSource2NumLines |
| | 7 | stsSource2Table |
| | 8 | stsSource2Entry |
| | 9 | stsSource2Voltage |

| stsObjects(1) | No. | Variables |
|---------------|-----|--|
| stsSource(4) | 1 | stsSourceInteraction |
| | 2 | unknown(1), synchro(2), sliding(3), asynchro(4) |

| stsObjects(1) | No. | Variables |
|---------------|-----|--|
| stsOutput(5) | 1 | stsOutputLoadStatus |
| | 2 | unknown(1), outputLoadOnPreferredSource(2), outputLoadOnAlternateSource(3), outputLoadOFF(4), outputLoadOnMBP1(5), outputLoadOnMBP2(6) stsOutputStatus unknown(1), outputOnSwitch1(2), outputOnSwitch2(3), outputOFF(4) stsOutputFrequency stsOutputLoadRate stsOutputNumLines stsOutputTable stsOutputEntry stsOutputLineIndex INTEGER, stsOutputVoltage INTEGER, stsOutputCurrent INTEGER, stsOutputkVA INTEGER, stsOutputkW INTEGER, stsOutputCrestFactor INTEGER, stsOutputPowerFactor INTEGER |

| stsObjects(1) | No. | Variables |
|---------------|-----|--|
| alarms(6) | 1 | stsWellKnownAlarms |
| | 2 | stsImminentStop stsTransferImpossible stsConsecutiveDetection stsOverload stsString1Alarm stsString2Alarm stsPreventiveMaintenance stsGeneralAlarm stsCustomInputAlarm |

APPENDIX: STS TRAP DESCRIPTION

| | |
|--------------------------------|-------------|
| stsTrapImminentStop | SEVERE |
| stsTrapOverload | SEVERE |
| stsTrapSwitchOnPreferredSource | INFORMATION |
| stsTrapSwitchOnAlternateSource | WARNING |
| stsTrapSource1PreferredSource | INFORMATION |
| stsTrapOutputLoadOFF | SEVERE |
| stsTrapGeneralAlarm | WARNING |
| stsTrapAlarmCancelled | INFORMATION |

APPENDIX: MODBUS TCP ACCESS

MODBUS TCP PROTOCOL

NET VISION follows IDA frame format.

MODBUS write functions 0x06 and 0x10 are not allowed.

FOR JBUSP UPS (NETYS / ITYS / MODULYS / MASTERYS MC – BC – GP – IP+ / DELPHYS MP – MX – BC – GP – XTEND)

| Data | Address | Words | Access | Type | Acronym |
|---------------|---------------|-----------|--------|----------------|---------|
| STATUS | 0x1020 | 4 | READ | bit | S00-S63 |
| ALARMS | 0x1040 | 4 | READ | bit | A00-A63 |
| MEASUREMENTS | 0x1060 | 48 | READ | word | M00-M47 |
| IDENTIFIERS | 0x1000 | 12 | READ | Values / ASCII | I00_I11 |
| CONFIGURATION | 0x10E0 | 16 | READ | Values | T00-T15 |

Please refer to Appendix JBUSP UPS MODBUS TABLE

FOR VU-MAP UPS (MASTERYS BC+/GP4 / MODULYS XS - GP 2.0 - XL / DELPHYS BC - GP - XTEND with touchscreen panel)

| Data | Address | Words | Access | Type | Acronym |
|----------------|---------------|---------------|--------|-------|-------------|
| STATUS | 0x0030 | 6+2(*) | READ | bit | S000-S127 |
| ALARMS | 0x0038 | 6+2(*) | READ | bit | A000-A127 |
| MEASUREMENTS | 0x0040 | 80 | READ | word | M000 – M079 |
| CONFIGURATIONS | 0x0001 | 15 | READ | word | T001 – T015 |
| SERIAL NUMBER | 0x0010 | 10 | READ | ASCII | R000 |
| UPS REFERENCE | 0x001A | 10 | READ | ASCII | R001 |

(*) 2 additional words for units status and alarms synthesis for parallel systems UPS

Please refer to Appendix VU-MAP UPS MODBUS TABLE

NET VISION allows reading part of the table or single word.

APPENDIX: VU-MAP MODBUS TABLE

List of status managed by the UPS. This table is accessible on MODBUS TCP by requesting 8 words to address 0x0030.

Reading the 4 first words of status table are enough to monitor single UPS, as the next words are linked to parallel system data.

| Address | level | Acronym | Description | Address | level | Acronym | Description |
|---------|-------|-------------------|--------------------------------------|---------|-------------------|---------|-------------------------------------|
| 0x0030 | I | S000 | Load protected by Inverter | 0x0034 | | S064 | Card in Slot 1 present |
| | | S001 | | | | S065 | Card in Slot 2 present |
| | W | S002 | Load supplied by automatic Bypass | | | S066 | Card in Slot 3 present |
| | W | S003 | Load supplied by Maintenance Bypass | | | S067 | Card in Slot 4 present |
| | C | S004 | Load OFF | | | S068 | Card in Slot 5 present |
| | | S005 | | | | S069 | Card in Slot 6 present |
| | I | S006 | UPS in eco mode | | | S070 | |
| | I | S007 | UPS in energy saver | | | S071 | |
| | | S008 | Heat Run test | | | S072 | Programmable S072 |
| | W | S009 | In Service mode | | | S073 | Programmable S073 |
| | | S010 | Line-interactive mode | | | S074 | Programmable S074 |
| | I | S011 | Operating | | | S075 | Programmable S075 |
| | I | S012 | Available | | | S076 | Programmable S076 |
| | W | S013 | on Standby | | | S077 | Programmable S077 |
| | I | S014 | Unit isolated | | | S078 | Programmable S078 |
| W | S015 | Maintenance Alert | | S079 | Programmable S079 | | |
| 0x0031 | | S016 | Output Breaker closed | 0x0035 | | S080 | Module Insertion Procedure |
| | | S017 | Maintenance Bypass closed | | | S081 | Module Extraction Procedure |
| | | S018 | External Maintenance Bypass closed | | | S082 | UPS in line interactive operation |
| | | S019 | External Output Breaker closed | | | S083 | Battery circuit open |
| | | S020 | Single phase Input supply | | | S084 | Backfeed protection open |
| | | S021 | Rectifier Input Breaker | | | S085 | Bypass Locked |
| | | S022 | Bypass Input Breaker | | | S086 | Adv GEN SET Static mode – Soft Load |
| | I | S023 | Gen set ON | | | S087 | Derating charge for LIB |
| | | S024 | Busbar 1 closed | | | S088 | FREE |
| | | S025 | Busbar 2 closed | | | S089 | |
| | I | S026 | Automatic Start in progress | | | S090 | |
| | W | S027 | Maintenance Bypass proc. in progress | | | S091 | |
| | W | S028 | UPS OFF procedure in progress | | | S092 | |
| | | S029 | | | | S093 | |
| | I | S030 | Auto-test Procedure in progress | | | S094 | |
| | I | S031 | Alarm Acknowledgement requested | | | S095 | |

| Address | level | Acronym | Description | Address | level | Acronym | Description |
|---------|-------|--------------------------|--------------------------------------|---------|------------------------|---------|-------------------|
| 0x0032 | I | S032 | Battery OK | 0x0036 | | S096 | [1] is operating |
| | I | S033 | Battery charged | | | S097 | [2] is operating |
| | I | S034 | Battery Test in progress | | | S098 | [3] is operating |
| | I | S035 | Battery Test programmed | | | S099 | [4] is operating |
| | I | S036 | Battery charging | | | S100 | [5] is operating |
| | W | S037 | Battery Test interrupted | | | S101 | [6] is operating |
| | I | S038 | Floating Voltage reduced | | | S102 | [7] is operating |
| | I | S039 | Battery discharge to Input | | | S103 | [8] is operating |
| | I | S040 | UPS backup system connected | | | S104 | [9] is operating |
| | I | S041 | UPS backup system charged / ready | | | S105 | [10] is operating |
| | I | S042 | UPS backup system charging | | | S106 | [11] is operating |
| | | S043 | | | | S107 | [12] is operating |
| | | S044 | | | | S108 | [13] is operating |
| | | S045 | | | | S109 | [14] is operating |
| | S046 | | | S110 | [15] is operating | | |
| | S047 | | | S111 | | | |
| 0x0033 | I | S048 | Rectifier Input Supply present | 0x0037 | | S112 | [1] is available |
| | I | S049 | Rectifier ON | | | S113 | [2] is available |
| | I | S050 | Charger ON | | | S114 | [3] is available |
| | | S051 | Rectifier is starting | | | S115 | [4] is available |
| | I | S052 | Inverter ON | | | S116 | [5] is available |
| | I | S053 | Inverter Switch ON | | | S117 | [6] is available |
| | | S054 | | | | S118 | [7] is available |
| | | S055 | Bypass output breaker closed | | | S119 | [8] is available |
| | I | S056 | Bypass Input Supply present | | | S120 | [9] is available |
| | I | S057 | Bypass Static Switch closed | | | S121 | [10] is available |
| | I | S058 | Bypass Input & Inverter synchronised | | | S122 | [11] is available |
| | I | S059 | ACS external synchronisation | | | S123 | [12] is available |
| | | S060 | PowerShare Plug 1 closed | | | S124 | [13] is available |
| | | S061 | PowerShare Plug 2 closed | | | S125 | [14] is available |
| | S062 | PowerShare Plug 3 closed | | S126 | [15] is available | | |
| | S063 | PowerShare Plug 4 closed | | S127 | Data no longer updated | | |

List of alarms managed by the UPS. This table is accessible on MODBUS TCP by requesting 8 words to address 0x0038.

Reading the 4 first words of alarms table are enough to monitor single UPS, as the next words are linked to parallel system data.

| Address | level | Acronym | Description | Address | level | Acronym | Description |
|---------|-------|---------------|----------------------------------|---------|-------|---------|---------------------------------------|
| 0x0038 | C | A000 | Imminent Stop | 0x003C | | A064 | Programmable A064 |
| | W | A001 | Overload Alarm | | | A065 | Programmable A065 |
| | W | A002 | Ambient Temperature Alarm | | | A066 | Programmable A066 |
| | W | A003 | Transfer locked | | | A067 | Programmable A067 |
| | W | A004 | Transfer impossible | | | A068 | Programmable A068 |
| | W | A005 | Insufficient Resources | | | A069 | Programmable A069 |
| | W | A006 | Redundancy lost | | | A070 | Programmable A070 |
| | W | A007 | Output short circuit detection | | | A071 | Programmable A071 |
| | | A008 | eco mode disabled by UPS | | | A072 | Line-Interactive mode disabled by UPS |
| | | A009 | energy saver disabled by UPS | | | A073 | Features using batteries unavailable |
| | | A010 | On Bypass for 1 hour | | | A074 | FREE |
| | | A011 | Bypass output breaker closed | | | A075 | |
| | W | A012 | Maintenance Alarm | | | A076 | |
| | W | A013 | Remote Service Alarm | | | A077 | |
| | | A014 | Remote Service Preventive Alarm | | | A078 | |
| W | A015 | General Alarm | | A079 | | | |
| 0x0039 | C | A016 | Battery disconnected | 0x003D | | A080 | Customer Installation Overload |
| | C | A017 | Battery discharged | | | A081 | FREE |
| | W | A018 | End of Backup Time | | | A082 | |
| | W | A019 | Operating on Battery | | | A083 | |
| | W | A020 | Battery Temperature Alarm | | | A084 | |
| | W | A021 | Battery Room Alarm | | | A085 | |
| | W | A022 | Battery Test failed | | | A086 | |
| | | A023 | BMS has detected a weak String | | | A087 | |
| | | A024 | At least one Battery String open | | | A088 | |
| | | A025 | On Battery with Mains OK | | | A089 | |
| | | A026 | Insulation fault | | | A090 | |
| | W | A027 | Battery Alarm | | | A091 | |
| | | A028 | Battery preventive alarm* | | | A092 | |
| | | A029 | UPS Backup Critical Alarm | | | A093 | |
| | | A030 | UPS Backup preventive alarm | | | A094 | |
| | | A031 | UPS Backup not OK | | | A095 | |

* available only if the function is managed by the UPS

| Address | level | Acronym | Description | Address | level | Acronym | Description |
|---------|-------|---------------------------------|----------------------------------|---------|-------|---------|-----------------------|
| 0x003A | C | A032 | Rectifier Critical Alarm | 0x003E | W | A096 | [1] in general Alarm |
| | W | A033 | Rectifier Preventive Alarm | | W | A097 | [2] in General Alarm |
| | | A034 | Rectifier Redundancy Alarm | | W | A098 | [3] in General Alarm |
| | | A035 | Rectifier Input Supply not OK | | W | A099 | [4] in General Alarm |
| | W | A036 | Gen Set Alarm | | W | A100 | [5] in General Alarm |
| | C | A037 | Charger Critical Alarm | | W | A101 | [6] in General Alarm |
| | W | A038 | Charger Preventive Alarm | | W | A102 | [7] in General Alarm |
| | | A039 | Battery charge interrupted | | W | A103 | [8] in General Alarm |
| | C | A040 | Inverter Critical Alarm | | W | A104 | [9] in General Alarm |
| | W | A041 | Inverter Preventive Alarm | | W | A105 | [10] in General Alarm |
| | | A042 | Inverter Redundancy Alarm | | W | A106 | [11] in General Alarm |
| | | A043 | Redundancy Imminent Lost | | W | A107 | [12] in General Alarm |
| | | A044 | Consumable Alarm | | | A108 | [13] in General Alarm |
| | | A045 | Unit Redondancy lost | | | A109 | [14] in General Alarm |
| | | A046 | Parallel board Critical Alarm | | | A110 | [15] in General Alarm |
| | A047 | Parallel board Preventive Alarm | | A111 | | | |
| 0x003B | C | A048 | Bypass Critical Alarm | 0x003F | C | A112 | [1] in Imminent STOP |
| | W | A049 | Bypass Preventive Alarm | | C | A113 | [2] in Imminent STOP |
| | W | A050 | Bypass Input Supply not OK | | C | A114 | [3] in Imminent STOP |
| | W | A051 | Phase Rotation fault | | C | A115 | [4] in Imminent STOP |
| | | A052 | Bypass Back-feed detection | | C | A116 | [5] in Imminent STOP |
| | | A053 | Transformer Alarm | | C | A117 | [6] in Imminent STOP |
| | W | A054 | FAN Failure | | C | A118 | [7] in Imminent STOP |
| | | A055 | ACS Alarm | | C | A119 | [8] in Imminent STOP |
| | W | A056 | Maintenance Bypass Alarm | | C | A120 | [9] in Imminent STOP |
| | | A057 | Internal Back-feed detection | | C | A121 | [10] in Imminent STOP |
| | | A058 | Battery monitoring Alarm | | C | A122 | [11] in Imminent STOP |
| | C | A059 | UPS Power OFF | | C | A123 | [12] in Imminent STOP |
| | W | A060 | Wrong Configuration | | | A124 | [13] in Imminent STOP |
| | W | A061 | Internal / Communication failure | | | A125 | [14] in Imminent STOP |
| | W | A062 | Option Board Alarm | | | A126 | [15] in Imminent STOP |
| | A063 | Spare part not | | A127 | | | |

Alarms without a level indication are not managed by NET VISION.

List of measurements managed by the UPS.

This table is accessible on MODBUS TCP by requesting up to 80 words to address 0x0040.

T014 (0x000E) in the Configurations table defines if value of measurements are *10.

T014=0 no decimal, T014=1 value with 1 decimal (501 = 50.1).

| Address | Acronym | Description | Unit | T014=0 | T014=1 |
|---------|---------|--------------------------------|------|--------|---------|
| 0x0040 | M000 | Output load rate | % | ### | ### |
| 0x0041 | M001 | Output load rate L1 | % | ### | ### |
| 0x0042 | M002 | Output load rate L2 | % | ### | ### |
| 0x0043 | M003 | Output load rate L3 | % | ### | ### |
| 0x0044 | M004 | Output Apparent Power | kVA | ## ### | # ###.# |
| 0x0045 | M005 | Output Active Power | kW | ## ### | # ###.# |
| 0x0046 | M006 | Output current L1 | A | ## ### | # ###.# |
| 0x0047 | M007 | Output current L2 | A | ## ### | # ###.# |
| 0x0048 | M008 | Output current L3 | A | ## ### | # ###.# |
| 0x0049 | M009 | Output neutral current | A | ## ### | # ###.# |
| 0x004A | M010 | Output voltage L1 | V | ### | ### |
| 0x004B | M011 | Output voltage L2 | V | ### | ### |
| 0x004C | M012 | Output voltage L3 | V | ### | ### |
| 0x004D | M013 | Output frequency | Hz | ##.# | ##.# |
| 0x004E | M014 | Output Crest Factor | | .# | .# |
| 0x004F | M015 | Ambient Temperature | °C | ##.# | ##.# |
| 0x0050 | M016 | Battery voltage string + | V | # ### | ###.# |
| 0x0051 | M017 | Battery voltage string - | V | # ### | ###.# |
| 0x0052 | M018 | Battery current string + | A | ## ### | # ###.# |
| 0x0053 | M019 | Battery current string - | A | ## ### | # ###.# |
| 0x0054 | M020 | | | | |
| 0x0055 | M021 | | | | |
| 0x0056 | M022 | Battery capacity | % | ### | ### |
| 0x0057 | M023 | Battery capacity | Ah | ## ### | # ###.# |
| 0x0058 | M024 | Remaining Battery backup time | Mn | ### | ### |
| 0x0059 | M025 | Time on battery | s | ### | ### |
| 0x005A | M026 | Battery temperature | °C | ##.# | ##.# |
| 0x005B | M027 | Battery temperature average | °C | ##.# | ##.# |
| 0x005C | M028 | DC Storage voltage | V | # ### | ###.# |
| 0x005D | M029 | DC Storage temperature | °C | ##.# | ##.# |
| 0x005E | M030 | | | | |
| 0x005F | M031 | | | | |
| 0x0060 | M032 | Rect. input supply volt. L1 | V | ### | ### |
| 0x0061 | M033 | Rect. input supply volt. L2 | V | ### | ### |
| 0x0062 | M034 | Rect. input supply volt. L3 | V | ### | ### |
| 0x0063 | M035 | Rect. input supply freq. | Hz | ##.# | ##.# |
| 0x0064 | M036 | Rect. input supply volt. U12 | V | ### | ### |
| 0x0065 | M037 | Rect. input supply volt. U23 | V | ### | ### |
| 0x0066 | M038 | Rect. input supply volt. U31 | V | ### | ### |
| 0x0067 | M039 | Bypass input supply voltage L1 | V | ### | ### |

| Address | Acronym | Description | Unit | T014=0 | T014=1 |
|---------|---------|--------------------------------|------|--------|---------|
| 0x0068 | M040 | Bypass input supply voltage L2 | V | ### | ### |
| 0x0069 | M041 | Bypass input supply voltage L3 | V | ### | ### |
| 0x006A | M042 | Bypass input supply freq. | Hz | ##.# | ##.# |
| 0x006B | M043 | Bypass input supply volt U12 | V | ### | ### |
| 0x006C | M044 | Bypass input supply volt. U23 | V | ### | ### |
| 0x006D | M045 | Bypass input supply volt. U31 | V | ### | ### |
| 0x006E | M046 | | | | |
| 0x006F | M047 | | | | |
| 0x0070 | M048 | Output Apparent P. L1 | kVA | ## ### | # ###.# |
| 0x0071 | M049 | Output Apparent P. L2 | kVA | ## ### | # ###.# |
| 0x0072 | M050 | Output Apparent P. L3 | kVA | ## ### | # ###.# |
| 0x0073 | M051 | Output Active Power L1 | kW | ## ### | # ###.# |
| 0x0074 | M052 | Output Active Power L2 | kW | ## ### | # ###.# |
| 0x0075 | M053 | Output Active Power L3 | kW | ## ### | # ###.# |
| 0x0076 | M054 | Output voltage U12 | V | ### | ### |
| 0x0077 | M055 | Output voltage U23 | V | ### | ### |
| 0x0078 | M056 | Output voltage U31 | V | ### | ### |
| 0x0079 | M057 | Output Power factor L1 | | #.## | #.## |
| 0x007A | M058 | Output Power factor L2 | | #.## | #.## |
| 0x007B | M059 | Output Power factor L3 | | #.## | #.## |
| 0x007C | M060 | Output Crest Factor L1 | | ## | ## |
| 0x007D | M061 | Output Crest Factor L2 | | ## | ## |
| 0x007E | M062 | Output Crest Factor L3 | | ## | ## |
| 0x007F | M063 | Output Crest Factor neutral | | ## | ## |
| 0x0080 | M064 | Rect. Input Current L1 | A | ## ### | # ###.# |
| 0x0081 | M065 | Rect. Input Current L1 | A | ## ### | # ###.# |
| 0x0082 | M066 | Rect. Input Current L1 | A | ## ### | # ###.# |
| 0x0083 | M067 | Rect. Active Power L1 | kW | ## ### | # ###.# |
| 0x0084 | M068 | Rect. Active Power L2 | kW | ## ### | # ###.# |
| 0x0085 | M069 | Rect. Active Power L3 | kW | ## ### | # ###.# |
| 0x0086 | M070 | Bypass Input Current L1 | A | ## ### | # ###.# |
| 0x0087 | M071 | Bypass Input Current L2 | A | ## ### | # ###.# |
| 0x0088 | M072 | Bypass Input Current L3 | A | ## ### | # ###.# |
| 0x0089 | M073 | Bypass Active Power L1 | kW | ## ### | # ###.# |
| 0x008A | M074 | Bypass Active Power L2 | kW | ## ### | # ###.# |
| 0x008B | M075 | Bypass Active Power L3 | kW | ## ### | # ###.# |
| 0x008C | M076 | | | | |
| 0x008D | M077 | | | | |
| 0x008E | M078 | | | | |
| 0x008F | M079 | | | | |

List of UPS configurations .

This table is accessible on MODBUS TCP by requesting up to 15 words to address 0x0001.

| Address | Acronym | Description | Value | | Remarks |
|---------|---------|---------------------------------------|-----------------------|-----------------------|---|
| | | | MSB | LSB | |
| 0x0001 | T001 | UPS installation code and Device type | UPS installation Code | Device type | 01:01 = single unit 08:01 or 09:01 = modular unit 06:01 = distributed bypass UPS parallel system 06:08 = modular parallel UPS system |
| 0x0002 | T002 | Number of devices in level -1 | 1 to 15 | | 1 to 8 modules/units |
| 0x0003 | T003 | Position of devices present | b00 | module/unit 1 present | |
| | | | b01 | module/unit 2 present | |
| | | | b02 | module/unit 3 present | |
| | | | b03 | module/unit 4 present | |
| | | | b04 | module/unit 5 present | |
| | | | b05 | module/unit 6 present | |
| | | | b06 | module/unit 7 present | |
| | | | b07 | module/unit 8 present | |
| | | | b08 | | |
| | | | b09 | | |
| | | | b10 | | |
| | | | b11 | | |
| | | | b12 | | |
| | | | b13 | bypass module | |
| | | | b14 | | |
| b15 | | | | | |
| 0x0004 | T004 | Device number | 1 to 15 | | 1 to 8 |
| 0x0005 | T005 | Nominal kVA | *10 if 0x000E = 1 | | depends number of modules |
| 0x0006 | T006 | Nominal kW | *10 if 0x000E = 1 | | depends number of modules |
| 0x0007 | T007 | Phases number | Input phases 1 - 3 | Output phases 1 - 3 | |
| 0x0008 | T008 | Function | b00 | eco mode enabled | |
| | | | b01 | energy saver enabled | |
| | | | b02 | | |
| | | | b03 | genset present | |
| | | | b04 | | |
| | | | b05 | | |
| | | | b06 | Standby schedule | |
| | | | b07 | | |
| | | | b08 | | |
| | | | b09 | backfeed present | |
| | | | b10 | | |
| | | | b11 | | |
| | | | b12 | | |
| | | | b13 | | |
| | | | b14 | | |
| b15 | | | | | |

| Address | Acronym | Description | Value | | Remarks |
|---------|---------|-----------------------|---------------------------------|----------------------------|--|
| | | | MSB | LSB | |
| 0x0009 | T009 | Environment | b00 | External transformer | |
| | | | b01 | External input breaker | |
| | | | b02 | External output breaker | |
| | | | b03 | Double-bus bar | |
| | | | b04 | External bypass | |
| | | | b05 | Super bypass | |
| | | | b06 | Without bypass | |
| | | | b07 | Without maintenance bypass | |
| | | | b08 | | |
| | | | b09 | | |
| | | | b10 | | |
| | | | b11 | | |
| | | | b12 | | |
| | | | b13 | | |
| | | | b14 | | |
| b15 | | | | | |
| 0x000A | T010 | DC storage | b00 | battery present | |
| 0x000B | T011 | | | | |
| 0x000C | T012 | | | | |
| 0x000D | T013 | | | | |
| 0x000E | T014 | measurements factor | 0 = no factor / 1 = factor * 10 | | refer to measurements table |
| 0x000F | T015 | Device reference code | | | 0x8001 = ITYS PRO 0x8100 = MODULYS GP 2.0 0x8110 = MODULYS RM GP 0x8140 = MODULYS XM 0x8180 = MODULYS XS 0x81A0 = MODULYS XL 0x8200 = MASTERYS BC+ 0x8300 = MASTERYS GP4 0x8400 = DELPHYS XL 0x0288 = DELPHYS BC - GP 2.0 |

APPENDIX: JBUSP UPS MODBUS TABLE

List of status managed by UPS. This table is accessible on MODBUS TCP by requesting 4 words to address 0x1020.

| | Level | | NETYS PR/RT ITYS | MASTERYS BC/ GP | DELPHYS MP/ MX | DELPHYS BC/ GP |
|-----|-------|-------------------------------------|---------------------|---|---|---|
| S00 | I | Rectifier Input supply present | X | X | X | X |
| S01 | I | Inverter ON | X | X | X | X |
| S02 | I | Rectifier ON | X | X | X | X |
| S03 | I | Load protected by inverter | X | X | X | X |
| S04 | W | Load on automatic bypass | X | X | X | X |
| S05 | W | on battery / Battery discharging | X | X | X | X |
| S06 | | Remote controls disabled | | X | X | X |
| S07 | | Eco-mode ON | X | X | X | X |
| S08 | W | Stand-by mode | X | X | | |
| S09 | | Buzzer on | X | X | X | X |
| S10 | I | Battery test in progress | X | X | X | X |
| S11 | I | Battery test programmed | | X | X | X |
| S12 | I | Battery test in stand-by | | X | X | X |
| S13 | I | Battery test supported | X | X | X | X |
| S14 | W | Battery test failed | X | X | X | X |
| S15 | C | Battery near end of backup time | X | X | X | X |
| S16 | C | Battery discharged | X | X | X | X |
| S17 | I | Battery OK | X | X | X | X |
| S18 | | | | | | |
| S19 | | | | | | |
| S20 | | | | | | |
| S21 | | | | | | |
| S22 | | | | | | |
| S23 | | Inverter synchro with mains | X | X | X | X |
| S24 | | Boost on | X | X | | |
| S25 | | | | | | |
| S26 | I | Bypass input supply present | X | X | X | X |
| S27 | I | Battery charging | X | X | X | X |
| S28 | | Bypass input fr. out of tolerance | X | X | X | X |
| S29 | | Stand-by schedule | | | | |
| S30 | | UPS on parallel system | | For parallel | For parallel | For parallel |
| S31 | | Battery extension | | X | | |
| S32 | | Unit 1 present | | If parallel system according to number of units | If parallel system according to number of units | If parallel system according to number of units |
| S33 | | Unit 2 present | | | | |
| S34 | | Unit 3 present | | | | |
| S35 | | Unit 4 present | | | | |
| S36 | | Unit 5 present | | | | |
| S37 | | Unit 6 present | | | | |
| S38 | | External Input 1 | | X | X | X |
| S39 | | External Input 2 | | X | X | X |
| S40 | | External Input 3 | | X | X | X |
| S41 | | External Input 4 | | X | X | X |
| S42 | | Controls permission table managed | X | X | X | X |
| S43 | | power share | If present | | | |
| S44 | | | | | | |
| S45 | | | | | | |
| S46 | I | Operating on Gen Set | | If present | If present | If present |
| S47 | | | | | | |
| S48 | W | Maintenance mode active | | X | X | X |
| S49 | W | End of the first maintenance period | | X | X | X |
| ... | | | | | | |
| S63 | | | | | | |

For more information please refer to MODBUS User manual according to the UPS range.

List of alarms managed by the UPS. This table is accessible on MODBUS TCP by requesting 4 words to address 0x1040.

| | Level | | NETYS/ ITYS | MASTERYS BC/GP | DELPHYS MP/ MX | DELPHYS GP |
|-----|-------|--------------------------------------|----------------|---|---|---|
| A00 | W | General Alarm | X | X | X | X |
| A01 | W | Battery failure | X | X | X | X |
| A02 | W | UPS overload | X | X | X | X |
| A03 | | Output voltage out of tolerance | X | | | |
| A04 | | Control failure | X | X | | |
| A05 | W | Rec. input supply out of tolerance | X | | X | X |
| A06 | W | Bypass input supply out of tolerance | X | X | X | X |
| A07 | W | Over temperature alarm | X | X | X | X |
| A08 | W | Maintenance bypass closed | | X | X | X |
| A09 | | | | | | |
| A10 | W | Battery charger fault | | X | X | |
| A11 | | | | | | |
| A12 | | | | | | |
| A13 | | Pre-charge out of tolerance | | X | | |
| A14 | | BOOST too low | | X | | |
| A15 | | BOOST too high | | X | | |
| A16 | | VDC too high | | X | | X |
| A17 | | Improper condition of use | | | X | X |
| A18 | | Inverter stopped for overload | X | X | X | |
| A19 | W | Microprocessor control system | | | X | |
| A20 | W | data map corrupted | | X | | |
| A21 | | PLL fault (sources synchronization) | | X | X | |
| A22 | | Rectifier input supply fault | X | X | X | X |
| A23 | W | Rectifier preventive alarm | | X | X | X |
| A24 | | | | | | |
| A25 | W | Inverter preventive alarm | | X | X | X |
| A26 | W | Charger general alarm | | X | X | X |
| A27 | | Output Voltage over limit | | X | | |
| A28 | | | | | | |
| A29 | W | Bypass preventive alarm | | | X | X |
| A30 | | UPS stopped for overload | X | X | | |
| A31 | C | Imminent STOP | X | X | X | X |
| A32 | W | Unit 1 general alarm | | If parallel system according to number of units | If parallel system according to number of units | If parallel system according to number of units |
| A33 | W | Unit 2 general alarm | | | | |
| A34 | W | Unit 3 general alarm | | | | |
| A35 | W | Unit 4 general alarm | | | | |
| A36 | W | Unit 5 general alarm | | | | |
| A37 | W | Unit 6 general alarm | | | | |
| A38 | W | External alarm 1 | | X | X | X |
| A39 | | External alarm 2 | | X | | |
| A40 | | External alarm 3 | | X | | |
| A41 | | External alarm 4 | | X | | |
| A42 | W | Remote service alarm | | X | X | X |
| A43 | W | redundancy loss | | | X | X |

| | Level | | NETYS/ ITYS | MASTERYS BC/GP | DELPHYS MP/ MX | DELPHYS GP |
|-----|-------|-----------------------------------|----------------|-------------------|-------------------|------------|
| A44 | W | Servicing alarm | | X | X | X |
| A45 | W | Auto. and manual transfer disable | | | X | X |
| A46 | W | Automatic transfer disable | | | X | X |
| A47 | W | Battery room alarm | | | X | X |
| A48 | W | Maintenance bypass alarm | | | X | X |
| A49 | C | Battery discharged | | X | X | X |
| A50 | W | insufficient resources | | X | X | X |
| A51 | W | Synoptic alarm | | X | X | X |
| A52 | C | Rectifier fault | | X | X | X |
| A53 | | | | | | |
| A54 | C | Inverter fault | | X | X | X |
| A55 | | Parallel fault | | X | | |
| A56 | W | Gen set alarm | | If option set | | |
| A57 | | Gen set fault | | If option set | | |
| A58 | C | ESD activated | | X | X | X |
| A59 | C | Battery circuit open | | X | X | X |
| A60 | W | Fan failure | | X | | |
| A61 | W | Phase rotation fault | | X | | |
| A62 | C | Bypass critical alarm | | | X | X |
| A63 | | | | | | |

Alarms without a level indication are not managed by NET VISION.

For more information please refer to the MODBUS User manual according to the UPS range.

List of measurements managed by UPS. This table is accessible on MODBUS TCP by requesting 48 words to address 0x1060.

| Address | Code | Description | Units | Format | NETYS/ ITYS | MASTERYS | DELPHYS MP/MX | DELPHYS BC/GP |
|---------|------|---------------------------------|---------|--------|----------------|----------|------------------|------------------|
| 0x1060 | M00 | Load rate phase1 | % | ### | X | X | X | X |
| 0x1061 | M01 | Load rate phase 2 | % | | | X | X | X |
| 0x1062 | M02 | Load rate phase 3 | % | | | X | X | X |
| 0x1063 | M03 | UPS load rate | % | ### | X | X | X | X |
| 0x1064 | M04 | Battery Capacity | % | ### | X | X | X | X |
| 0x1065 | M05 | Battery Capacity | Ah*10 | ###.# | | X | X | X |
| 0x1066 | M06 | Input bypass voltage phase 1 | V | ### | X | X | X | X |
| 0x1067 | M07 | Input bypass voltage phase 2 | V | | | X | X | X |
| 0x1068 | M08 | Input bypass voltage phase 3 | V | | | X | X | X |
| 0x1069 | M09 | Output voltage phase 1 | V | ### | X | X | X | X |
| 0x106A | M10 | Output voltage phase 2 | V | | | X | X | X |
| 0x106B | M11 | Output voltage phase 3 | V | | | X | X | X |
| 0x106C | M12 | Input current L1 | A | | | X | -1 | -1 |
| 0x106D | M13 | Input current L2 | A | | | X | -1 | -1 |
| 0x106E | M14 | Input current L3 | A | | | X | -1 | -1 |
| 0x106F | M15 | Output current phase 1 | A*10 | ###.# | X | X | X | X |
| 0x1070 | M16 | Output current phase 2 | A*10 | | | X | X | X |
| 0x1071 | M17 | Output current phase 3 | A*10 | | | X | X | X |
| 0x1072 | M18 | Input bypass frequency | Hz*10 | ##.# | X | X | X | X |
| 0x1073 | M19 | Output frequency | Hz*10 | ##.# | X | X | X | X |
| 0x1074 | M20 | Battery voltage (+) | V*10 | ###.# | X | X | X | X |
| 0x1075 | M21 | Battery voltage (-) | V*10 | ###.# | -1 | X | -1 | -1 |
| 0x1076 | M22 | Ambient Temperature | °C | ## | X | X | X | X |
| 0x1077 | M23 | Remaining backup time | Minutes | #### | X | X | X | X |
| 0x1078 | M24 | Battery current | A*10 | ±###.# | -1 | X | X | X |
| 0x1079 | M25 | | | | | | | |
| 0x107A | M26 | | | | | | | |
| 0x107B | M27 | | | | | | | |
| 0x107C | M28 | | | | | | | |
| 0x107D | M29 | | | | | | | |
| 0x107E | M30 | | | | | | | |
| 0x107F | M31 | | | | | | | |
| 0x1080 | M32 | | | | | | | |
| 0x1081 | M33 | Rectifier input voltage phase 1 | V | ### | X | X | X | X |
| 0x1082 | M34 | Rectifier input voltage phase 2 | V | | | X | X | X |
| 0x1083 | M35 | Rectifier input voltage phase 3 | V | | | X | X | X |
| 0x1084 | M36 | UPS output power | kW*10 | | | X | X | -1 |
| 0x1085 | M37 | Output power phase 1 | kVA*10 | ###.# | | X | X | X |
| 0x1086 | M38 | Output power phase 2 | kVA*10 | | | X | X | X |
| 0x1087 | M39 | Output power phase 3 | kVA*10 | | | X | X | X |
| 0x1088 | M40 | Input power L1 | | | | X | X | X |

| Address | Code | Description | Units | Format | NETYS/ ITYS | MASTERYS | DELPHYS MP/MX | DELPHYS BC/GP |
|---------|------|----------------|-------|--------|----------------|----------|------------------|------------------|
| 0x1089 | M41 | Input power L2 | | | | X | X | X |
| 0x108A | M42 | Input power L3 | | | | X | X | X |
| 0x108B | M43 | Rec input Fr | Hz*10 | ##.# | | X | -1 | -1 |
| 0x108C | M44 | | | | | | | |
| 0x108D | M45 | | | | | | | |
| 0x108E | M46 | | | | | | | |
| 0x108F | M47 | | | | | | | |

Value -1 means that the measurement is not managed by the UPS. and not displayed by NET VISION.

List of UPS configurations .

This table is accessible on MODBUS TCP by requesting up to 15 words to address 0x10E0 and 12 words to address 0x1000.

| Address | Acronym | Description | Value | | Remarks |
|---------|---------|------------------|----------|--------|--------------|
| | | | MSB | LSB | |
| 0x1000 | T00 | UPS TYPE | see list | | |
| 0x1001 | T01 | Nomnival kVA *10 | * 10 | | |
| 0x1002 | T02 | Module number | 1 | | |
| 0x1003 | T03 | Serail number | char 2 | char 1 | ASCII format |
| 0x1004 | T04 | | | | |
| 0x1005 | T05 | | | | |
| 0x1006 | T06 | | | | |
| 0x1007 | T07 | | char 10 | char 9 | |
| 0x1008 | T08 | Not used | | | |
| 0x1009 | T09 | | | | |
| 0x100A | T10 | | | | |
| 0x100B | T11 | | | | |

| Adress | Code | Description | Unit | Format |
|--------|---------|---|--------------|--------|
| 0x10E0 | T00 | Nominal star input voltage | V | ### |
| 0x10E1 | T01 | Nominal star output voltage | V | ### |
| 0x10E2 | T02 | Nominal input frequency | Hz | ## |
| 0x10E3 | T03 | Nominal output frequency | Hz | ## |
| 0x10E4 | T04 | Firmware version of com. board (ex 1.00) | Integer *100 | ###.## |
| 0x10E5 | T05 | Not used | | |
| 0x10E6 | T06 | Not used | | |
| 0x10E7 | T07 | Not used | | |
| 0x10E8 | T08 | Total nominal battery capacity (battery expansion cabinets included) | Ah*10 | ####.# |
| 0x10E9 | T09 | Not used | | |
| 0x10EA | T10 | Number of Power Share Plugs Available | Integer | ##### |
| | T10÷T30 | Not used | | |
| 0x10FF | T31 | Not used | | |

| 0x1000 value | UPS RANGE |
|--------------|------------------------|
| 20 | MODULYS 1/1 MODULE |
| 21 | MODULYS 1/1 UPS |
| 22 | MODULYS 1/1 SYSTEM |
| 26 | MASTERYYS 1/1 SYSTEM |
| 27 | MASTERYYS 1/1 UPS |
| 28 | MASTERYYS 1/1 MODULE |
| 29 | NETYS |
| 30 | ITYS |
| 31 | NETYS RT |
| 35 | NETYS PR |
| 36 | NETYS PR-RK |
| 37 | NETYS PR-RT |
| 82 | MODULYS 3/1 MODULE |
| 83 | MODULYS 3/1 SYSTEM |
| 84 | MODULYS 3/1 UPS |
| 86 | MASTERYYS 3/1 SYSTEM |
| 87 | MASTERYYS 3/1 UPS |
| 88 | MASTERYYS 3/1 MODULE |
| 89 | ITYS 3/1 UPS |
| 256 | MASTERYYS 3/3 SYSTEM |
| 257 | MASTERYYS 3/3 UPS |
| 258 | MASTERYYS 3/3 MODULE |
| 513 - 514 | DELPHYS MP SINGLE UNIT |
| 515 - 516 | DELPHYS MX SINGLE UNIT |
| 640 | DELPHYS Green Power |
| 644 | DELPHYS BC |
| 648 | DELPHYS GP 2.0 |
| 1014 - 1017 | DELPHYS MP SYSTEM |
| 1018 - 1021 | DELPHYS MX SYSTEM |

APPENDIX: MODBUS ADDRESSES TABLE FOR STS

| Data | Address | Length in words | type |
|-------------------|---------|-----------------|--------|
| CONFIG | 0x0120 | 16 | values |
| STATUS | 0x0140 | 4 | Bits |
| ALARMS | 0x0148 | 2 | Bits |
| MEASUREMENT | 0x0220 | 64 | Values |
| STS REFERENCE | 0x0100 | 10 | ASCII |
| STS SERIAL NUMBER | 0x0116 | 10 | ASCII |

APPENDIX: MODBUS TABLE DATA

| Address | Bits | STATUS Description | Address | Bits | Description |
|---------|----------------------------|-----------------------------|-----------|------|-------------------------|
| 0x0140 | b00 | Source 1 OK | 0x0142 | b00 | ESD input active |
| | b01 | Source 1 critical | | b01 | Q41 closed |
| | b02 | Source 1 out of tolerance | | b02 | Q42 closed |
| | b03 | Source 1 absent | | b03 | SS1 closed |
| | b04 | Power Path 1 OK | | b04 | SS2 closed |
| | b05 | | | b05 | Q30 closed |
| | b06 | Source 2 OK | | b06 | Q51 closed |
| | b07 | Source 2 critical | | b07 | Q52 closed |
| | b08 | Source 2 out of tolerance | | b08 | |
| | b09 | Source 2 absent | | b09 | |
| | b10 | Power Path 2 OK | | b10 | |
| | b11 | | | b11 | |
| | b12 | Sources perm. Synchronised | | b12 | |
| | b13 | Sliding Sources | | b13 | Remote controls enabled |
| | b14 | Sources perm. Not Synchron. | | b14 | Maintenance alert |
| b15 | Sources Instant. Synchron. | b15 | User mode | | |
| 0x0141 | b00 | S1 is preferred source | | | |
| | b01 | Load on preferred source | | | |
| | b02 | Load on alternate source | | | |
| | b03 | Load not supplied | | | |
| | b04 | Load on manual by-pass1 | | | |
| | b05 | Load on manual by-pass2 | | | |
| | b06 | | | | |
| | b07 | Load on S1 | | | |
| | b08 | Load on S2 | | | |
| | b09 | | | | |
| | b10 | Transfer locked ext. | | | |
| | b11 | | | | |
| | b12 | Output OK | | | |
| | b13 | Output out of tolerance | | | |
| | b14 | Output absent | | | |
| b15 | | | | | |

| Address | Bits | Alarms Description | Address | Bits | Alarms Description |
|---------|------|--------------------------|---------|------|---------------------------|
| 0x0148 | b00 | Imminent stop | 0x0149 | b00 | Backfeed1 protection open |
| | b01 | Output Isc detection | | b01 | Backfeed2 protection open |
| | b02 | Manual By-Pass | | b02 | Ambient temperature max |
| | b03 | Overload | | b03 | |
| | b04 | SoLink Alarm | | b04 | |
| | b05 | Consecutive Detections | | b05 | |
| | b06 | Switchback impossible | | b06 | |
| | b07 | Transfer impossible | | b07 | |
| | b08 | | | b08 | |
| | b09 | PowerPath1 deteriorated | | b09 | Preventive Alarm |
| | b10 | PowerPath1 short circuit | | b10 | Wrong Configuration |
| | b11 | PowerPath1 in failure | | b11 | HMI Alarm |
| | b12 | | | b12 | Electronics alarm |
| | b13 | PowerPath2 deteriorated | | b13 | Custom input alarm |
| | b14 | PowerPath2 short circuit | | b14 | Maintenance alarm |
| | b15 | PowerPath2 in failure | | b15 | General Alarm |

| Address | Measurements | Address | Measurements |
|---------|------------------------|---------|---------------------------|
| 0x0220 | S1 voltage L1N (V) | 0x0240 | Output Apparent P. L1 KVA |
| 0x0221 | S1 voltage L2N (V) | 0x0241 | Output Apparent P. L2 KVA |
| 0x0222 | S1 voltage L3N (V) | 0x0242 | Output Apparent P. L3 KVA |
| 0x0223 | S1 voltage U12 (V) | 0x0243 | Output Power factor L1 |
| 0x0224 | S1 voltage U23 (V) | 0x0244 | Output Power factor L2 |
| 0x0225 | S1 voltage U31 (V) | 0x0245 | Output Power factor L3 |
| 0x0226 | S1 frequency (Hz) | 0x0246 | |
| 0x0227 | SS1 temperature (°C) | 0x0247 | |
| 0x0228 | S2 voltage L1 (V) | 0x0248 | Output crest factor L1 |
| 0x0229 | S2 voltage L2 (V) | 0x0249 | Output crest factor L2 |
| 0x022A | S2 voltage L3 (V) | 0x024A | Output crest factor L3 |
| 0x022B | S2 voltage U12 (V) | 0x024B | Output crest factor N |
| 0x022C | S2 voltage U23 (V) | 0x024C | |
| 0x022D | S2 voltage U31 (V) | 0x024D | |
| 0x022E | S2 frequency (Hz) | 0x024E | |
| 0x022F | SS2 temperature (°C) | 0x024F | Ambient temperature (°C) |
| 0x0230 | Output voltage L1 (V) | 0x0250 | Output Active Power L1 KW |
| 0x0231 | Output voltage L2 (V) | 0x0251 | Output Active Power L2 KW |
| 0x0232 | Output voltage L3 (V) | 0x0252 | Output Active Power L3 KW |
| 0x0233 | Output voltage U12 (V) | 0x0253 | Global Active Power kW |
| 0x0234 | Output voltage U23 (V) | 0x0254 | |
| 0x0235 | Output voltage U31 (V) | 0x0255 | |
| 0x0236 | Output frequency (Hz) | 0x0256 | |
| 0x0237 | | 0x0257 | |
| 0x0238 | Output current I1 (A) | 0x0258 | Output load rate L1 (%) |
| 0x0239 | Output current I2 (A) | 0x0259 | Output load rate L2 (%) |
| 0x023A | Output current I3 (A) | 0x025A | Output load rate L3 (%) |
| 0x023B | Output current IN (A) | 0x025B | Output load rate N (%) |
| 0x023C | | 0x025C | |
| 0x023D | Output load rate (%) | 0x025D | |
| 0x023E | | 0x025E | |
| 0x023F | S1-S2 phase shift (°) | 0x025F | |

APPENDIX: BACNET OBJECT DEFINITION

- List of BACnet Objects
 - Device object

| Property Identifier | Property Datatype | Conformance Code | UPS Value |
|---------------------------------|--|------------------|--|
| Object_Identifier | BACnetObjectIdentifier | Required | |
| Object_Name | CharacterString | Required | UPS model |
| Object_Type | BACnetObjectType | Required | |
| System_Status | BACnetDeviceStatus | Required | |
| Vendor_Name | CharacterString | Required | SOCOMECS UPS |
| Vendor_Identifier | Unsigned16 | Required | 591 |
| Model_Name | CharacterString | Required | Nominal kVA |
| Firmware_Revision | CharacterString | Required | |
| Application_Software_Version | CharacterString | Required | |
| Location | CharacterString | Optional | Unit number set in WEB page |
| Description | CharacterString | Optional | Serial number |
| Protocol_Version | Unsigned | Required | |
| Protocol_Revision | Unsigned | Required | |
| Protocol_Services_Supported | BACnetServicesSupported | Required | |
| Protocol_Object_Types_Supported | BACnetObjectTypesSupported | Required | |
| Object_List | BACnetARRAY[N]of BACnetObjectIdentifier | Required | |
| Max_APDU_Length_Accepted | Unsigned | Required | |
| Segmentation_Supported | BACnetSegmentation | Required | |
| Max_Segments_Accepted | Unsigned | Optional | |
| VT_Classes_Supported | List of BACnetVTClass | Optional | |
| Active_VT_Sessions | List of BACnetVTSession | Optional | |
| Local_Time | Time | Optional | UPS time |
| Local_Date | Date | Optional | UPS day |
| UTC_Offset | INTEGER | Optional | |
| Daylight_Savings_Status | BOOLEAN | Optional | |
| APDU_Segment_Timeout | Unsigned | Optional | |
| APDU_Timeout | Unsigned | Optional | |
| Number_Of_APDU_Retries | Unsigned | Optional | |
| List_Of_Session_Keys | List of BACnetSessionKey | Optional | |
| Time_Synchronization_Recipients | List of BACnetRecipient | Optional | |
| Max_Master | Unsigned(1..127) | Optional | |
| Max_Info_Frames | Unsigned | Optional | |
| Device_Address_Binding | List of BACnetAddressBinding | Required | |
| Database_Revision | Unsigned | Required | |
| Configuration_Files | BACnetARRAY[N] of BACnetObjectIdentifier | Optional | |
| Last_Restore_Time | BACnetTimeStamp | Optional | |
| Backup_Failure_Timeout | Unsigned16 | Optional | |
| Active_COV_Subscriptions | List of BACnetCOVSubscription | Optional | |
| Slave_Proxy_Enable | BACnetArray[N] of BOOLEAN | Optional | |
| Manual_Slave_Address_Binding | List of BACnetAddressBinding | Optional | |
| Auto_Slave_Discovery | BACnetArray[N] of BOOLEAN | Optional | |
| Slave_Address_Binding | List of BACnetAddressBinding | Optional | |
| Profile_Name | CharacterString | Optional | Measurements factor N/A factor_10 (*) no_factor (*) |

(*) only for ITYS-PRO – MODULYS GP 2.0 and new UPS ranges.

- Analog value objects

BACnet interface reads absolute values from UPS. Format and factor 10 have to be apply having the correct value displaying.

| Object Name | Object type | Instance | Units | Code | Format | factor_10 (*) to apply if defined | Value = -1 |
|------------------|-------------|----------|-------|------|----------|-----------------------------------|------------------|
| UPS_OUTPUT_Lr | AV | 0 | % | 98 | ### | | |
| UPS_OUTPUT_kVA | AV | 1 | kVA | 9 | | Yes | Not available |
| UPS_OUTPUT_kW | AV | 2 | kW | 48 | | Yes | Not available |
| UPS_OUTPUT_Lr1 | AV | 3 | % | 98 | ### | | |
| UPS_OUTPUT_Lr2 | AV | 4 | % | 98 | ### | | Single phase UPS |
| UPS_OUTPUT_Lr3 | AV | 5 | % | 98 | ### | | Single phase UPS |
| UPS_OUTPUT_I1 | AV | 6 | A | 3 | | | |
| UPS_OUTPUT_I2 | AV | 7 | A | 3 | | | Single phase UPS |
| UPS_OUTPUT_I3 | AV | 8 | A | 3 | | | Single phase UPS |
| UPS_OUTPUT_kVA1 | AV | 9 | kVA | 9 | | Yes | Not available |
| UPS_OUTPUT_kVA2 | AV | 10 | kVA | 9 | | Yes | Single phase UPS |
| UPS_OUTPUT_kVA3 | AV | 11 | kVA | 9 | | Yes | Single phase UPS |
| UPS_OUTPUT_kW1 | AV | 12 | kW | 48 | | Yes | Not available |
| UPS_OUTPUT_kW2 | AV | 13 | kW | 48 | | Yes | Single phase UPS |
| UPS_OUTPUT_kW3 | AV | 14 | kW | 48 | | Yes | Single phase UPS |
| UPS_OUTPUT_V1 | AV | 15 | V | 5 | ### | | |
| UPS_OUTPUT_V2 | AV | 16 | V | 5 | ### | | Single phase UPS |
| UPS_OUTPUT_V3 | AV | 17 | V | 5 | ### | | Single phase UPS |
| UPS_OUTPUT_U12 | AV | 18 | V | 5 | ### | | Single phase UPS |
| UPS_OUTPUT_U23 | AV | 19 | V | 5 | ### | | Single phase UPS |
| UPS_OUTPUT_U31 | AV | 20 | V | 5 | ### | | Single phase UPS |
| UPS_OUTPUT_fr | AV | 21 | Hz | 27 | ##.# | | |
| UPS_OUTPUT_cf | AV | 22 | | | ## | | Not available |
| UPS_OUTPUT_pf1 | AV | 23 | | 15 | +/-#.### | | Not available |
| UPS_OUTPUT_pf2 | AV | 24 | | 15 | +/-#.### | | Single phase UPS |
| UPS_OUTPUT_pf3 | AV | 25 | | 15 | +/-#.### | | Single phase UPS |
| UNIT_OUTPUT_Lr | AV | 26 | % | 98 | ##.## | | |
| UNIT_OUTPUT_kVA | AV | 27 | kVA | 9 | | Yes | Not available |
| UNIT_OUTPUT_kW | AV | 28 | kW | 48 | | Yes | Not available |
| UNIT_OUTPUT_Lr1 | AV | 29 | % | 98 | ### | | |
| UNIT_OUTPUT_Lr2 | AV | 30 | % | 98 | ### | | Single phase UPS |
| UNIT_OUTPUT_Lr3 | AV | 31 | % | 98 | ### | | Single phase UPS |
| UNIT_OUTPUT_I1 | AV | 32 | A | 3 | | Yes | |
| UNIT_OUTPUT_I2 | AV | 33 | A | 3 | | Yes | Single phase UPS |
| UNIT_OUTPUT_I3 | AV | 34 | A | 3 | | Yes | Single phase UPS |
| UNIT_OUTPUT_kVA1 | AV | 35 | kVA | 9 | | Yes | |
| UNIT_OUTPUT_kVA2 | AV | 36 | kVA | 9 | | Yes | Single phase UPS |
| UNIT_OUTPUT_kVA3 | AV | 37 | kVA | 9 | | Yes | Single phase UPS |
| UNIT_OUTPUT_kW1 | AV | 38 | kW | 48 | | Yes | Not available |
| UNIT_OUTPUT_kW2 | AV | 39 | kW | 48 | | Yes | Single phase UPS |
| UNIT_OUTPUT_kW3 | AV | 40 | kW | 48 | | Yes | Single phase UPS |
| UNIT_OUTPUT_V1 | AV | 41 | V | 5 | ### | | |
| UNIT_OUTPUT_V2 | AV | 42 | V | 5 | ### | | Single phase UPS |
| UNIT_OUTPUT_V3 | AV | 43 | V | 5 | ### | | Single phase UPS |
| UNIT_OUTPUT_U12 | AV | 44 | V | 5 | ### | | |
| UNIT_OUTPUT_U23 | AV | 45 | V | 5 | ### | | Single phase UPS |
| UNIT_OUTPUT_U31 | AV | 46 | V | 5 | ### | | Single phase UPS |
| UNIT_OUTPUT_fr | AV | 47 | Hz | 27 | ##.# | | |
| UNIT_OUTPUT_cf | AV | 48 | | N/A | ## | | Not available |
| UNIT_OUTPUT_pf1 | AV | 49 | | 15 | +/-#.### | | Not available |

| | | | | | | | |
|-----------------|----|----|-----|-----|---------|-----|------------------|
| UNIT_OUTPUT_pf2 | AV | 50 | | 15 | +/-#.## | | Single phase UPS |
| UNIT_OUTPUT_pf3 | AV | 51 | | 15 | +/-#.## | | Single phase UPS |
| UNIT_TMP | AV | 52 | °C | 62 | ##.# | | |
| RECTIFIER_V1 | AV | 53 | V | 5 | ### | | |
| RECTIFIER_V2 | AV | 54 | V | 5 | ### | | Single phase UPS |
| RECTIFIER_V3 | AV | 55 | V | 5 | ### | | Single phase UPS |
| RECTIFIER_U12 | AV | 56 | V | 5 | ### | | Single phase UPS |
| RECTIFIER_U23 | AV | 57 | V | 5 | ### | | Single phase UPS |
| RECTIFIER_U31 | AV | 58 | V | 5 | ### | | Single phase UPS |
| RECTIFIER_Fr | AV | 59 | Hz | 27 | ##.# | | Not available |
| RECTIFIER_I1 | AV | 60 | A | 3 | | Yes | Not available |
| RECTIFIER_I2 | AV | 61 | A | 3 | | Yes | Single phase UPS |
| RECTIFIER_I3 | AV | 62 | A | 3 | | Yes | Single phase UPS |
| RECTIFIER_kW1 | AV | 63 | kW | 48 | | Yes | Not available |
| RECTIFIER_kW2 | AV | 64 | kW | 48 | | Yes | Single phase UPS |
| RECTIFIER_kW3 | AV | 65 | kW | 48 | | Yes | Single phase UPS |
| BATTERY_V+ | AV | 66 | V | 5 | | Yes | |
| BATTERY_V- | AV | 67 | V | 5 | | Yes | Not available |
| BATTERY_I+ | AV | 68 | A | 3 | +/- | Yes | |
| BATTERY_I- | AV | 69 | A | 3 | +/- | Yes | Not available |
| BATTERY_% | AV | 70 | % | 98 | ### | | |
| BATTERY_Ah | AV | 71 | Ah | 261 | | Yes | |
| BATTERY_Min | AV | 72 | Min | 72 | ### | | |
| BATTERY_s | AV | 73 | Sec | 73 | ### | | Not available |
| BATTERY_TMP | AV | 74 | °C | 62 | ##.# | | Not available |
| BYPASS_V1 | AV | 75 | V | 5 | ### | | |
| BYPASS_V2 | AV | 76 | V | 5 | ### | | Single phase UPS |
| BYPASS_V3 | AV | 77 | V | 5 | ### | | Single phase UPS |
| BYPASS_U12 | AV | 78 | V | 5 | ### | | Single phase UPS |
| BYPASS_U23 | AV | 79 | V | 5 | ### | | Single phase UPS |
| BYPASS_U31 | AV | 80 | V | 5 | ### | | Single phase UPS |
| BYPASS_Fr | AV | 81 | Hz | 27 | ##.# | | |
| BYPASS_I1 | AV | 82 | A | 3 | | Yes | Not available |
| BYPASS_I2 | AV | 83 | A | 3 | | Yes | Single phase UPS |
| BYPASS_I3 | AV | 84 | A | 3 | | Yes | Single phase UPS |
| BYPASS_kW1 | AV | 85 | kW | 48 | | Yes | Not available |
| BYPASS_kW2 | AV | 86 | kW | 48 | | Yes | Single phase UPS |
| BYPASS_kW3 | AV | 87 | kW | 48 | | Yes | Single phase UPS |

- Multi-states objects

| Object Name | Object type | Instance | Number of states |
|-----------------|-------------|----------|------------------|
| DeviceStatus | MV | 0 | 4 |
| UPSLoadStatus | MV | 1 | 7 |
| UnitLoadStatus | MV | 2 | 7 |
| UnitStatus | MV | 3 | 6 |
| Alarms | MV | 4 | 4 |
| BatteryStatus | MV | 5 | 10 |
| RectifierStatus | MV | 6 | 2 |
| InverterStatus | MV | 7 | 2 |
| InputRecStatus | MV | 8 | 4 |
| InputBypStatus | MV | 9 | 4 |

- Bit string objects

| Object Name | Object type | Instance | Number of bits |
|-------------|-------------|----------|----------------|
| UPSStatus | BSV | 0 | 16 |
| UPSAlarms | BSV | 1 | 23 |
| UnitAlarms | BSV | 2 | 31 |

- BACnet objects definition
 - Analog value objects

| Object Name | Description | Single Unit | Parallel concentrator | Parallel Multi-Units | | | |
|------------------|--|-------------------|-----------------------|----------------------|-------------|------------|----------------------------|
| UPS_OUTPUT_Lr | Global output load rate of parallel UPS system | Copy of unit data | UPS level | UPS level | | | |
| UPS_OUTPUT_kVA | Global output apparent power of parallel UPS system | | | | | | |
| UPS_OUTPUT_kW | Global output active power of parallel UPS system | | | | | | |
| UPS_OUTPUT_Lr1 | Output load rate phase 1 of parallel UPS system | | | | | | |
| UPS_OUTPUT_Lr2 | Output load rate phase 2 of parallel UPS system | | | | | | |
| UPS_OUTPUT_Lr3 | Output load rate phase 3 of parallel UPS system | | | | | | |
| UPS_OUTPUT_I1 | Output current phase 1 of parallel UPS system | | | | | | |
| UPS_OUTPUT_I2 | Output current phase 2 of parallel UPS system | | | | | | |
| UPS_OUTPUT_I3 | Output current phase 3 of parallel UPS system | | | | | | |
| UPS_OUTPUT_kVA1 | Output apparent power phase 1 of parallel UPS system | | | | | | |
| UPS_OUTPUT_kVA2 | Output apparent power phase 2 of parallel UPS system | | | | | | |
| UPS_OUTPUT_kVA3 | Output apparent power phase 3 of parallel UPS system | | | | | | |
| UPS_OUTPUT_kW1 | Output active power phase 1 of parallel UPS system | | | | | | |
| UPS_OUTPUT_kW2 | Output active power phase 2 of parallel UPS system | | | | | | |
| UPS_OUTPUT_kW3 | Output active power phase 3 of parallel UPS system | | | | | | |
| UPS_OUTPUT_V1 | Output voltage phase 1 | | | | | | |
| UPS_OUTPUT_V2 | Output voltage phase 2 | | | | | | |
| UPS_OUTPUT_V3 | Output voltage phase 3 | | | | | | |
| UPS_OUTPUT_U12 | Output voltage phase 1-2 | | | | | | |
| UPS_OUTPUT_U23 | Output voltage phase 2-3 | | | | | | |
| UPS_OUTPUT_U31 | Output voltage phase 3-1 | | | | | | |
| UPS_OUTPUT_fr | Output frequency | | | | | | |
| UPS_OUTPUT_cf | Output crest factor | | | | | | |
| UPS_OUTPUT_pf1 | Output power factor phase 1 | | | | | | |
| UPS_OUTPUT_pf2 | Output power factor phase 2 | | | | | | |
| UPS_OUTPUT_pf3 | Output power factor phase 3 | | | | | | |
| UNIT_OUTPUT_Lr | Global output load rate of the unit | | | | Unit values | UPS values | Unit selected values level |
| UNIT_OUTPUT_kVA | Global output apparent power of the unit | | | | | | |
| UNIT_OUTPUT_kW | Global output active power of the unit | | | | | | |
| UNIT_OUTPUT_Lr1 | Output load rate phase 1 of the unit | | | | | | |
| UNIT_OUTPUT_Lr2 | Output load rate phase 2 of the unit | | | | | | |
| UNIT_OUTPUT_Lr3 | Output load rate phase 3 of the unit | | | | | | |
| UNIT_OUTPUT_I1 | Output current phase 1 of the unit | | | | | | |
| UNIT_OUTPUT_I2 | Output current phase 2 of the unit | | | | | | |
| UNIT_OUTPUT_I3 | Output current phase 3 of the unit | | | | | | |
| UNIT_OUTPUT_kVA1 | Output apparent power phase 1 of the unit | | | | | | |
| UNIT_OUTPUT_kVA2 | Output apparent power phase 2 of the unit | | | | | | |
| UNIT_OUTPUT_kVA3 | Output apparent power phase 3 of the unit | | | | | | |
| UNIT_OUTPUT_kW1 | Output active power phase 1 of the unit | | | | | | |
| UNIT_OUTPUT_kW2 | Output active power phase 2 of the unit | | | | | | |
| UNIT_OUTPUT_kW3 | Output active power phase 3 of the unit | | | | | | |
| UNIT_OUTPUT_V1 | Output voltage phase 1 | | | | | | |
| UNIT_OUTPUT_V2 | Output voltage phase 2 | | | | | | |
| UNIT_OUTPUT_V3 | Output voltage phase 3 | | | | | | |
| UNIT_OUTPUT_U12 | Output voltage phase 1-2 | | | | | | |

| | | | | |
|-----------------|--|-------------|------------|----------------------------------|
| UNIT_OUTPUT_U23 | Output voltage phase 2-3 | Unit values | UPS values | Unit selected values level |
| UNIT_OUTPUT_U31 | Output voltage phase 3-1 | | | |
| UNIT_OUTPUT_fr | Output frequency | | | |
| UNIT_OUTPUT_cf | Output crest factor | | | |
| UNIT_OUTPUT_pf1 | Output power factor phase 1 | | | |
| UNIT_OUTPUT_pf2 | Output power factor phase 2 | | | |
| UNIT_OUTPUT_pf3 | Output power factor phase 3 | | | |
| UNIT_TMP | Unit ambient temperature | Unit values | UPS values | Local unit selected values level |
| RECTIFIER_V1 | Rectifier voltage phase 1 | | | |
| RECTIFIER_V2 | Rectifier voltage phase 2 | | | |
| RECTIFIER_V3 | Rectifier voltage phase 3 | | | |
| RECTIFIER_U12 | Rectifier voltage phase 1-2 | | | |
| RECTIFIER_U23 | Rectifier voltage phase 2-3 | | | |
| RECTIFIER_U31 | Rectifier voltage phase 3-1 | | | |
| RECTIFIER_Fr | Rectifier frequency | | | |
| RECTIFIER_I1 | Rectifier current phase 1 of the unit | | | |
| RECTIFIER_I2 | Rectifier current phase 2 of the unit | | | |
| RECTIFIER_I3 | Rectifier current phase 3 of the unit | | | |
| RECTIFIER_kW1 | Rectifier active power phase 1 of the unit | | | |
| RECTIFIER_kW2 | Rectifier active power phase 2 of the unit | | | |
| RECTIFIER_kW3 | Rectifier active power phase 3 of the unit | | | |
| BATTERY_V+ | Battery voltage or Battery positive string voltage | | | |
| BATTERY_V- | Battery negative string voltage | | | |
| BATTERY_I+ | Battery current or Battery positive string current | | | |
| BATTERY_I- | Battery negative string current | | | |
| BATTERY_% | Battery capacity | | | |
| BATTERY_Ah | Battery capacity | | | |
| BATTERY_Min | Remaining backup time –when the UPS is on battery | | | |
| BATTERY_s | Power on battery time | | | |
| BATTERY_TMP | Battery temperature | | | |
| BYPASS_V1 | Bypass voltage phase 1 | | | |
| BYPASS_V2 | Bypass voltage phase 2 | | | |
| BYPASS_V3 | Bypass voltage phase 3 | | | |
| BYPASS_U12 | Bypass voltage phase 1-2 | | | |
| BYPASS_U23 | Bypass voltage phase 2-3 | | | |
| BYPASS_U31 | Bypass voltage phase 3-1 | | | |
| BYPASS_Fr | Bypass frequency | | | |
| BYPASS_I1 | Bypass current phase 1 of the unit | | | |
| BYPASS_I2 | Bypass current phase 2 of the unit | | | |
| BYPASS_I3 | Rectifier current phase 3 of the unit | | | |
| BYPASS_kW1 | Bypass active power phase 1 of the unit | | | |
| BYPASS_kW2 | Bypass active power phase 2 of the unit | | | |
| BYPASS_kW3 | Bypass active power phase 3 of the unit | | | |

- Multi-states objects
 - DeviceStatus

| MULTI-STATE | Values | Description |
|-----------------|--------|---|
| Running | 1 | BACnet + UPS com OK |
| Ready | 2 | Interface operating |
| No com with UPS | 3 | Interface is not communicating with the UPS |
| Fault | 4 | Internal device failure |

- UPSLoadStatus

| MULTI-STATE | Values | Description | For single unit UPS |
|------------------|--------|-------------------------------------|---------------------|
| ON MAINT. BYPASS | 1 | Load supplied by Maintenance Bypass | Copy of unit data |
| ON BATTERY | 2 | UPS operating on Battery | |
| ON INVERTER | 3 | Load protected by Inverter | |
| NORMAL MODE | 4 | Load supplied in Normal mode | |
| ECO MODE | 5 | UPS in eco mode | |
| ON BYPASS | 6 | Load supplied by automatic Bypass | |
| LOAD OFF | 7 | Load OFF – default value | |
| LINE-INTERACTIVE | 8 | | |
| FLEX MODE | 9 | | |

- UnitLoadStatus

| MULTI-STATE | Values | Description |
|------------------|--------|-------------------------------------|
| ON MAINT. BYPASS | 1 | Load supplied by Maintenance Bypass |
| ON BATTERY | 2 | Unit operating on Battery |
| ON INVERTER | 3 | Load protected by Inverter |
| NORMAL MODE | 4 | Load supplied in Normal mode (*) |
| ECO MODE | 5 | Unit in eco mode |
| ON BYPASS | 6 | Load supplied by automatic Bypass |
| LOAD OFF | 7 | Load OFF - default value |
| LINE-INTERACTIVE | 8 | |
| FLEX MODE | 9 | |

(*) for “OFF Line” UPS only

- UnitStatus

| MULTI-STATE | Values | Description |
|--------------|--------|--|
| SERVICE MODE | 1 | In Service mode |
| ISOLATED | 2 | Unit isolated – not connected to output bus-bar |
| ON STANDBY | 3 | Unit ready and load not supplied |
| AUTO-TEST | 4 | Internal auto-test running |
| OPERATING | 5 | Unit is supplying the load |
| AVAILABLE | 6 | Unit is ready to supply the load – default value |

- Alarm

| MULTI-STATE | Values | Description |
|------------------|--------|--|
| NO ALARM | 1 | No alarm present |
| CRITICAL ALARM | 2 | One of the critical alarms of the Rectifier, Inverter or bypass is present |
| PREVENTIVE ALARM | 3 | One of the preventive alarms of the Rectifier, Inverter or bypass is present |
| GENERAL ALARM | 4 | One or more alarms are present, and not listed as critical or preventive alarm |

- BatteryStatus

| MULTI-STATE | Values | Description |
|--------------------|--------|--|
| NO BATTERY | 1 | Battery no present – Converter mode |
| DISCONNECTED | 2 | Battery disconnected |
| DISCHARGED | 3 | Battery discharged |
| LOW | 4 | End of back-up Time |
| DISCHARGING | 5 | Operating on battery |
| DISCHARG. TO INPUT | 6 | Battery discharge to Input (BCR optional function) |
| ALARM | 7 | Battery alarm |
| TESTING | 8 | Battery test in progress |
| CHARGING | 9 | Battery charging |
| OK | 10 | Default value |

- RectifierStatus

| MULTI-STATE | Values | Description |
|-------------|--------|---------------|
| OFF | 1 | Rectifier OFF |
| ON | 2 | Rectifier ON |

- InverterStatus

| MULTI-STATE | Values | Description |
|-------------|--------|--------------|
| OFF | 1 | Inverter OFF |
| ON | 2 | Inverter ON |

- InputRecStatus

| MULTI-STATE | Values | Description |
|-------------|--------|---|
| GEN SET | 1 | Gen set ON – External input coming from ADC card |
| NOT PRESENT | 2 | Rectifier Input Supply absence – input breaker open |
| OUT OF TOL | 3 | Rectifier Input Supply out of tolerance |
| OK | 4 | Rectifier Input Supply present |

- InputBypStatus

| MULTI-STATE | Values | Description |
|-------------|--------|--|
| NOT PRESENT | 1 | Bypass Input Supply absence – input breaker open |
| OUT OF TOL | 2 | Bypass Input Supply out of tolerance |
| SYNCHRO INV | 3 | Bypass source synchronized with inverter source |
| OK | 4 | Bypass Input Supply present |

- Bit-string object
 - UPSStatus

| BIT-STRING | bits | Description – set for parallel UPS system only | For single unit UPS |
|------------------|------|---|---------------------|
| ENERGY SAVER ON | b00 | UPS in energy saver mode | Copy of unit data |
| UNIT 1 OPERATING | b01 | Set if the related unit is operating and supplying the load | |
| UNIT 2 OPERATING | b02 | | |
| UNIT 3 OPERATING | b03 | | |
| UNIT 4 OPERATING | b04 | | |
| UNIT 5 OPERATING | b05 | | |
| UNIT 6 OPERATING | b06 | | |
| UNIT 7 OPERATING | b07 | | |
| UNIT 8 OPERATING | b08 | | |

- UPSAlarms

| BIT-STRING | bits | Description – set for parallel UPS system only | For single unit UPS |
|-------------------|------|---|---------------------|
| UPS IMMINENT STOP | b00 | UPS in Imminent Stop – load off in a few minutes | Copy of unit data |
| UPS OVERLOAD | b01 | Overload alarm – UPS has detected a load over 103 % | |
| BYPASS LOCKED | b02 | Transfer locked after number of auto bypass or by control | |
| BYPASS IMPOSSIBLE | b03 | Inverter/bypass sources not synchronized | |
| INSUFF. RESOURCES | b04 | Insufficient resources | |
| REDUNDANCY LOST | b05 | Redundancy lost | |
| PARALLEL FAULT | b06 | Parallel board alarm | |
| UPS GENERAL ALARM | b07 | | |
| UNIT 1 ALARM | b08 | | |
| UNIT 2 ALARM | b09 | | |
| UNIT 3 ALARM | b10 | | |
| UNIT 4 ALARM | b11 | | |
| UNIT 5 ALARM | b12 | | |
| UNIT 6 ALARM | b13 | | |
| UNIT 7 ALARM | b14 | | |
| UNIT 8 ALARM | b15 | | |

- UnitAlarms

| BIT-STRING | bits | Description |
|--------------------|------|---|
| IMMINENT STOP | b00 | Unit in Imminent Stop |
| OVERLOAD | b01 | Unit Overload alarm |
| TEMPERATURE | b02 | Unit over temperature alarm |
| BYPASS LOCKED | b03 | Transfer locked after number of auto bypass or by control |
| BYPASS IMPOSSIBLE | b04 | Inverter/bypass sources not synchronized |
| MAINTENANCE AL. | b05 | Maintenance Alarm |
| UNIT GENERAL ALARM | b06 | Unit General Alarm |
| BAT. DISCONNECTED | b07 | Battery disconnected |
| BAT. DISCHARGED | b08 | Battery discharged |
| BATTERY LOW | b09 | Battery low or end of Back-up time |
| ON BATTERY | b10 | Unit operating on Battery |
| BAT. TEMPERATURE | b11 | Battery Temperature Alarm* |
| BATTERY ROOM | b12 | Battery Room Alarm* |
| BAT. TEST FAILED | b13 | Battery Test failed |
| BATTERY ALARM | b14 | Battery Alarm |
| CHARGER ALARM | b15 | Charger Alarm |
| REC. CRITICAL | b16 | Rectifier Critical Alarm |
| REC. PREVENTIVE | b17 | Rectifier Preventive Alarm |
| GEN SET ALARM | b18 | Gen Set Alarm* |
| INV. CRITICAL | b19 | Inverter Critical Alarm |
| INV. PREVENTIVE | b20 | Inverter Preventive Alarm |
| BYP. CRITICAL | b21 | Bypass Critical Alarm |
| BYP. PREVENTIVE | b22 | Bypass Preventive Alarm |
| FAN FAILURE | b23 | FAN Failure |
| MAINTENANCE BYPASS | b24 | Maintenance Bypass Alarm |
| UPS POWER OFF | b25 | UPS Power OFF* |
| INTERNAL FAILURE | b26 | Internal / Communication failure |
| External Input 1 | b27 | Programmable alarm** |
| External Input 2 | b28 | Programmable alarm** |
| External Input 3 | b29 | Programmable alarm** |
| External Input 4 | b30 | Programmable alarm** |

(*) Information from optional external devices

(**) This function is not available for all UPS ranges.

APPENDIX: CONFIGURING NET VISION VIA SSH OR USB

SSH must be enabled in the NET VISION Control page.
Using SSH tool to open a terminal session:

login as: admin
admin@192.168.1.1's password:

Date 03/05/2017
Time 16:41:53

```
+=====+
|                                     |
|               Configuration Utility |
|           [Socomec Net Vision 8.XX] |
+=====+
```

1. SNMP/WEB Card Settings
2. Reset Accounts/Passwords to Default
3. Reset Configuration to Default
4. Restart SNMP/WEB Card
0. Exit

Please Enter Your Choice =>

```
+=====+
|                                     |
|               Configuration Utility |
|               UPS Model:           |
|                                     |
+-----+
1. IP. Time and System Group
2. Network Control Group
3. Account Control Group
4. Email Group
5. SNMP Group
0. Back to Main Menu

Please Enter Your Choice => 1
```

```
+=====+
|                                     |
|               Configuration Utility |
|               [IP. Time and System Group] |
|                                     |
+-----+
SNMP/WEB Card Version :   Net Vision 8.XX
Ethernet Address   :      00:E0:D8:FF:C1:90
1. IPv4 Group
2. IPv6 Group
3. Date and Time Group
4. System Contact   :   Technical Support Team
5. System Name     :   Socomec
6. System Location  :
0. Return to previous menu

Please Enter Your Choice => 1
```

```
+=====+
|                                     |
|               IP. Time and System Group |
|               [IPv4 Group]             |
|                                     |
+-----+
1. IP Address   : 192.168.1.1
2. Gateway Address : 192.168.2.1
3. Network Subnet : 255.255.0.0
0. Return to previous menu

Please Enter Your Choice =>
```

Select the new IP address and go back to the main menu

All Network services can be configured via this interface.

At the end of all settings, select 0 to go back to the main menu to exit the session.


APPENDIX: NET VISION EXPLORER INSTALLATION

To get NET VISION Explorer, download it from the SOCOMEC website:

<https://socomec.co.uk/en-gb/net-vision-8-ups-websnmp-ethernet-card-iot-gateway>

Admin rights are necessary to install the NET VISION Explorer programme.

Run the NET VISION Explorer.exe file

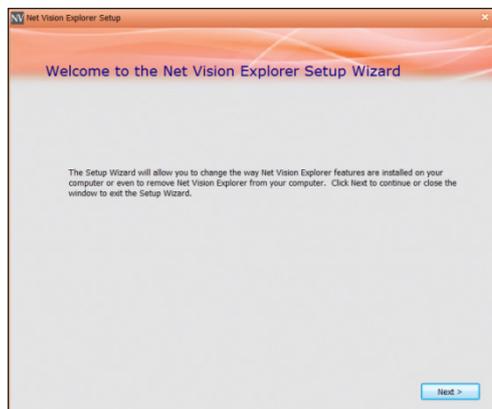

Follow the installation instructions.

The programme is installed by default to \Program Files\SOCOME



Running NET VISION Explorer




APPENDIX: GADGET SERIAL USB DRIVER INSTALLATION

First, download the installation package from the Socomec WEB site


1. Connect NET VISION to PC with mini USB cable.
2. PC will detect NET VISION as a USB device



3. Open device manager

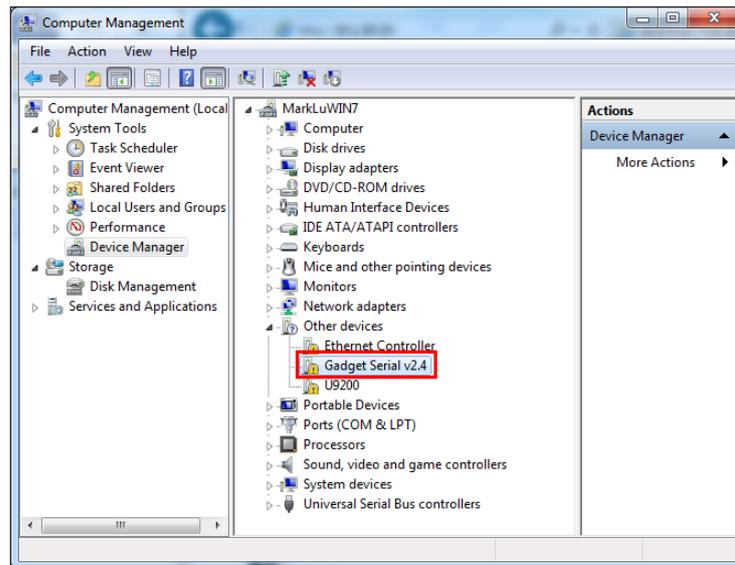

4. Double click on Gadget Device, select "Update Driver"
5. Select "Browse my computer for driver software" and select the driver stored on your computer.
6. Done

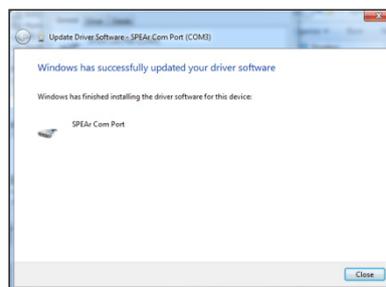

LED Definition

EMD and Network LEDs indicate the operating status of NET VISION as following:

| Port | Green LED | Yellow LED | Description |
|----------------|-------------------------|-------------------------|-------------------------------------|
| Network | ON | Flashing(1sec) | Ethernet 100/1000 Traffic |
| | OFF | Flashing(1sec) | Ethernet 10 Traffic |
| | ON | ON | 100 Base-TX Ready |
| | OFF | ON | 10 Base-T Ready |
| | OFF | OFF | Ethernet Disconnection |
| Status/ EMD | OFF | Flashing ~1 second | Device detection |
| | ON | OFF | Device detected, no com with device |
| | ON | Flashing | Communication with device |
| | Two LEDs cross Flashing | Two LEDs cross Flashing | Auto Diagnostic Mode |
| | ON | ON | Auto Diagnostic Failed |
| | OFF | OFF | Hardware Error |

Technical specification

| Function | Description |
|---------------------------|--|
| Power Input | NV with USB (Host) function voltage: +7.5V ~ 40V |
| Power Consumption | 3.0 Watts Maximum |
| SMT Switch | SMT switch on the board for configuration |
| Dimensions (L x W x H mm) | 129.9(L) x 60.0(W) mm |
| Operating Temperature | -20 ~ 70° C |
| Operating Humidity | 10 ~ 80 % (Non-condensing) |

BACK VIEW

The BOX need to be powered via external power supply included in the package, or already installed in your UPS.

The 12V connector is located to the back of the box.



The serial link to UPS is located on the back of the box. The serial cable included in the package has to be connected to 'COM' RJ45 connector and to the UPS RS232 DB9 serial port.

The UPS serial COM port used for NET VISION BOX has to be set as following:

- Baud rate: 9600
- No parity
- MODBUS Slave 1

USB: Not Used

FRONT CONNECTION



The Network RJ45 connector is used for Ethernet network connection.

The EMD RJ45 is used to connect the optional EMD device. Refer to EMD Appendix;

USB: the NET VISION log can be stored on a USB memory stick.


SETUP: only for factory test or NET VISION programming (refer to Appendix).

APPENDIX: EMD OPTION DESCRIPTION

The EMD (Environmental Monitoring Device) is a connectivity device that allows you to remotely monitor the temperature, humidity, and status of two contact devices. Its connection to the NET VISION enables the monitoring and alarms notification.

1/ EMD installation

Before connecting the EMD module: Set DIP switch 1 to the ON position on the back of the EMD device. It will be displayed as 'EMD 1'.

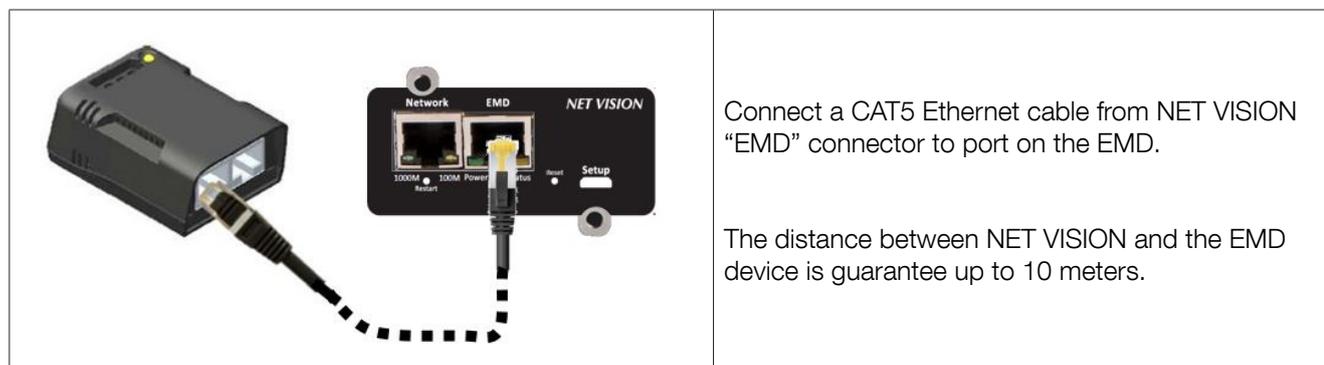

The EMD can be plugged while NET VISION is running.

2/ EMD configuration

Once the EMD is connected to NET VISION, a new item appears in UPS Management menu.

Refer to EMD Device page for settings.

3/ EMD monitoring

The EMD table is reported in the "EMD device" menu item

EMD History Log

The temperature and humidity coming from EMD device are report in the UPS History Log

| EMD Temperature (°C) | EMD Humidity (%) |
|----------------------|------------------|
| 22.0 | 35.2 |

NET VISION Events Log

The 2 input alarms are reported in the NET VISION Events Log:

| Event Time (dd/mm/yyyy hh:mm:ss) ▼ | Event Level ▼ | Event Description |
|------------------------------------|---------------|------------------------|
| Date time | Critical | EMD Alarm-1 activated |
| Date time | Information | EMD Alarm-1 not active |
| Date time | Critical | EMD Alarm-2 activated |
| Date time | Information | EMD Alarm-2 not active |

4/ EMD Notifications

Temperature and Humidity thresholds low, high can be set for email and SNMP TRAP triggering.

Those events have to be selected in the event list

As Information:

- "EMD Sensor Not under low temperature"
- "EMD Sensor Not under low humidity"
- "EMD Input1 is restored"
- "EMD Sensor Not over high temperature"
- "EMD Sensor Not over high humidity"
- "EMD Input2 is restored"

As Critical

- "EMD Sensor detected low temperature"
- "EMD Sensor detected low humidity"
- "EMD Input1 is active"
- "EMD Sensor detected high temperature"
- "EMD Sensor detected high humidity"
- "EMD Input2 is active"

5/ Shutdown events

Additional EMD events are adding in the Shutdown event table for Server shutdown or warning function:

| Shutdown Event | Shutdown Actions | Warning Period (Min) | 1st Warning (Sec) | Warning Interval(Sec) |
|-----------------|-------------------|----------------------|----------------------|-----------------------|
| EMD Temperature | Disabled ▼ | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| EMD Humidity | Disabled ▼ | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| EMD Alarm-1 | Warning ▼ | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| EMD Alarm-2 | Client Shutdown ▼ | <input type="text"/> | <input type="text"/> | <input type="text"/> |

1/ Serial Communication debug page

This page can be called in case of trouble with UPS communication.

[IP]/upsdebug.html

To start the communication debug it is necessary to be logged as admin.

The complete trace can be saved as CSV file on local computer.

Don't forget to disable the communication log before closing the page.

Sequence:

- enable the log, checking the Enable box;
- click on apply;
- wait for the log fill-up (at least 10 minutes or more);
- disable the logging unchecking the Enable box;
- click on apply;
- click on Export Table button;
- save the file.

2/ Email sending debug page

This page can be called in case of trouble sending email.

[IP]/mailDebug.html

Email error code list

| Code | Meaning | How to solve it / what to do |
|------|---|--|
| 001 | Cannot connect to mail server | Confirm SNMP card has ability to connect to internet. Check the mail server or DNS type correctly |
| 002 | Unknown error | |
| 101 | The server is unable to connect. | Try to change the server's name (maybe it was spell incorrectly) or the connection port. |
| 111 | Connection refused or inability to open an SMTP stream. | This error normally refers to a connection issue with the remote SMTP server, depending on firewalls or misspelled domains. Double-check all the configurations and in case ask your provider. |

For more info refer to smtp server error list: <http://www.serversmtp.com/en/smtp-error>


3. Gmail account configuration

Gmail accounts needs to enable TLS and authentication by NET VISION and make sure that the network is able to access to Internet.

Google new account policy (June, 2022):

Step 1: log on your Gmail account.

Step 2: In 'Security' item: switch '2-Step verification' to ON

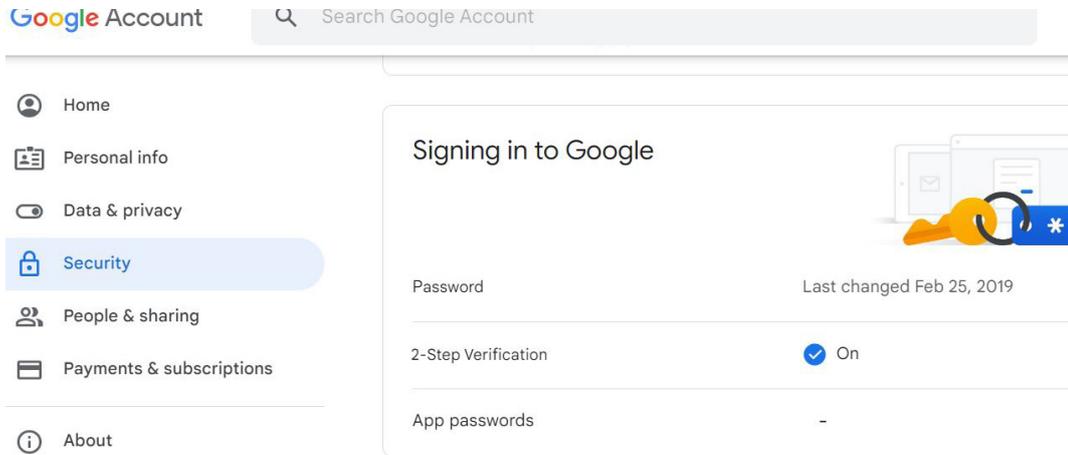

Step 3: In App password: Select 'Other' in Device list, enter 'NetVision' as device name and click on 'GENERATE'

Step 4: copy the password generated

Step 5: paste this password in 'User Password' of Net Vision SMTP account settings page.

Step 6: Fill other SMTP settings for Gmail account and apply.

Net Vision is now able sending email to your Gmail account.

| | |
|-------------------------------------|---|
| Mail Server | smtp.gmail.com |
| User Account | ----- |
| User Password | ●●● report here the psw generate in Gmail account |
| Sender Email Address | -----@gmail.com |
| Mail Subject Prefix | UPS Notification |
| DNS Address | 8.8.8.8 |
| Mail Daily Status Report At (hh:mm) | 00:00 |
| Mail support TLS | Enabled ▾ |
| Mail support Authentication | Enabled ▾ |
| Delay before sending (minute) | 0 |

Socomec: our innovations supporting your energy performance

1 independent manufacturer

3,600 employees
worldwide

10 % of sales revenue
dedicated to R&D

400 experts
dedicated to service provision

Your power management expert



POWER
SWITCHING



POWER
MONITORING



POWER
CONVERSION



ENERGY
STORAGE



EXPERT
SERVICES

The specialist for critical applications

- Control, command of LV facilities
- Safety of persons and assets
- Measurement of electrical parameters
- Energy management
- Energy quality
- Energy availability
- Energy storage
- Prevention and repairs
- Measurement and analysis
- Optimisation
- Consultancy, commissioning and training

A worldwide presence

12 production sites

- France (x3)
- Italy (x2)
- Tunisia
- India
- China (x2)
- USA (x3)

28 subsidiaries and commercial locations

- Algeria • Australia • Belgium • China • Canada
- Dubai (United Arab Emirates) • France • Germany
- India • Indonesia • Italy • Ivory Coast • Netherlands
- Poland • Portugal • Romania • Serbia • Singapore
- Slovenia • South Africa • Spain • Switzerland
- Thailand • Tunisia • Turkey • UK • USA

80 countries

where our brand is distributed

HEAD OFFICE

SOCOME C GROUP

SAS SOCOME C capital 10 607 040 €
R.C.S. Strasbourg B 548 500 149
B.P. 60010 - 1, rue de Westhouse
F-67235 Benfeld Cedex
Tel. +33 3 88 57 41 41 - Fax +33 3 88 57 78 78
info.scp.isd@socomec.com

www.socomec.com



UK OFFICE

SOCOME C U.K. Limited

Power Conversion (UPS)
7-9 Lakeside Business Park,
Broadway Lane, South Cerney,
Gloucestershire, GL7 5XL
Tel. +44 (0) 333 015 3002
info.uk@socomec.com

UK
CA

YOUR DISTRIBUTOR / PARTNER

100 years
OF SHARED ENERGY

socomec
Innovative Power Solutions